



Yocto Project*-based Board Support Package for Intel Atom® x6000E Series, and Intel® Pentium® and Celeron® N and J Series Processors (Code Name: Elkhart Lake)

Get Started Guide

MR1 Release

August 2021



You may not use or facilitate the use of this document in connection with any infringement or other legal analysis concerning Intel products described herein. You agree to grant Intel a non-exclusive, royalty-free license to any patent claim thereafter drafted which includes subject matter disclosed herein.

No license (express or implied, by estoppel or otherwise) to any intellectual property rights is granted by this document.

All information provided here is subject to change without notice. Contact your Intel representative to obtain the latest Intel product specifications and roadmaps.

The products described may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Copies of documents which have an order number and are referenced in this document may be obtained by calling 1-800-548-4725 or visit www.intel.com/design/literature.htm.

Intel technologies' features and benefits depend on system configuration and may require enabled hardware, software or service activation. Performance varies depending on system configuration. No product or component can be absolutely secure. Check with your system manufacturer or retailer or learn more at intel.com.

© Intel Corporation. Intel, the Intel logo, and other Intel marks are trademarks of Intel Corporation or its subsidiaries. Other names and brands may be claimed as the property of others.

Contents

1.0	Introduction	6
1.1	Terminology.....	6
1.2	Intended Audience.....	7
1.3	Customer Support.....	7
1.4	Reference Documents	8
2.0	Prepare and Set up the Host System	9
2.1	Setting up the Host System for the First Time	9
2.1.1	Prerequisite for the Host System.....	9
2.1.2	Host System Preparation and Installation	9
2.2	Install Additional Dependencies.....	9
2.2.1	Install the Required Toolchain.....	9
2.2.2	Install the Required GCC Version	10
3.0	Getting Started with the BSP	11
3.1	Obtain Repository Sources and Prepare to Build Image	11
3.2	Adding Optional Components.....	12
3.2.1	Integrate Software Tools or Packages.....	12
3.2.2	Integrate Proprietary Components.....	13
3.2.3	Integrate Workarounds or Patches.....	15
3.3	Build the Yocto Project*-based Image	16
3.3.1	Subsequent Build of Image	18
3.4	Prepare a Bootable Image with the USB Flash Drive	18
3.5	Boot up Elkhart Lake CRB with USB Flash Drive.....	19
3.6	Boot with PREEMPT_RT Kernel.....	20
3.7	Install the Yocto Project*-Based Image into the Elkhart Lake CRB Local Drive.....	20
3.7.1	First Time Image Installation into the CRB's Local Drive.....	20
3.7.2	Subsequent Image Installation into the CRB's Local Drive	21
3.8	Next Steps for Intel® TCC Tools	22
4.0	Appendix.....	23
4.1	Further References	23
4.2	I2S* Audio Settings and Configuration	23
4.2.1	BIOS Settings.....	24
4.2.2	Integrate Firmware and Topology.....	24
4.3	Kernel Configuration for Intel® Converged Security Engine (Intel® CSE)	24
4.4	GPIO control via sysfs interface	25



Figures

Figure 1.	Boot Menu	20
------------------	------------------------	----

Tables

Table 1.	Terminology	6
Table 2.	Reference Documents	8

Revision History

Date	Revision	Description
August 2021	2.0	MR1 Release.
June 2021	1.2	<ul style="list-style-type: none"> • Updated Intel® TCC Tools link in Section 3.9. • Updated <i>Intel Atom® x6000E Series Processors Real-Time Tuning Guide</i> document ID in Section 1.4.
March 2021	1.1	Updated document title. Refer to Document #616424, Section 2.1 for supported silicon.
March 2021	1.0	PV Release and added a Note on workaround for Intel® TCC Mode issue in Section 3.5 .
February 2021	0.9	Pre-production QS Release.

1.0 Introduction

This document provides instructions on how to build the Yocto Project*-based board support package (BSP) for the Elkhart Lake customer reference board (CRB). This requires preparing and setting up a host system, steps in selecting the components and building a Yocto Project*-based image, as well as preparing the bootable image with the USB flash drive to install to the CRB

You are recommended to review the release information before proceeding with this *Get Started Guide*. For release information, notes and reference, refer to the *Yocto Project*-based Board Support Package for Intel Atom® x6000E Series, and Intel® Pentium® and Celeron® N and J Series Processors (Code Name: Elkhart Lake) Release Note* ([Document # 616424](#)).

Note: The Yocto Project*-based build system version and the corresponding open source software components suggested for use with the BSP are only for reference purposes. If you decide to use Yocto Project*, it is your responsibility to integrate the latest functional and/or security updates when they are available from the open source community.

1.1 Terminology

Table 1. Terminology

Term	Description
API	Application Programming Interface
ATT	Attribute Protocol
BSP	Board Support Package
CAN	Controller Area Network
CRB	Customer Reference Board
DMA	Direct Memory Access
eMMC	Embedded Multi-Media Card
GbE	Gigabit Ethernet
GCC	GNU Compiler Collection
HDCP	High-bandwidth Digital Content Protection
HECI	Host Embedded Controller Interface
IBECC	In-Band Error Checking and Correction
IFWI	Integrated Firmware Image

Term	Description
Intel® CSE	Intel® Converged Security Engine
Intel® PSE	Intel® Programmable Services Engine
Intel® TCC	Intel® Time Coordinated Computing
LTS	Long-Term Support
PXE	Pre-Boot eXecution Environment
RPMB	Replay Protected Memory Blob
SCSI	Small Computer System Interface
SOF	Sound Open Firmware
TSN	Time-Sensitive Networking
USB	Universal Serial Bus

1.2 Intended Audience

This document is for users of the Yocto Project*-based BSP for the Intel Atom® x6000E series, and Intel® Pentium® and Celeron® N and J Series processor CRBs.

1.3 Customer Support

Contact your Intel representative for support or submit an issue to <http://premiersupport.intel.com>.

1.4 Reference Documents

Table 2. Reference Documents

Document	Document Number/Location
Intel® Media SDK for the Embedded Linux* OS on the Elkhart Lake Platform	616493
Ethernet Time-Sensitive Networking for Elkhart Lake/Tiger Lake UP3 - Getting Started Guide	616446
Intel® PSE SDK Developer Guide	611877
Intel® PSE SDK API Guide	611876
Intel® Programmable Services Engine (Intel® PSE) SDK User Guide	611827
How to Video: Host System Build Environment Setup	608732
Intel® PSE SDK Get Started Guide	608527
Host System Build Environment Setup Guide	334828
Wireless Connectivity Product for Yocto Project User Guide	617199
ECMA-393 Network Proxy Technology Support Using Linux* User Space Library (Elkhart Lake)	613398
Intel Atom® x6000E Series Processors Real-Time Tuning Guide	640979
Programming Elkhart Lake MAC Addresses Using Capsule Update	620481
Intel® In-Band Manageability Framework x86 2.7.5.1	630741
Yocto Project*-based Board Support Package for Intel Atom® x6000E Series, and Intel® Pentium® and Celeron® N and J Series Processors (Code Name: Elkhart Lake) Release Note	616424
Generate Key for Secure Boot with the Yocto Project*-based Image and Bootloader/UEFI BIOS	633630
Pre-boot Execution Environment (PXE) Boot with Intel Atom® x6000E Series, and Intel® Pentium® and Celeron® N and J Series Processors (Code Name: Elkhart Lake) - Application Note	635874

Note: To download or search for a specific document, type the document number on the search bar in the Intel website.

2.0 Prepare and Set up the Host System

This chapter describes the steps to prepare and set up the host system to build the Yocto Project*-based image that will be used to boot up the Elkhart Lake board. The preparation and setup only need to be done for the first time.

2.1 Setting up the Host System for the First Time

2.1.1 Prerequisite for the Host System

The following list provides the minimum host system configuration to build the BSP for the Yocto Project*. For Elkhart Lake, this configuration supersedes the other prerequisite that may be listed in the *Host System Build Environment Setup Guide* ([Document #334828](#)).

- Intel® Core™ i7 processor (4 cores)
- Linux* OS of choice for the Yocto Project* build is Ubuntu* 16.04 LTS OS or higher (Refer to the [Yocto Project* Quick Start](#) for more information.)
- A minimum of 32 GB RAM and 500 GB disk space are recommended
- High-speed network connectivity
- USB flash drive 64 GB minimum (to prepare the bootable Yocto Project*-based image)

2.1.2 Host System Preparation and Installation

Follow the *Host System Build Environment Setup Guide* ([Document #334828](#)) and *How-to Video: Host System Build Environment Setup* ([Document #608732](#)) to prepare the host system to build the Yocto Project*-based image.

After that, proceed to the next section to install additional dependencies in the host system.

2.2 Install Additional Dependencies

Install the following dependencies for this project.

2.2.1 Install the Required Toolchain

1. Install the required toolchain if it is not available in your host machine:

```
$ sudo apt-get -y install socat gawk wget git-core diffstat
unzip texinfo build-essential chrpath libsdl1.2-dev xterm
libncurses5-dev patchutils curl libelf-dev elfutils
```

2. Download and install the git-lfs in the host machine:

```
$ curl -s
https://packagecloud.io/install/repositories/github/git-
lfs/script.deb.sh | sudo -E bash
$ sudo apt-get install git-lfs
```

2.2.2 Install the Required GCC Version

1. Check the current GCC version in your host machine:

```
$ gcc --version
$ g++ --version
# If your gcc version is not 7.3 or 8.2 and above, proceed to
the next steps
```

2. Install the required GCC version.

```
# Add ppa repository
$ sudo add-apt-repository ppa:ubuntu-toolchain-r/test

# If you are not able to add the ppa
$ sudo apt-get install --reinstall ca-certificates
$ sudo -E add-apt-repository ppa:ppaname/ppa

# Update and install gcc to take effect
$ sudo apt-get update
$ sudo apt-get install gcc-8 g++-8

# Alternatively update and configure gcc
$ sudo update-alternatives --install /usr/bin/gcc gcc
/usr/bin/gcc-8 60 --slave /usr/bin/g++ g++ /usr/bin/g++-8

# To select which GCC to use. Select with gcc8 or the latest
gcc you have installed as prompted
$ sudo update-alternatives --config gcc
```

§

3.0 Getting Started with the BSP

Note: Regularly check on available updates for the Ubuntu* build system that you set up from [Section 2.0](#). This is to make sure that all toolchains are up to date.

3.1 Obtain Repository Sources and Prepare to Build Image

This section describes the essential steps to obtain the BSP source and getting the system ready to build Yocto Project*-based image. This section is compulsory, and any missing step might cause the build to fail.

1. Create a bin/ directory in your home directory and include your path:

```
$ mkdir ~/bin
$ PATH=~/.bin:$PATH
```

2. Get the repo source and make it executable:

```
$ curl https://storage.googleapis.com/git-repo-downloads/repo
> ~/bin/repo
$ chmod a+x ~/bin/repo
```

3. Make a new directory:

```
$ mkdir <work_dir>
$ cd <work_dir>
```

4. Git clone the repo manifest. This manifest will help you to clone all required repositories to create the base BSP:

```
repo init -u https://github.com/intel/iotg-yocto-ese-
manifest.git -b refs/tags/release-73_ehl-mr1 -g all
```

5. Pull the repository meta-layers (-j8 for simultaneous downloads, increase/decrease per your needs):

```
$ repo sync -c -j8 --force-sync
```

6. Make a branch:

```
$ repo forall managed/* -c git branch -f BUILD HEAD
```

7. The Yocto Project*-based image supports both secure and non-secure booting options. In either case, security keys must be generated and integrated into the image; otherwise, the build may fail. Choose one of the following options to generate the keys:

Option 1 (Default):

Security keys will be generated randomly in this option and it is the default configuration. If randomly generated security keys are not affecting your application, no action is required in this step. You can proceed to the next step.

Option 2:

You need to generate your own security keys and place them in the 'cert' folder in the `<work_dir>/build` folder of the build. For steps on how to use a common command-line tool (OpenSSL*) to generate the keys required for the secure boot, including how to create the Keys and Certificates, place the created keys in the correct folder. Then install the keys into the UEFI BIOS. See *Generate Key for Secure Boot with the Yocto Project*-based Image and Slim Bootloader/UEFI BIOS*, ([ID# 633630](#)).

NOTE:

1. To use Slim Bootloader or secure boot with UEFI BIOS, you must choose Option 2. Make sure the same keys are used for the Yocto Project*-based image and Slim Bootloader/UEFI BIOS.

3.2 Adding Optional Components

This section describes the steps required to integrate Software Tools/Packages, Proprietary Components, and workarounds to the build. For more information about software tools or packages, refer to Section 4.1. For more information about proprietary components and workarounds, see *Yocto Project*-based Board Support Package for Intel Atom® x6000E Series, and Intel® Pentium® and Celeron® N and J Series Processors (Code Name: Elkhart Lake)* ([Document# 616124](#)).

Note: Since the components are optional, the build will not fail if you choose to skip this section. You can still add the components in the future and re-build the image.

3.2.1 Integrate Software Tools or Packages

1. This step integrates the `bmaptool` and/ or `devmem2` into the Yocto Project*-based image. The `bmap-tools` is needed if you need to install the image from one storage to another storage on the Elkhart Lake CRB (refer to [Section 3.7](#) for steps to install from one storage to another). `Devmem2` is needed if you need to test the IBEC feature. Otherwise, you may skip this step.

```
$ cd <work_dir>/build/conf
$ vi local.conf
```

```
#add the following lines
IMAGE_INSTALL_append = " bmap-tools"
IMAGE_INSTALL_append = " devmem2"
```

2. **[Required for TSN]** This step integrates the TSN Reference Software into the image. TSN Reference Software is needed if you want to explore the TSN technology in your application. Otherwise, you may skip this step. For more information about TSN, refer to Section 3.6 of the *Yocto Project*-based BSP Release Notes* ([Document #616424](#)).

```
$ vi <work_dir>/build/conf/multiconfig/x86-common.inc

# Add the following lines
IMAGE_INSTALL_append = " iotg-tsn-ref-sw"
```

3.2.2 Integrate Proprietary Components

This section provides the steps to integrate proprietary components into the Yocto Project*-based image. It is considered as an optional section as you may skip this section if none of the proprietary components is applicable to your interest. You may choose to integrate one or more components. For more information on the proprietary components, refer to the *Yocto Project*-based Board Support Package for Intel Atom® x6000E Series, and Intel® Pentium® and Celeron® N and J Series Processors (Code Name: Elkhart Lake) Release Note* ([Document # 616424](#)).

Two files from Section 2.2 of the Yocto Project-based BSP Release Note ([Document # 616424](#)) are relevant in this section:

- a. `yocto_project_mr1_release.zip` ([ID# 621477](#))
The zip file consists of recipes and binaries for wireless (`meta-intel-wireless.tar.gz`) and Network Proxy Application (`meta-libnetprox.tar.bz2`).
- b. `meta-ptcm.tar.gz` ([ID# 646606](#))
The tarball contains the Real-Time Configuration Manager that required for **Intel® TCC Tools**.

Follow the instructions below if you choose to integrate the propriety components.

1. Create a new folder (for example: `proprietary`) in the working directory and unzip the `yocto_project_mr1_release.zip` into the `proprietary` folder.

```
$mkdir <work_dir>/proprietary
$unzip yocto_project_mr1_release.zip
```

As a result of unzipping, multiple tarballs will be available in the `proprietary` folder. Untar the tarballs that you would like to integrate in the next steps. Replace `<file_name>` with the tarball file name.

Yocto Project*-based Board Support Package for Intel Atom® x6000E Series,
and Intel® Pentium® and Celeron® N and J Series Processors

```
$ tar -xvf <file_name>.tar.gz
OR
$ tar -xvf <file_name>.tar.bz2
```

2. Change the directory to the conf folder where local.conf and bblayers.conf are located.

```
$ cd <work_dir>/build/conf
```

3. Integrate components of the **Wi-Fi* and Bluetooth®** technology in the BSP

```
$ vi bblayers.conf

# Add the following lines
${TOPDIR}/../proprietary/meta-intel-wireless \
```

4. **[Required for Intel® TCC Tools]** To integrate the real-time configuration manager (RTCM) by updating the following files:

```
$ vi bblayers.conf
# Add the following lines
{TOPDIR}/../proprietary/meta-ptcm \

$ vi local.conf
# Add the following lines
IMAGE_INSTALL_append = " ptc"
PTCM_INSTALL = "1"
```

5. To integrate the **ECMA-393 network proxy** technology in the BSP:

- a. Edit bblayers.conf and local.conf.

```
$ vi bblayers.conf
# Add the following lines
$ {TOPDIR}/../proprietary/meta-libnetprox \
$ vi local.conf

# Add the following lines and change the path to where you
have placed the binaries.
IMAGE_INSTALL_append = " libnetprox"
```

- b. Update networkproxy.cfg ONLY if you need to change port. The config file is set for PSE GbE0 by default. If you need to use PSE GbE1, follow the path below:

```
$ vi <work_dir>/intel-embedded-system-enabling/meta-intel-
embedded-system-enabling/meta-intel-ese-bsp/recipes-
kernel/linux/linux-config/bsp/networkproxy.cfg

# change from "CONFIG_STMMAC_NETWORK_PROXY_PORT=0" to
"CONFIG_STMMAC_NETWORK_PROXY_PORT=1"
```

- c. Edit the lts 5.4 kernel configuration file for updating the network proxy configurations:

```
#vi #<work_dir>/intel-embedded-system-enabling/meta-intel-embedded-system-enabling/meta-intel-ese-bsp/recipes-kernel/linux/linux-intel-ese-lts-5.4_git.bb
```

Append this line at the end of the file:

```
SRC_URI_append = " file://bsp/networkproxy.scc"
```

- d. Clean the kernel.

```
bitbake -c cleansstate mc:x86:linux-intel-ese-lts-5.4
```

3.2.3 Integrate Workarounds or Patches

1. **[Workaround]** This step includes the workaround for the known issue in ASPM (Active State Power Management). Follow the steps if the feature is required in your application. Otherwise, you can skip.

ID#1508932757 - [EHL] ASPM should be enabled after Link Up.

Note: If Real-Time Performance is required, this workaround should not be applied.

```
$ vi <work_dir>/build/conf/multiconfig/x86-common.inc
```

```
# Add the following lines
```

```
APPEND_append = " pcie_aspm.policy=powersupersave"
```

```
#save and exit
```

If you have your own kernel patches that are relevant to your application, apply it in this step.

3.3 Build the Yocto Project*-based Image

This section explains the steps required to start the build process. There are a few options to build different types of images:

Option A: Image boots with LTS kernel by default. This is a validated image with LTS Kernel as the default boot kernel, GUI, secureboot, partition layout (as required for manageability support) and other third-party software/ tools.

Option B: Image boots with real-time kernel by default. This is a validated image with RT kernel as the default boot kernel.

Note: It is mandatory to choose Option B for Intel® TCC Tools.

Option C: Minimal image with LTS kernel as default boot kernel. This is a non-validated image that contains the same kernel driver as the image in Option A but with minimal user space software (for example, without GUI) for boot up. Wi-Fi drivers are provided by the default kernel and not from iwlwifi-backports.

Option D: Netboot image with PXE boot. This is a non-validated image to demonstrate the PXE boot feature in this release. This image is not recommended to be used for other features testing.

Follow the steps below to build the image:

Option A: Full image with LTS Kernel as Default Boot Image

1. Start the build process:

```
$ cd <work_dir>/build
$ . ../intel-embedded-system-enabling/oe-init-build-env .
```

Note: The dot at the end of the above command is part of the command.

2. Run the bitbake compilation command

```
$ bitbake mc:x86:core-image-sato-sdk
```

Location of Images: <work_dir>/build/tmp-x86-glibc/deploy/images/intel-core-7-64/

Required Files: core-image-sato-sdk-intel-corei7-64--<date>.wic and core-image-sato-sdk-intel-corei7-64--<date>.wic.bmap

Note: The bitbake mc:x86:core-sato-sdk command will generate an image that boots up with the LTS Kernel by default and the real-time (RT) Kernel as the second option to be selected on the boot menu (refer to [Section 3.6](#) for more details).

Option B: Full image with real-time (RT) kernel as the default boot image - Mandatory for Intel® TCC Tools

1. Start the build process:

```
$ cd <work_dir>/build
$ . ../intel-embedded-system-enabling/oe-init-build-env .
```

Note: The dot at the end of the above command is part of the command

2. Run the bitbake compilation command.

```
$ bitbake mc:x86-rt:core-image-sato-sdk
```

Location of Images: <work_dir>/build/tmp-x86-rt-glibc/deploy/images/intel-corei7-64/

Required Files: core-image-sato-sdk-intel-corei7-64--<date>.wic and core-image-sato-sdk-intel-corei7-64--<date>.wic.bmap

Note: The bitbake mc:x86-rt:core-sato-sdk command will generate an image that boots up with the real-time (RT) Kernel by default and the LTS Kernel as the second option.

Option C: Minimal image with LTS kernel as default boot image

1. Start the build process:

```
$ cd <work_dir>/build
$ . ../intel-embedded-system-enabling/oe-init-build-env .
```

Note: The dot at the end of the above command is part of the command

2. Run the bitbake compilation command

```
$ bitbake mc:x86-minimal:core-image-full-cmdline
```

Location of Images: <work_dir>/build/tmp-x86-minimal-glibc/deploy/images/intel-core-7-64/

Required Files: core-image-full-cmdline-intel-corei7-64--<date>.hddimg

Option D: Netboot image with PXE boot

1. Start the build process:

```
$ cd <work_dir>/build
$ . ../intel-embedded-system-enabling/oe-init-build-env .
```

Note: The dot at the end of the above command is part of the command

2. Run the bitbake compilation command

```
$ bitbake mc:x86-minimal-netboot:core-image-full-cmdline
```

Location of Images: <work_dir>/build/tmp-x86-minimal-netboot-glibc/deploy/images/intel-core-7-64/

Required File: core-image-full-cmdline-intel-corei7-64--<date>.rootfs.uefi-netboot.tar.bz2

Refer to the *PXE Boot Application Note* ([Document# 635874](#)) for more details.

3.3.1 Subsequent Build of Image

For subsequent rebuilding of the image, cleaning the kernel is recommended before executing bitbake compilation command.

For Option A:

bitbake -c cleansstate mc:x86:linux-intel-ese-lts-5.4 (To clean sstate of LTS kernel)

bitbake -c cleansstate mc:x86:linux-intel-ese-lts-rt-5.4 (To clean sstate of RT kernel)

For Option B:

bitbake -c cleansstate mc:x86-rt:linux-intel-ese-lts-5.4 (To clean sstate of LTS Kernel)

bitbake -c cleansstate mc:x86-rt:linux-intel-ese-lts-rt-5.4 (To clean sstate of RT kernel)

3.4 Prepare a Bootable Image with the USB Flash Drive

Intel recommends using “bmaptool” to prepare a bootable image if the USB flash drive is being used (minimum size of 64 GB is recommended).

1. Download the latest bmaptool release from <https://github.com/intel/bmap-tools/releases> into the Ubuntu* host system, where you build the Yocto Project-based image.

```
$ curl -Lo bmaptool https://github.com/01org/bmap-tools/releases/download/v3.4/bmaptool && chmod +x bmaptool
```

2. Ensure that Python* module six is installed on the system.

```
pip3 install six
```

3. Insert the USB flash drive and ensure all partitions of the target device (the USB flash drive in this case) are unmounted. Refer to [Section 4.1](#), Further References, on how to find the USB Device.

WARNING: You could wipe off your hard drive if the wrong device is chosen.

4. Run the following command (assume the USB flash drive is using /dev/sdc) to generate a bootable USB flash drive:

```
$ sudo ./bmaptool copy --bmap <path>/core-image-sato-xxx-  
<date>.wic.bmap <path>/core-image-sato-<date>.wic /dev/sdc
```

5. This step is required only if you want to have UEFI Secure Boot. Copy all of the files below, which you have generated earlier by following "Generate Key for Secure Boot with the Yocto Project*-based Image and Bootloader/UEFI BIOS," (ID #633630) into the USB flash drive:

- DB.cer, KEK.cer and PK.cer.

NOTES:

1. If you are copying to a different USB flash drive, make sure the USB flash drive is in an FAT32 format.
2. If you are copying into the USB flash drive that is the same as the bootable version, copy it to the same level of /BOOT/EFI/bootx64.efi dir.

3.5 Boot up Elkhart Lake CRB with USB Flash Drive

This section provides the steps to boot up the CRB with a bootable USB Flash Drive prepared in the previous section. For more information on CRB, refer to the *Elkhart Lake CRB User Guide* ([Document #615859](#)).

1. Insert a USB flash drive into the Elkhart Lake CRB and ensure the IFWI has been installed.
2. Boot up the Elkhart Lake CRB by pressing the power button. Press F2 if you need to enter the BIOS menu for configuration or to select the boot option.
3. **[Optional]** At the GRUB boot menu, press the key "e" on the keyboard. Append "i915.force_probe=*" to the end of the kernel boot parameters and press Ctrl + x to continue the booting process. This step will enable the multi-display function.
4. The Secure Boot feature is disabled by default in the UEFI BIOS. If you would like to use the UEFI Secure Boot feature, you will need to insert the security key that was generated in the previous section through the UEFI BIOS.

For steps on how to install the keys into the UEFI BIOS menu, see "Generate Key for Secure Boot with the Yocto Project*-based Image and Bootloader/UEFI BIOS" ([ID #633630](#)).

5. Once the UEFI BIOS has passed, the log in screen will be shown. Type "root" to log in and no password is required by default.

NOTES:


1. "Install" option is no longer applicable in this image. Make sure the bmaptool is integrated in the image as guided in [Section 3.2.1](#). Refer to [Section 3.7](#) to install the image into the Elkhart Lake CRB local drive.
2. eMMC storage on the Elkhart Lake CRB is limited. Only the minimal image (refer to [Section 3.3](#)) is small enough to install in the eMMC.

3.6 Boot with PREEMPT_RT Kernel

If you build the Yocto Project*-based with Option A, by default, the system will be booted with the LTS kernel if no selection has been made on the boot menu. If you wish to boot with the RT kernel by default, refer to [Section 3.3](#) for more information.

To choose the RT kernel, select "boot linux-intel-ese-lts-rt-5.4-kernel" from the boot menu as shown in the figure below.

Figure 1. Boot Menu

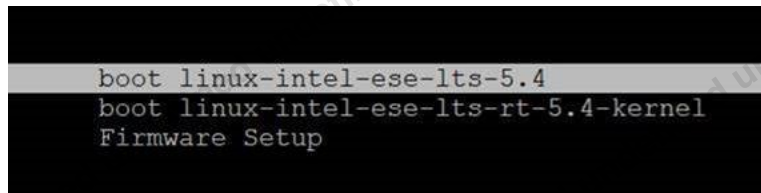

Disclaimer: Yocto Project Board Support Package (BSP) kernel recipe resides in the recipes-kernel folder and integrates Preempt_RT Linux kernel from the source downloaded from https://github.com/intel/linux-intel-lts/tree/5.4/preempt_rt.

Note that the Preempt_RT Linux kernel is based on the same version of Real-Time Linux Project without RT specific changes made by Intel. However, the kernel is built with different configurations (settings) to further reduce latency.

3.7 Install the Yocto Project*-Based Image into the Elkhart Lake CRB Local Drive

This section describes the steps to install the Yocto Project*-based image from one storage to another storage (for example, from the USB Drive to the NVMe Storage). You may skip this section if you do not plan to install the image to another storage device. eMMC storage on the Elkhart Lake CRB is limited. Only the minimal image (refer to [Section 3.3](#)) is small enough to install in the eMMC.

3.7.1 First Time Image Installation into the CRB's Local Drive

1. On the host system, compress the image file for faster copying

```
bzip2 -k core-image-sato-xxx-<date>.wic
```
2. Find a partition on the USB drive that is big enough for the compressed image file. For example, for the partition named `/data`, one method of viewing partitions is to use `gparted`.

```
sudo gparted
```

3. On the host system, create the mount point.

```
sudo mkdir /mnt/usb
```
4. Mount the USB drive. Replace “sd<letter><number>” with the partition you identified in step 2.

```
sudo mount /dev/sd<letter><number> /mnt/usb
```
5. Copy the compressed image file in Step 1 and core-image-sato-xxx-<date>.wic.bmap file onto USB drive.

```
sudo cp <compressed_image_file> /mnt/usb  
sudo cp core-image-sato-sdk-intel-corei7-64-  
<datetime>.wic.bmap /mnt/usb
```
6. After copying, unmount the USB drive.

```
sudo umount /mnt/usb
```
7. Insert the USB drive in the CRB.
8. Boot up the CRB by following the steps in [Section 3.5](#).
9. Go to the USB drive partition where you copied the compressed image file and bmap (for example, /data).
10. Flash the image to the target's local drive using bmaptool the same way as you flashed the image. Replace <target_drive> as appropriate.

```
/bmaptool copy --bmap <path>/core-image-sato-xxx-  
<date>.wic.bmap <path>/core-image-sato-<date>.wic.bz2  
/dev/<target_drive>
```
11. After successfully flashing, shutdown the CRB and remove the USB drive. Start the CRB again. It will be booted from the target's local drive.

3.7.2 Subsequent Image Installation into the CRB's Local Drive

Note: Once an image is installed on the local drive, the target system will boot from that drive even when you specify boot from USB. This is an expected behavior as the boot media selection in BIOS menu is meant for different OS selection (for example, Yocto Project*-based image in the local drive and Windows* in USB drive).

To make sure the CRB is not booted from the local drive but from USB drive, the boot partition of the local drive needs to be removed. Then, a new installation can be done when the CRB boots up from the USB drive.

1. Boot the target system from the local drive.

2. Run the following command to remove the boot partition from the drive. Replace <target_drive> as appropriate (for example, mmcblk0).

```
dd if=/dev/zero of=/dev/<target_drive> bs=512 count=1
```

3. Reboot the target system.
4. After completing these steps, the target system will no longer find the boot partition on the local drive and will boot from the USB.
5. Follow [Section 3.7.1](#) for the new installation.

3.8 Next Steps for Intel® TCC Tools

For Intel® TCC Tools, continue with the “Intel® TCC Tools Get Started Guide & Installation Instructions” for the specific version that can be downloaded from the link:

<https://software.intel.com/content/www/us/en/develop/tools/time-coordinated-computing-tools.html>

§

4.0 Appendix

4.1 Further References

Below are some useful links for further understanding on some terms or Linux* commands that are used in this document:

1. <https://man7.org/linux/man-pages/index.html>
This link provides online Linux* man-pages, which you can search for Linux* command and learn its usage. For example, this includes curl, mkdir, cp, mount, and so on.
2. https://tldp.org/LDP/intro-linux/html/sect_03_01.html
This link provides a general overview of the Linux* file system, in which some of them are used in this document (for example, /dev, /mnt).
3. <https://github.com/intel/bmap-tools>
This link provides the source code and usage information on the bmap-tools used in this document.
4. <https://www.atlassian.com/git/tutorials/git-lfs>
This link provides a basic understanding on the usage of Git LFS.
5. <https://www.yoctoproject.org/docs/1.6/bitbake-user-manual/bitbake-user-manual.html>
This link provides the BitBake User Manual for Yocto Project*.
6. <https://www.tecmint.com/find-usb-device-name-in-linux/>
This link provides some tips on how to find USB device name in Linux*.
7. <https://www.kernel.org/doc/Documentation/gpio/sysfs.txt>
This link provides information about GPIO sysfs Interface for userspace.
8. <https://thesofproject.github.io/latest/index.html>
This link provides information about Sound Open Firmware.

4.2 I2S* Audio Settings and Configuration

In Elkhart Lake, I2S* Audio via DSP is supported by using SOF (sound open firmware) firmware and topology files. For further information, refer <https://thesofproject.github.io/latest/index.html>.

Download and unzip the software package, [ID# 621477](#), to retrieve **audio_fw_<release_milestone>.zip** for quick deployment and testing by following the steps below.

4.2.1 BIOS Settings

These are the required BIOS settings to enable audio for a different codec.

For On-Board I2S* Codec (ALC 5660):

INTEL ADVANCED MENU → PCH-IO CONFIGURATION → HD AUDIO CONFIGURATION → HD AUDIO → AUDIO LINK MODE → SSP (I2S)

4.2.2 Integrate Firmware and Topology

1. After booting up Elkhart Lake, unzip the audio_fw_<release_milestone>.zip file and copy sof-ehl.ri into the /lib/firmware/intel/sof/ folder.
2. Copy sof-ehl-rt5660.tplg into the /lib/firmware/intel/sof-tplg folder.

4.3 Kernel Configuration for Intel® Converged Security Engine (Intel® CSE)

Enable the following kernel configurations to allow the Intel® Converged Security Engine (Intel® CSE) to interact with the Yocto Project*-based OS.

CONFIG_INTEL_MEI=Y

Description: The Intel® Management Engine (Intel® ME) provides manageability, security, and media services for the system containing Intel® chipsets. If selected, /dev/mei0 misc device will be created.

CONFIG_INTEL_MEI_HDCP=Y

Description: Enables HDCP support in conjunction with Intel® HD Graphics.

CONFIG_PCI=Y

Description: This must be enabled. Intel CSE communication (HECI) is based on PCI*.

CONFIG_INTEL_MEI_ME=Y

Description: Intel® ME-enabled Intel® chipsets.

CONFIG_RPMB=Y

Description: This is required for RPMB support.

CONFIG_RPMB_INTF_DEV=Y

Description: RPMB is one of the partitions in the eMMC*/NVMe* flash storage. Enable this configuration to ensure the Elkhart Lake platform supports Trusty secure storage.

CONFIG_SCSI_DMA=Y

Description: This is required for DMA support.

CONFIG_SCSI_LOWLEVEL=Y

Description: SCSI low-level drivers.

4.4 GPIO control via sysfs interface

1. You can see the pins number and name from the following command:

```
$ cat /sys/kernel/debug/pinctrl/INTC1020\:00/pins
```

Example of the output:

```
registered pins: 315
pin 0 (CORE_VID_0) mode 1 0x44000700 0x00000018 0x00000100
[LOCKED full, ACPI]
pin 1 (CORE_VID_1) mode 1 0x44000700 0x00000019 0x00000100
[LOCKED full, ACPI]
pin 2 (VRALERTB) GPIO 0x82880102 0x0000001a 0x00000000 [LOCKED
tx, ACPI]
pin 3 (CPU_GP_2) GPIO 0x44000300 0x0000001b 0x00000100 [LOCKED
full, ACPI]
```

2. Check the GPIO Controller number

```
$ls /sys/class/gpio/
```

Example of the output:

```
Export gpiochip56 unexport
```

3. To control the GPIO pin, export it with a **number = A + B**; where
A = pin number that wanted to test from step 1, and
B = gpiochip controller number from step 2.

For example, to test pin 20.

number = 20 + 56 = 76

```
$echo 76 > /sys/class/gpio/export
```

4. Go to exported 76

```
$cd /sys/class/gpio/gpio76
```

- a) read current direction and value.

Example of the relevant commands:

```
$cat direction
```

```
$cat value
```

- b) change direction and value. Example of the relevant commands:

```
$echo out > direction
```

```
$echo in > direction
```

```
$echo 0 > value  
$echo 1 > value
```

5. It is recommended to unexport the GPIO pin when you no longer need to use the pin.

```
$ $echo 76 > /sys/class/gpio/unexport
```

§