

Intel[®] Server System R1000GZ/GL Product Family

Technical Product Specification



Revision 2.2

May 2014

Intel[®] Server Boards and Systems

Revision History

Date	Revision Number	Modifications
January 2012	1.0	1st Production Release
		Updated Features Table
		Updated Environmental Limits Table
		 Added ASHRAE support details
	1.1	 Updated thermal management sections
April 2012	1.1	 Updated sections for embedded SCU and RAID support
		 Added sections for product errata definition and FRUSDR usage
		 Updated add-in card length limits to riser card sections.
		Updated reference documents list
		Corrected LCP front Panel port definition
June 2012	1.2	Corrected LCP product code
Julie 2012	1.2	 Added advisory note to AXXVRAIL feature list
		Corrected IO Module product code definitions in Table 1
		 Front bezel badge option diagrams added to section 2.5
		 Rail Kit Caution and Advisory notes added to section 2.6
		 Added DC power supply specification content to chapter 3
January 2013	1.3	 Updated RSTe support sections in chapter 6
	1.5	 Removed sections in Chapter 8 – LCP support. Added reference to published LCP TPS
		 Corrected Appendix B - POST Code LED Decoder – (E0h – E3h)
		Added Appendix D. – System Configuration Table for Thermal Compatibility
February 2013	1.3.1	 Removed all DC Power Supply content and references
		 Added Intel[®] Xeon[®] processor E5-2600 v2 product family support.
August 2013	2.0	 Updated Table #1 System Feature Set
August 2015	2.0	 Updated Appendix D
		Updated system rail kit support
		 Added DC power supply specification content to chapter 3
February 2014	2.1	 Added sections detailing add-in card support
	2.1	 Added 2.5" SSD support content to 3.5" drive configurations
		Added volumetric air flow requirements table
		 Added DC 750W Gold for Power Supply Options to chapter 2
	4 2.2	 Added the Disclaimer Note for the System Environmental Limits Summary table
May 2014		Added the footnote for the Power/Sleep LED Functional States table
		 Added the Intel[®] Xeon[®] processor E5-2600 v2 product family support in Appendix A
		 Update Figure 7 – update the jumper location order

Disclaimers

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH INTEL PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN INTEL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, INTEL ASSUMES NO LIABILITY WHATSOEVER AND INTEL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF INTEL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

A "Mission Critical Application" is any application in which failure of the Intel Product could result, directly or indirectly, in personal injury or death. SHOULD YOU PURCHASE OR USE INTEL'S PRODUCTS FOR ANY SUCH MISSION CRITICAL APPLICATION, YOU SHALL INDEMNIFY AND HOLD INTEL AND ITS SUBSIDIARIES, SUBCONTRACTORS AND AFFILIATES, AND THE DIRECTORS, OFFICERS, AND EMPLOYEES OF EACH, HARMLESS AGAINST ALL CLAIMS COSTS, DAMAGES, AND EXPENSES AND REASONABLE ATTORNEYS' FEES ARISING OUT OF, DIRECTLY OR INDIRECTLY, ANY CLAIM OF PRODUCT LIABILITY, PERSONAL INJURY, OR DEATH ARISING IN ANY WAY OUT OF SUCH MISSION CRITICAL APPLICATION, WHETHER OR NOT INTEL OR ITS SUBCONTRACTOR WAS NEGLIGENT IN THE DESIGN, MANUFACTURE, OR WARNING OF THE INTEL PRODUCT OR ANY OF ITS PARTS.

Intel may make changes to specifications and product descriptions at any time, without notice. Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined". Intel reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them. The information here is subject to change without notice. Do not finalize a design with this information.

The products described in this document may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Contact your local Intel sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an order number and are referenced in this document, or other Intel literature, may be obtained by calling 1-800-548-4725, or go to: <u>http://www.intel.com/design/literature.htm</u>

Intel[®] Xeon[®] and Intel[®] Xeon Phi[™] are registered trademarks of Intel Corporation.

*Other brands and names may be claimed as the property of others.

Copyright © Intel Corporation 2012, 2013, 2014

Table of Contents

1.	Introduc	ction	1
1	.1	Chapter Outline	1
1	.2	Server Board Use Disclaimer	1
1	.3	Product Errata	2
2.	Product	Family Overview	3
2	.1	Chassis Dimensions	5
2	.2	System Level Environmental Limits	6
2	.3	System Features and Options Overview	7
	2.3.1	Hot Swap Hard Drive Bay and Front Panel Options	7
	2.3.2	Back Panel Features	8
	2.3.3	Front Control Panel Options	8
2	.4	Server Board Features Overview	9
2	.5	Available Front Bezel Support	11
2	.6	Available Rack and Cabinet Mounting Kit Options	12
3.	Power S	Subsystem	14
3	.1	Mechanical Overview	14
3	.2	Power Connectors	16
	3.2.1	Power Supply Module Card Edge Connector	16
	3.2.2	Riser Card Power Connectors	16
	3.2.3	Hot Swap Backplane Power Connector	17
	3.2.4	Optical Drive Power Connector	17
3	.3	Power Supply Module Efficiency	17
3	.4	Power Cord Specification Requirements	18
3	.5	Optional Chassis Grounding Support	19
3	.6	AC Input Specifications	19
	3.6.1	Power Factor	19
	3.6.2	AC Input Voltage Specification	19
	3.6.3	AC Line Isolation Requirements	20
	3.6.4	AC Line Dropout / Holdup	20
	3.6.5	AC Line Fuse	20
	3.6.6	AC Inrush	20
	3.6.7	AC Line Transient Specification	20
	3.6.8	Susceptibility Requirements	21
	3.6.9	Electrostatic Discharge Susceptibility	21
	3.6.10	Fast Transient/Burst	21
	3.6.11	Radiated Immunity	21
	3.6.12	Surge Immunity	21
	3.6.13	Power Recovery	21

3.6.14	Voltage Interruptions	22
3.6.15	Protection Circuits	22
3.6.16	Over-current Protection (OCP)	22
3.6.17	Over-voltage Protection (OVP)	22
3.6.18	Over-temperature Protection (OTP)	22
3.7	DC Power Supply Input Specifications	23
3.7.1	DC Input Voltage	23
3.7.2	DC Input Fuse	23
3.7.3	DC Inrush Current	23
3.7.4	DC Input Under Voltage	23
3.7.5	DC Holdup Time and Dropout	23
3.7.6	DC Line Surge Voltages (Line Transients)	24
3.7.7	Susceptibility Requirements	24
3.7.8	Protection Circuits	25
3.8	Cold Redundancy Support	26
3.8.1	Powering on Cold Standby supplies to maintain best efficiency	26
3.8.2	Powering on Cold Standby supplies during a fault or over current condition	26
3.8.3	BMC Requirements	27
3.8.4	Power Supply Turn On Function	27
3.9	Closed Loop System Throttling (CLST)	27
3.10	Smart Ride Through (SmaRT)	27
3.11	Power Supply Status LED	27
4. Therma	al Management	29
4.1	Thermal Operation and Configuration Requirements	29
4.2	Thermal Management Overview	30
4.2.1	Set Throttling Mode	30
4.2.2	Altitude	30
4.2.3	Set Fan Profile	31
4.2.4	Fan PWM Offset	31
4.2.5	Quiet Fan Idle Mode	
4.2.6	Thermal Sensor Input for Fan Speed Control	31
4.3	System Fans	32
4.4	Power Supply Fans	34
4.5	FRUSDR Utility	34
5. System	n Storage and Peripheral Options	35
5.1	2.5" Hard Disk Drive Support	35
5.1.1	2.5" Drive Hot-Swap Backplane Overview	36
5.1.2	Cypress* CY8C22545 Enclosure Management Controller	37
5.2	3.5" Hard Disk Drive Support	38
5.2.1	3.5" Drive Hot-Swap Backplane Overview	40
5.2.2	Cypress* CY8C22545 Enclosure Management Controller	41

5.3	Optical Drive Support41	
5.4	eUSB SSD Support43	
5.5	SATA DOM Support43	
6. Storage	Controller Options Overview44	
6.1	Embedded SATA / SAS Controller support44	
6.2	Embedded Software RAID Support45	
6.2.1	Intel [®] Embedded Server RAID Technology 2 (ESRT2) ¹ 45	
6.2.2	Intel [®] Rapid Storage Technology (RSTe) ¹ 45	
6.3	Intel [®] Integrated RAID Module Support (Available Option)46	
7. Front Co	ontrol Panel and I/O Panel Overview47	
7.1	I/O Panel Features	
7.2	Control Panel Features	
8. Intel [®] Lo	ocal Control Panel	
9. PCI Rise	er Card Support52	
9.1	Riser Slot Overview	
9.2	Riser Card Support54	
9.3	PCIe Add-in card support55	
9.3.1 product	PCIe Gen3 support – Systems configured with an Intel [®] Xeon [®] processor E5-2600 family	
9.3.2 2600 V2	PCIe Gen3 support – Systems configured with an Intel® Xeon® processor E5- product family	
10. Mezzani	ine I/O Module Support	
10.1	I/O Module Support	
10.2	Intel [®] Remote Management Module 4 (RMM4) Lite and Management NIC Support5	9
Appendix A	: Integration and Usage Tips61	
Appendix B	: POST Code Diagnostic LED Decoder62	
Appendix C	: POST Code Errors67	
Appendix D	: System Configuration Table for Thermal Compatibility	
Glossary		
Reference D	ocuments76	

List of Figures

Figure 1. Chassis Dimensions	5
Figure 2. System Components Overview	7
Figure 3. 3.5" Hard Drive Bay - 4 Drive Configuration	8
Figure 4. 2.5" Hard Drive Bay - 8 Drive Configuration	8
Figure 5. Back Panel Feature Identification	8
Figure 6. Front Control Panel Options	9
Figure 7. Intel [®] Server Board S2600GZ	10
Figure 8. Intel [®] Light-Guided Diagnostic LEDs - Server Board	11
Figure 9. Front Bezel accessory with optionally installed wave feature	11
Figure 10. Front Bezel accessory with optionally installed wave and ID badge (1)	11
Figure 11. Front Bezel accessory with optionally installed wave and ID badge (2)	11
Figure 12. Front Bezel accessory ID Badge mechanical drawings	12
Figure 13. Power Supply Module Mechanical Drawing	15
Figure 14. AC and DC Power Supply - Connector Views	15
Figure 15. Power Supply Module	15
Figure 16. AC Power Cord	18
Figure 17. DC Power Cord	18
Figure 18. Fan Control Model	
Figure 19. System Fan Identification	32
Figure 20. Server Board System Fan Connector Locations	33
Figure 21. 2.5" Hard Drive Bay Drive Configuration	35
Figure 22. 3.5" Hard Drive Bay Configuration	38
Figure 23. Option to install 2.5" SSD into a 3.5" drive blank	39
Figure 24. Optical Drive Support	41
Figure 25. Low Profile eUSB SSD Support	43
Figure 26. InnoDisk* Low Profile SATA DOM	43
Figure 27. AXXBBU09 and AXXRFMBU2 Installation	47
Figure 28. Front I/O Panel Features	47
Figure 29. Front Control Panel Features	48
Figure 30. Intel [®] Local Control Panel	51
Figure 31. Riser Slot Architecture	52
Figure 32. Intel® Server Board S2600GZ/GL PCI Bus Layout Diagram	53
Figure 33. Add-in Card Support	54
Figure 34. Riser Card Assembly	54
Figure 35. Intel® RMM4 Lite Activation Key Installation	60
Figure 36. Intel® RMM4 Dedicated Management NIC Installation	60
Figure 37. POST Diagnostic LED Location	62

List of Tables

Table 1. System Feature Set	4
Table 2. System Environmental Limits Summary	6
Table 3. Power Supply Module Output Power Connector Pin-out	16
Table 4. Riser Slot Power Pin-out ("OPT_12V_PWR_#")	17
Table 5. Hot Swap Backplane Power Connector Pin-out ("HSBP PWR")	17
Table 6. Peripheral Drive Power Connector Pin-out ("ODD/SSD PWR")	17
Table 7. 460 Watt AC Power Supply Efficiency	
Table 8. 750 Watt AC Power Supply Efficiency	17
Table 9. 750 Watt DC Power Supply Efficiency (Gold)	18
Table 10. AC Power Cord Specifications	18
Table 11. DC Power Cable Connector Pin-out	
Table 12. 460 Watt Power Supply Over Current Protection	22
Table 13. 750 Watt Power Supply Over Current Protection	
Table 14. Over Voltage Protection (OVP) Limits	22
Table 15. DC Input Rating	23
Table 16. Line Voltage Transient Limits	24
Table 17. Over Current Protection	25
Table 18. Over Voltagge Protection Limits	25
Table 19. Example Load Share Threshold for Activating Supplies	26
Table 20. LED Indicators	27
Table 20. LED Indicators Table 22. 1U System Volumetric Air Flow Requirements	
	32
Table 22. 1U System Volumetric Air Flow Requirements	32 34
Table 22. 1U System Volumetric Air Flow Requirements Table 23. System Fan Connector Pin-out	32 34 36
Table 22. 1U System Volumetric Air Flow RequirementsTable 23. System Fan Connector Pin-outTable 24. Drive Status LED States	32 34 36 36
Table 22. 1U System Volumetric Air Flow Requirements. Table 23. System Fan Connector Pin-out Table 24. Drive Status LED States Table 25. Drive Activity LED States Table 26. Intel® RAID C600 Upgrade Key Options. Table 27. Supported Intel [®] Integrated RAID Modules	32 34 36 36 44 46
Table 22. 1U System Volumetric Air Flow RequirementsTable 23. System Fan Connector Pin-outTable 24. Drive Status LED StatesTable 25. Drive Activity LED StatesTable 26. Intel® RAID C600 Upgrade Key Options	32 34 36 36 44 46
Table 22. 1U System Volumetric Air Flow Requirements. Table 23. System Fan Connector Pin-out Table 24. Drive Status LED States Table 25. Drive Activity LED States Table 26. Intel® RAID C600 Upgrade Key Options. Table 27. Supported Intel [®] Integrated RAID Modules	32 34 36 36 44 46 49
Table 22. 1U System Volumetric Air Flow RequirementsTable 23. System Fan Connector Pin-outTable 24. Drive Status LED StatesTable 25. Drive Activity LED StatesTable 26. Intel® RAID C600 Upgrade Key OptionsTable 27. Supported Intel [®] Integrated RAID ModulesTable 28. System Status LED State Definitions	32 34 36 36 44 46 49 50
Table 22. 1U System Volumetric Air Flow Requirements.Table 23. System Fan Connector Pin-outTable 24. Drive Status LED StatesTable 25. Drive Activity LED StatesTable 26. Intel® RAID C600 Upgrade Key Options.Table 27. Supported Intel [®] Integrated RAID ModulesTable 28. System Status LED State DefinitionsTable 29. Power/Sleep LED Functional States	32 34 36 46 49 50 56
 Table 22. 1U System Volumetric Air Flow Requirements	32 34 36 36 44 46 49 50 56 57
 Table 22. 1U System Volumetric Air Flow Requirements	32 34 36 44 46 49 50 57 60
 Table 22. 1U System Volumetric Air Flow Requirements	32 34 36 36 44 46 49 50 57 60 62
Table 22. 1U System Volumetric Air Flow Requirements	32 34 36 44 46 49 50 57 60 62 63
 Table 22. 1U System Volumetric Air Flow Requirements	32 34 36 36 44 46 49 50 57 60 62 63 65
Table 22. 1U System Volumetric Air Flow Requirements	32 34 36 44 46 49 50 57 60 63 65 66
Table 22. 1U System Volumetric Air Flow Requirements	32 34 36 36 44 46 49 50 57 60 62 63 65 66 67

< This page intentionally left blank. >

1. Introduction

This Technical Product Specification (TPS) provides system level information for the Intel[®] Server System R1000GZ and Intel[®] Server System R1000GL product families. The system level features of both these product families are common, however the server board integrated into them is different. The Intel[®] Server System R1000GZ product family is integrated with an Intel[®] Server Board S2600GZ and the Intel[®] Server System R1000GL product family is integrated with the Intel[®] Server Board S2600GL.

This document will describe the functions and features of the integrated server system which includes the chassis layout, system boards, power sub-system, cooling sub-system, storage sub-system options, and available installable options. Server board specific detail can be obtained by referencing the *Intel®* Server Board S2600GZ/S26000GLTechnical Product Specification.

In addition, design-level information related to specific server board components / subsystems can be obtained by ordering External Product Specifications (EPS) or External Design Specifications (EDS) related to this server generation. EPS and EDS documents are made available under NDA with Intel and must be ordered through your local Intel representative. See the Reference Documents section at the end of this document for a list of available documents.

1.1 Chapter Outline

This document is divided into the following chapters:

- Chapter 1 Introduction
- Chapter 2 Product Family Overview
- Chapter 3 Power Subsystem
- Chapter 4 Thermal Management
- Chapter 5 System Storage and Peripherals Drive Bay Overview
- Chapter 6 Storage Controller Options Overview
- Chapter 7 Front Control Panel and I/O Panel Overview
- Chapter 8 Intel[®] Local Control Panel
- Chapter 9 PCI Riser Card Support
- Chapter 10 Mezzanine Module Support
- Appendix A Integration and Usage Tips
- Appendix B POST Code Diagnostic LED Decoder
- Appendix C Post Code Errors
- Appendix D System Configuration Table for Thermal Compatibility
- Glossary
- Reference Documents

1.2 Server Board Use Disclaimer

Intel Corporation server boards support add-in peripherals and contain a number of high-density VLSI and power delivery components that need adequate airflow to cool. Intel[®] ensures through its own chassis development and testing that when Intel[®] server building blocks are used together, the fully integrated system will meet the intended thermal requirements of these components. It is the responsibility of the system integrator who chooses not to use Intel[®]-developed server building blocks to consult vendor datasheets and operating parameters to determine the amount of airflow required for their specific application and environmental conditions. Intel Corporation cannot be held responsible if components fail or the server board does not operate correctly when used outside any of their published operating or non-operating limits.


1.3 Product Errata

The products described in this document may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Product Errata are documented in the *Intel[®] Server* Board S2600GZGL, *Intel[®] Server System R1000GZGL, Intel[®] Server System R2000GZGL Monthly* Specification Update which can be downloaded from http://www.intel.com/support

2. Product Family Overview

This generation of Intel 1U server platforms offers a variety of system options to meet the varied configuration requirements of high-density high-performance computing environments. The Intel[®] Server System R1000GZ/GL product family includes several available 1U rack mount server systems that are integrated with either an Intel[®] Server Board S2600GZ or Intel[®] Server Board S2600GL.

This chapter provides a high-level overview of the system features and available options as supported in different platform SKUs within this server family. Greater detail for each major system component or feature is provided in the following chapters.

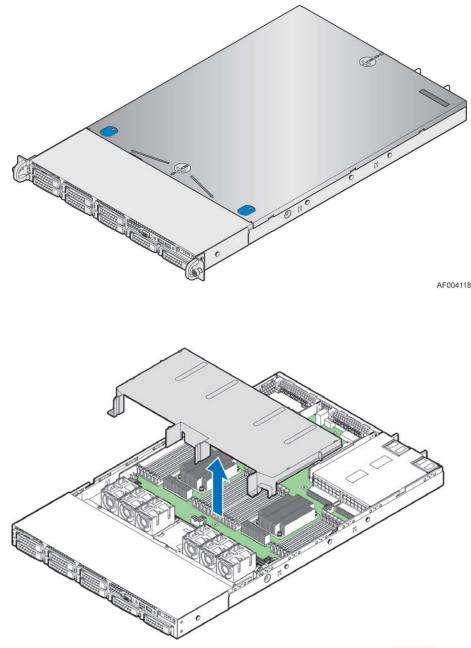

AF004123

Note: The following table lists features common to both server product families. Features that are unique to one product family will be identified by either denoting the server system name or the integrated server board name.

Table 1. System Feature Set

Server System	Integrated Server Board	
Intel [®] Server System R1000GZ product family	Intel [®] Server Board S2600GZ	
Intel [®] Server System R1000GL product family	Intel [®] Server Board S2600GL	

Feature	Description		
Processor Support	 Support for one or two processors: Intel[®] Xeon[®] processor E5-2600 product family with TDP support up to 135 W^{1,2} Intel[®] Xeon[®] processor E5-2600 v2 product family with TDP support up to 130 W S2600GL - 16 DIMM slots – 2 DIMMs / Channel – 4 memory channels per processor S2600GZ - 24 DIMM slots – 3 DIMMs / Channel – 4 memory channels per processor Unbuffered DDR3 (UDIMM), registered DDR3 (RDIMM), Load Reduced DDR3 (LRDIMM) Memory DDR3 data transfer rates of 800, 1066, 1333 MT/s,1600 and 1866³ MT/s DDR3 standard I/O voltage of 1.5V and DDR3 Low Voltage of 1.35V 		
Memory			
Chipset	Intel [®] C602 chipset with support for optional Intel [®] RAID C600 Upgrade Keys		
External I/O connections	 Video (back and front video connectors) RJ-45 Serial- A Port Four RJ-45 Network Interface Connectors supporting 10/100/1000Mb USB 2.0 connectors - 3 on back panel + 2 on front panel 		
Internal I/O connectors / headers	 One Type-A USB 2.0 connector One DH-10 Serial-B port connector 		
I/O Module Accessory Options	 One DH-10 Serial-B port connector The following I/O modules utilize a single proprietary on-board connector. An installed I/O module can be supported in addition to standard on-board features and any add-in expansion cards. AXX4P1GBPWLIOM – Quad port 1 GbE based on Intel® Ethernet Controller I350 AXX10GBTWLIOM – Dual RJ-45 port 10GBase-T I/O Module based on Intel® Ethernet Controller x540 AXX10GBNIAIOM – Dual SFP+ port 10GbE module based on Intel® 82599 10 GbE controller AXX1FDRIBIOM – Single Port FDR 56GT/S speed InfiniBand module with QSFP connector AXX2FDRIBIOM – Dual port FDR 56GT/S speed infiniband module with QSFP connector 		
System Fans • Six dual rotor managed system fans • One power supply fan for each installed power supply module			
Riser Cards	Support for two PCIe riser cards. Each riser card slot has support for the following riser card options: Single add-in card slot – PCIe x16, x16 mechanical		
Video	Integrated 2D Video Controller16 MB DDR3 Memory		
On-board storage controllers and options	 One eUSB 2x5 pin connector to support 2mm low-profile eUSB solid state devices Two 7-pin single port AHCI SATA connectors capable of supporting up to 6 GB/sec Two SCU 4-port mini-SAS connectors capable of supporting up to 3 GB/sec SAS/SATA SCU 0 Port (Enabled standard) SCU 1 Port (Requires Intel RAID C600 Upgrade Key) Intel[®] RAID C600 Upgrade Key support providing optional expanded SCU SATA / SAS RAID capabilities Intel[®] Integrated RAID module support (Optional) 		
Security	Intel [®] Trusted Platform Module (TPM) - AXXTPME5 (Accessory Option)		
Server Management	 Integrated Baseboard Management Controller, IPMI 2.0 compliant Support for Intel® Server Management Software Intel[®] Remote Management Module 4 Lite – Accessory Option Intel[®] Remote Management Module 4 Management NIC – Accessory Option 		

Intel[®] Server System R1000GZ/GL Product Family TPS

	The server system can have up to two power supply modules installed, providing support for the		
	following power configurations: 1+0, 1+1 Redundant Power, and 2+0 Combined Power		
Power Supply	 Three power supply options: 		
Options	 AC 460W Gold 		
	 AC 750W Platinum 		
	o DC 750W Gold		
	4x – 3.5" SATA/SAS Hot Swap Hard Drive Bays + Optical Drive support		
Storage Bay Options	 8x – 2.5" SATA/SAS Hot Swap Hard Drive Bays + Optical Drive support (capable) 		
	 AXXPRAIL – Tool-less rack mount rail kit – 800mm max travel length 		
Supported Rack	 AXXPRAIL755 – Tool-less rack mount rail kit – 755mm max travel length 		
Mount Kit Accessory	 AXXVRAIL – Value rack mount rail kit – 424mm max travel length 		
Options	 AXXELVRAIL – Enhanced value rack mount rail kit - 424mm max travel length 		
	 AXX1U2UCMA – Cable Management Arm – (*supported with AXXPRAIL only) 		
	AXX2POSTBRCKT – 2-post fixed mount bracket kit		


Notes:

1) With a system fan failure, processor throttling may occur

 Processor throttling may occur with systems configured using the following Intel[®] Xeon[®] E5-2600 product family processors: E5-2690, E5-2643

3) Intel® Xeon® processor E5-2600 v2 product family only

2.1 Chassis Dimensions

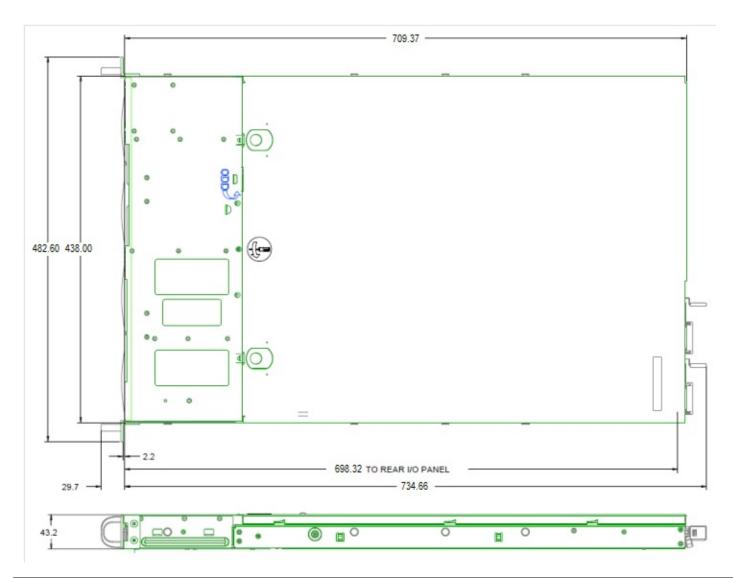

2.2 System Level Environmental Limits

The following table defines the system level operating and non-operating environmental limits.

Parameter		Limits
Temperature		
	Operating	ASHRAE Class A2 – Continuous Operation. 10° C to 35° C (50° F to 95° F) with the maximum rate of change not to exceed 10°C per hour
		ASHRAE Class A3 – Includes operation up to 40C for up to 900 hrs per year.
		ASHRAE Class A4 – Includes operation up to 45C for up to 90 hrs per year.
	Shipping	-40° C to 70° C (-40° F to 158° F)
Altitude		
	Operating	Support operation up to 3050m with ASHRAE class deratings.
Humidity		
	Shipping	50% to 90%, non-condensing with a maximum wet bulb of 28° C (at temperatures from 25° C to 35° C)
Shock		
	Operating	Half sine, 2g, 11 mSec
	Unpackaged	Trapezoidal, 25 g, velocity change is based on packaged weight
	Packaged	Product Weight: ≥ 40 to < 80
		Non-palletized Free Fall Height = 18 inches
		Palletized (single product) Free Fall Height = NA
Vibration		
	Unpackaged	5 Hz to 500 Hz 2.20 g RMS random
	Packaged	5 Hz to 500 Hz 1.09 g RMS random
AC-DC		
	Voltage	90 Hz to 132 V and 180 V to 264 V
	Frequency	47 Hz to 63 Hz
	Source Interrupt	No loss of data for power line drop-out of 12 mSec
	Surge Non- operating and operating	Unidirectional
	Line to earth Only	AC Leads 2.0 kV I/O Leads 1.0 kV DC Leads 0.5 kV
ESD		
	Air Discharged	12.0 kV
	Contact Discharge	8.0 kV
Acoustics Sound Power Measured		
	Power in Watts	<300 W ≥300 W ≥600 W ≥1000 W
	Servers/Rack Mount BA	7.0 7.0 7.0 7.0

Disclaimer Note: Intel ensures the unpackaged server board and system meet the shock requirement mentioned above through its own chassis development and system configuration. It is the responsibility of the system integrator to determine the proper shock level of the board and system if the system integrator chooses different system configuration or different chassis. Intel Corporation cannot be held responsible, if components fail or the server board does not operate correctly when used outside any of its published operating or non-operating limits.

See Appendix D in this document or the Intel[®] S2600GZGL Product Family Power Budget and Thermal Configuration Tool for system configuration requirements and limitations.

2.3 System Features and Options Overview

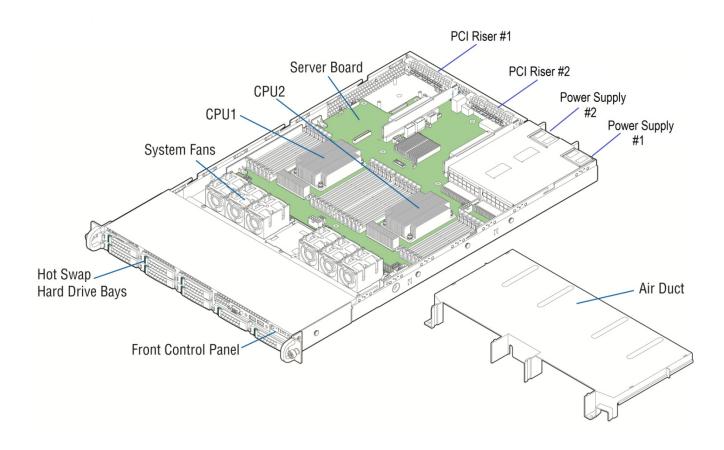


Figure 2. System Components Overview

2.3.1 Hot Swap Hard Drive Bay and Front Panel Options

	Ibaaaaaaa Ibbb		○ □ □ ○ □ ○ □ ○	
¢				I

AF004121

Intel[®] Server System R1000GZ/GL Product Family TPS

Figure 3. 3.5" Hard Drive Bay - 4 Drive Configuration




Figure 4. 2.5" Hard Drive Bay - 8 Drive Configuration

2.3.2 Back Panel Features


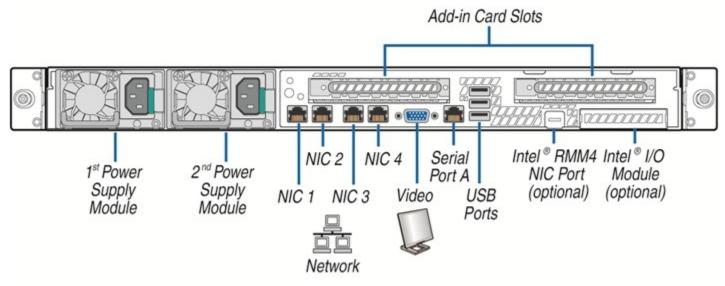


Figure 5. Back Panel Feature Identification

2.3.3 Front Control Panel Options

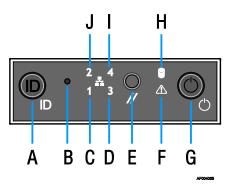

Label	Description	Label	Description
А	System ID Button w/Integrated LED	F	System Status LED
В	NMI Button (recessed, tool required for use)	G	Power Button w/Integrated LED

Intel [®] Server Syst	em R1000GZ/GL	Product Family TPS
--------------------------------	---------------	--------------------

С	NIC-1 Activity LED	Н	Hard Drive Activity LED
D	NIC-3 Activity LED	I	NIC-4 Activity LED
Е	System Cold Reset Button	J	NIC-2 Activity LED

Figure 6. Front Control Panel Options

2.4 Server Board Features Overview

The following illustration provides a general overview of the server board, identifying key feature and component locations. The majority of the items identified are common between the Intel[®] Server Board S2600GL and S2600GZ.


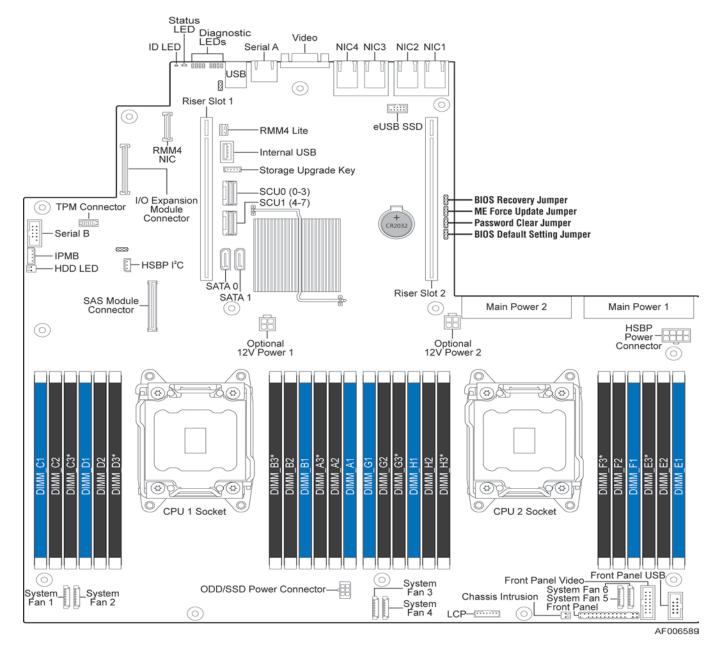


Figure 7. Intel[®] Server Board S2600GZ

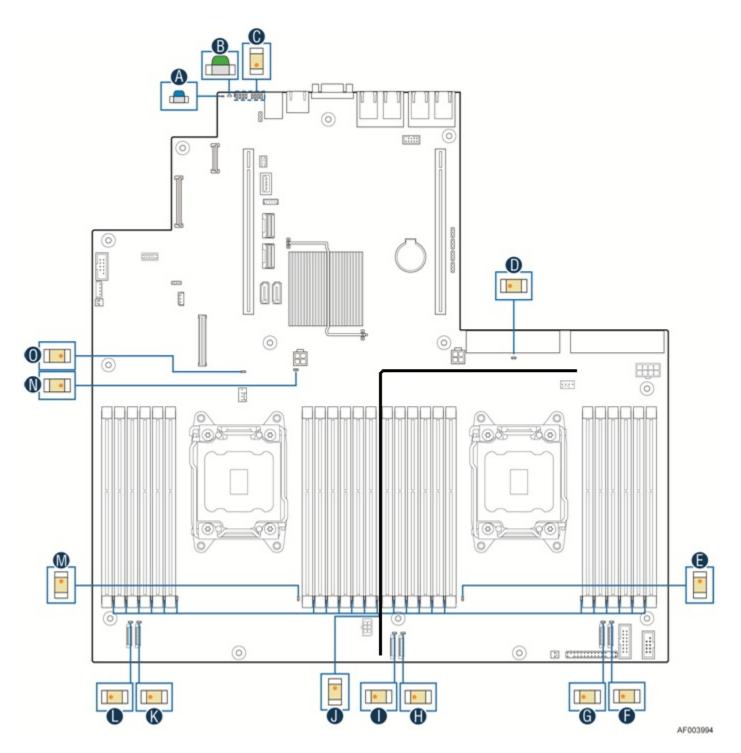

Label	Description	Label	Description
А	System ID	I	System Fan #3 Fan Fault
В	System Status	J	Memory Fault
С	POST Code Diagnostics	К	System Fan #2 Fan Fault
D	12V Stand-by Power Present	L	System Fan #1 Fan Fault
Е	CPU-2 Fault	М	CPU-1 Fault
F	System Fan #6 Fan Fault	N	CATERR
G	System Fan #5 Fan Fault	0	System Power Good
Н	System Fan #4 Fan Fault		

Figure 8. Intel[®] Light-Guided Diagnostic LEDs - Server Board

2.5 Available Front Bezel Support

The optional front bezel is made of Black molded plastic and uses a snap-on design. When installed, its design allows for maximum airflow to maintain system cooling requirements. The face of the bezel assembly includes optional snap-in identification badge and wave (shown) features to allow for customization.

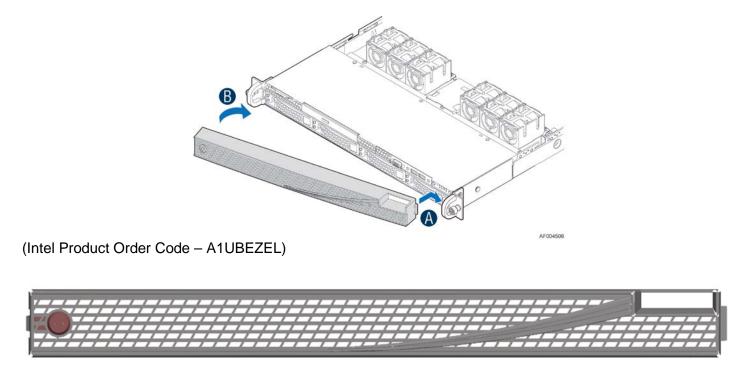


Figure 9. Front Bezel accessory with optionally installed wave feature



Figure 10. Front Bezel accessory with optionally installed wave and ID badge (1)




Figure 11. Front Bezel accessory with optionally installed wave and ID badge (2)

Intel[®] Server System R1000GZ/GL Product Family TPS

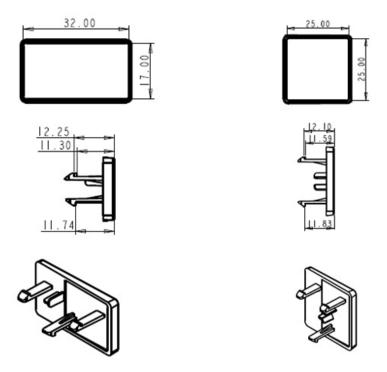


Figure 12. Front Bezel accessory ID Badge mechanical drawings

2.6 Available Rack and Cabinet Mounting Kit Options

Advisory Note – Available rack and cabinet mounting kits are not designed to support shipment of the server system while installed in a rack. If you chose to do so, Intel advises you verify your shipping configuration with appropriate shock and vibe testing, before shipment. Intel does not perform shipping tests which cover the complex combination of unique rack offerings and custom packaging options.

Caution: Exceeding the specified maximum weight or misalignment of the server may result in failure of the rack rails, resulting in damage to the system or personal injury. The use of mechanical assists to install and align the server into the rack rails is highly recommended.

- AXXPRAIL Tool-less rack mount rail kit
 - o 1U and 2U compatible
 - o 800mm max travel length
 - o 54 lbs (24 Kgs) max support weight
 - Tool-less installation
 - o Full extension from rack
 - Drop in system install
 - o Optional cable management arm support
- AXXPRAIL755 Tool-less rack mount rail kit
 - o 1U and 2U compatible
 - o 755mm max travel length
 - 54 lbs (24 Kgs) max support weight
 - Tool-less installation
 - Full extension from rack
 - o Drop in system install

- AXXVRAIL Value rack mount rail kit
 - 1U to 4U compatible
 - o 130 lbs (59 Kgs) max support weight
 - o Tool-less chassis attach
 - Tools required to attach to rails to rack
 - o 2/3 extension from rack
- AXXELVRAIL Enhanced Value rack mount rail kit
 - 1U to 4U compatible
 - o 130 lbs (59 Kgs) max support weight
 - o Tool-less chassis attach
 - Tools required to attach to rails to rack
 - o 2/3 extension from rack
 - o Improved robustness over AXXVRAIL, same mechanical spec
- **AXX1U2UCMA** Cable Management Arm *supported with AXXPRAIL only
- AXX2POSTBRCKT 2-Post Fixed mount bracket kit
 - o 1U and 2U compatible
 - Tools required to attach components to rack

3. Power Subsystem

This chapter provides a high level overview of the power management features and specification data for the power supply options available for this server product. Specification variations will be identified for each supported power supply.


The server system can have upto two power supply modules installed, supporting the following power supply configurations: 1+0 (single power supply), 1+1 Redundant Power, and 2+0 Combined Power (non-redundant). 1+1 redundant power and 2+0 combined power configurations are automatically configured depending on the total power draw of the system. If the total system power draw exceeds the power capacity of a single power supply module, then power from the 2nd power supply module will be utilized. Should this occur, power redundancy is lost. In a 2+0 power configuration, total power available maybe less then twice the rated power of the installed power supply modules due to the amount of heat produced with both supplies providing peak power. Should system thermals exceed programmed limits, platform management will attempt to keep the system operational. See *Closed Loop System Throttling (CLST)* later in this chapter, and Chapter 4 *Thermal Management*, for details.

There are three power supply options available for this server product: 460W AC, 750W AC and 750W DC

Caution: Installing two Power Supply Units with different wattage ratings in a system is not supported. Doing so will not provide Power Supply Redundancy and will result in multiple errors being logged by the system.

The power supplies are modular, allowing for tool-less insertion and extraction from a bay in the back of the chassis. When inserted, the card edge connector of the power supply mates blindly to a matching slot connector on the server board.

In the event of a power supply failure, redundant 1+1 power supply configurations have support for hot-swap extraction and insertion.

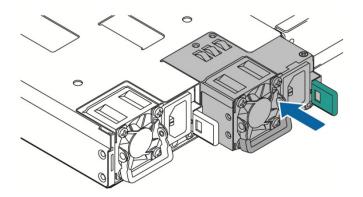

The AC input is auto-ranging and power factor corrected.

3.1 Mechanical Overview

The physical size of the power supply enclosure is 39/40mm x 74mm x 185mm. The power supply contains a single 40mm fan. The power supply has a card edge output that interfaces with a 2x25 card edge connector in the system.

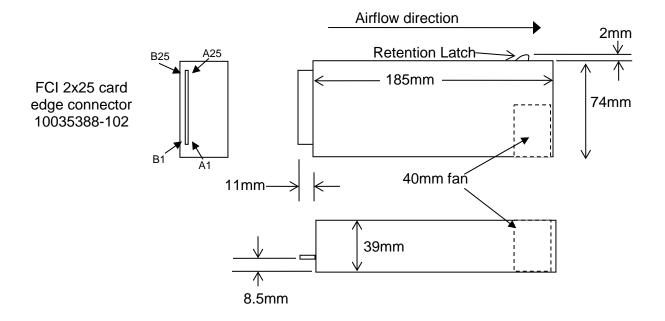


Figure 13. Power Supply Module Mechanical Drawing



Figure 14. AC and DC Power Supply - Connector Views

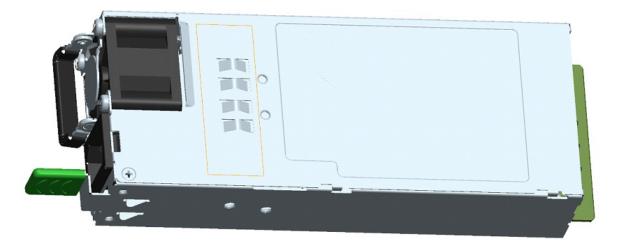


Figure 15. Power Supply Module

3.2 Power Connectors

3.2.1 Power Supply Module Card Edge Connector

Each power supply module has a single 2x25 card edge output connection that plugs directly into a matching slot connector on the server board. The connector provides both power and communication signals to the server board. The following table defines the connector pin-out.

Pin	Name	Pin	Name
A1	GND	B1	GND
A2	GND	B2	GND
A3	GND	B3	GND
A4	GND	B4	GND
A5	GND	B5	GND
A6	GND	B6	GND
A7	GND	B7	GND
A8	GND	B8	GND
A9	GND	B9	GND
A10	+12V	B10	+12V
A11	+12V	B11	+12V
A12	+12V	B12	+12V
A13	+12V	B13	+12V
A14	+12V	B14	+12V
A15	+12V	B15	+12V
A16	+12V	B16	+12V
A17	+12V	B17	+12V
A18	+12V	B18	+12V
A19	PMBus SDA	B19	A0 (SMBus address)
A20	PMBus SCL	B20	A1 (SMBus address)
A21	PSON	B21	12V stby
A22	SMBAlert#	B22	Cold Redundancy Bus
A23	Return Sense	B23	12V load share bus
A24	+12V remote Sense	B24	No Connect
A25	PWOK	B25	Compatibility Check pin*

Table 3. Power Supply Module Output Power Connector Pin-out

The server board provides several connectors to provide power to various system options. The following subsections will identify the location; provide the pin-out definition; and provide a brief usage description for each.

3.2.2 Riser Card Power Connectors

The server board includes two white 2x2-pin power connectors that provide supplemental power to high power PCIe x16 add-in cards (GPU) that have power requirements that exceed the 75W maximum power supplied by the PCIe x16 riser slot. A cable from this connector may be routed to a power connector on the given add-in card. Maximum power draw for each connector is 225W, but is also limited by available power provided by the power supply and the total power draw of the rest of the system. A power budget for the complete system should be performed to determine how much supplemental power is available to support any high power add-in cards.

Note: Intel[®] Xeon Phi[™] Coprocessor and non-Intel GPGPU add-in cards cannot be supported in a 1U server system.

Each connector is labeled as "OPT_12V_PWR_1" and "OPT_12V_PWR_2" on the server board. The following table provides the pin-out for both connectors.

Signal Description	Pin#	Pin#	Signal Description
P12V	3	1	GROUND
P12V	4	2	GROUND

Table 4. Riser Slot Power Pin-out ("OPT_12V_PWR_#")

3.2.3 Hot Swap Backplane Power Connector

The server board includes one white 2x4-pin power connector that is cabled to the hot swap backplane. On the server board, this connector is labeled as "HSBP PWR". The following table provides the pin-out for this connector.

Signal Description	Pin#	Pin#	Signal Description
P12V_240VA	5	1	GROUND
P12V_240VA	6	2	GROUND
P12V_240VA	7	3	GROUND
P12V_240VA	8	4	GROUND

Table 5. Hot Swap Backplane Power Connector Pin-out ("HSBP PWR")

3.2.4 Optical Drive Power Connector

The server board includes one brown 2x3-pin power connector intended to provide power to an optionally installed optical drive. On the server board this connector is labeled as "ODD/SSD PWR". The following table provides the pin-out for this connector.

Table 6. Peripheral Drive Power Connector Pin-out ("ODD/SSD PWR")

Signal Description	Pin#	Pin#	Signal Description
P12V	4	1	P5V
P3V3	5	2	P5V
GROUND	6	3	GROUND

3.3 Power Supply Module Efficiency

The following table provides the required minimum efficiency level at various loading conditions. These are provided at three different load levels: 100%, 50% and 20%. Efficiency is tested over an AC input voltage range of 115 VAC to 220 VAC.

Table 7.	460 Watt	AC Power	Supply Efficiency
----------	----------	----------	-------------------

Loading	100% of maximum	50% of maximum	20% of maximum	10% of maximum
Minimum Efficiency	88%	92%	88%	80%

Table 8. 750 Watt AC Power Supply Efficiency

Loading	100% of maximum	50% of maximum	20% of maximum	10% of maximum
Minimum Efficiency	91%	94%	90%	82%

Intel[®] Server System R1000GZ/GL Product Family TPS

Table 9. 750 Watt DC Power Supply Efficiency (Gold)

Loading	100% of maximum	50% of maximum	20% of maximum	10% of maximum
Minimum Efficiency	88%	92%	88%	80%

3.4 **Power Cord Specification Requirements**

Power cords used must meet the specification requirements listed in the following table.

Table 10. AC Power Cord Specifications

Cable Type	SJT
Wire Size	16 AWG
Temperature Rating	105°C
Amperage Rating	13 A
Voltage Rating	125 V

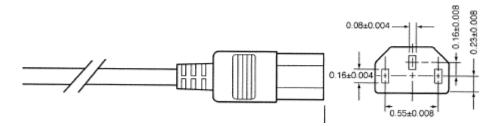


Figure 16. AC Power Cord

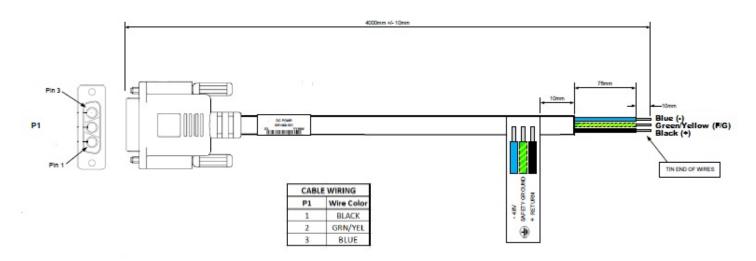




Table 11. DC Power Cable Connector Pin-out

Pin	Definition
1	+ Return
2	Safety Ground
3	- 48V

3.5 Optional Chassis Grounding Support

The system provides 10-32 threaded grounding studs on the back panel of the chassis, allowing for optional system grounding via a grounding strap (not provided).

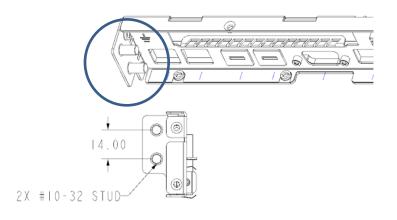


Figure 18. Chassis Grounding Studs

Note: Product Safety Regulations pertaining to the use of DC power supplies require that chassis grounding studs be used for all DC power supply configurations. In the event that chassis grounding studs are not available on a given server chassis, systems must be configured with two DC power supplies, with each connected to separate ground wires while the system is operational.

3.6 AC Input Specifications

3.6.1 Power Factor

The power supply must meet the power factor requirements stated in the Energy Star[®] Program Requirements for Computer Servers. These requirements are stated below.

(Output power	10% load	20% load	50% load	100% load
	Power factor	> 0.65	> 0.80	> 0.90	> 0.95

Tested at 230Vac, 50Hz and 60Hz and 115VAC, 60Hz

3.6.2 AC Input Voltage Specification

The power supply must operate within all specified limits over the following input voltage range. Harmonic distortion of up to 10% of the rated line voltage must not cause the power supply to go out of specified limits. Application of an input voltage below 85VAC shall not cause damage to the power supply, including a blown fuse.

Table 11.	AC Input	Voltage	Range
-----------	----------	---------	-------

PARAMETER	MIN	RATED	VMAX	Start up VAC	Power Off VAC
Voltage (110)	90 Vrms	100-127 Vrms	140 Vrms	85VAC +/- 4VAC	70VAC +/- 5VAC
Voltage (220)	180 Vrms	200-240 Vrms	264 Vrms		
Frequency	47 Hz	50/60	63 Hz		

1. Maximum input current at low input voltage range shall be measured at 90VAC, at max load.

2. Maximum input current at high input voltage range shall be measured at 180VAC, at max load.

3. This requirement is not to be used for determining agency input current markings.

3.6.3 AC Line Isolation Requirements

The power supply shall meet all safety agency requirements for dielectric strength. Transformers' isolation between primary and secondary windings must comply with the 3000Vac (4242Vdc) dielectric strength criteria. If the working voltage between primary and secondary dictates a higher dielectric strength test voltage the highest test voltage should be used. In addition the insulation system must comply with reinforced insulation per safety standard IEC 950. Separation between the primary and secondary circuits, and primary to ground circuits, must comply with the IEC 950 spacing requirements.

3.6.4 AC Line Dropout / Holdup

An AC line dropout is defined to be when the AC input drops to 0VAC at any phase of the AC line for any length of time. During an AC dropout the power supply must meet dynamic voltage regulation requirements. An AC line dropout of any duration shall not cause tripping of control signals or protection circuits. If the AC dropout lasts longer than the hold up time, the power supply should recover and meet all turn on requirements. The power supply shall meet the AC dropout requirement over rated AC voltages and frequencies. A dropout of the AC line for any duration shall not cause damage to the power supply.

Loading	Holdup time
70%	12msec

3.6.4.1 AC Line 12VSBHoldup

The 12VSB output voltage should stay in regulation under its full load (static or dynamic) during an AC dropout of **70ms min** (=12VSB holdup time) whether the power supply is in ON or OFF state (PSON asserted or de-asserted).

3.6.5 AC Line Fuse

The power supply shall have one line fused in the **single line fuse** on the line (Hot) wire of the AC input. The line fusing shall be acceptable for all safety agency requirements. The input fuse shall be a slow blow type. AC inrush current shall not cause the AC line fuse to blow under any conditions. All protection circuits in the power supply shall not cause the AC fuse to blow unless a component in the power supply has failed. This includes DC output load short conditions.

3.6.6 AC Inrush

AC line inrush current shall not exceed **55A peak**, for up to one-quarter of the AC cycle, after which, the input current should be no more than the specified maximum input current. The peak inrush current shall be less than the ratings of its critical components (including input fuse, bulk rectifiers, and surge limiting device).

The power supply must meet the inrush requirements for any rated AC voltage, during turn on at any phase of AC voltage, during a single cycle AC dropout condition as well as upon recovery after AC dropout of any duration, and over the specified temperature range (T_{op}) .

3.6.7 AC Line Transient Specification

AC line transient conditions shall be defined as "sag" and "surge" conditions. "Sag" conditions are also commonly referred to as "brownout", these conditions will be defined as the AC line voltage dropping below nominal voltage conditions. "Surge" will be defined to refer to conditions when the AC line voltage rises above nominal voltage.

The power supply shall meet the requirements under the following AC line sag and surge conditions.

Table 12. AC Line Sag Transient Performance

AC Line Sag (10sec interval between each sagging)

Duration	Sag	Operating AC Voltage	Line Frequency	Performance Criteria
0 to 1/2 AC cycle	95%	Nominal AC Voltage ranges	50/60Hz	No loss of function or performance
> 1 AC cycle	>30%	Nominal AC Voltage ranges	50/60Hz	Loss of function acceptable, self recoverable

Table 13. AC Line Surge Transient Performance

	AC Line Surge				
Duration	Surge	Operating AC Voltage	Line Frequency	Performance Criteria	
Continuous	10%	Nominal AC Voltages	50/60Hz	No loss of function or performance	
0 to 1/2 AC cycle	30%	Mid-point of nominal AC Voltages	50/60Hz	No loss of function or performance	

3.6.8 Susceptibility Requirements

The power supply shall meet the following electrical immunity requirements when connected to a cage with an external EMI filter which meets the criteria defined in the SSI document EPS Power Supply Specification. For further information on Intel standards please request a copy of the Intel Environmental Standards Handbook

Table 14. Performance Criteria

Level	Description		
А	The apparatus shall continue to operate as intended. No degradation of performance.		
В	The apparatus shall continue to operate as intended. No degradation of performance beyond spec limits.		
С	Temporary loss of function is allowed provided the function is self-recoverable or can be restored by the operation of the controls.		

3.6.9 Electrostatic Discharge Susceptibility

The power supply shall comply with the limits defined in EN 55024: 1998/A1: 2001/A2: 2003 using the IEC 61000-4-2: Edition 1.2: 2001-04 test standard and performance criteria B defined in Annex B of CISPR 24.

3.6.10 Fast Transient/Burst

The power supply shall comply with the limits defined in EN55024: 1998/A1: 2001/A2: 2003 using the IEC 61000-4-4: Second edition: 2004-07 test standard and performance criteria B defined in Annex B of CISPR 24.

3.6.11 Radiated Immunity

The power supply shall comply with the limits defined in EN55024: 1998/A1: 2001/A2: 2003 using the IEC 61000-4-3: Edition 2.1: 2002-09 test standard and performance criteria A defined in Annex B of CISPR 24.

3.6.12 Surge Immunity

The power supply shall be tested with the system for immunity to AC Unidirectional wave; 2kV line to ground and 1kV line to line, per EN 55024: 1998/A1: 2001/A2: 2003, EN 61000-4-5: Edition 1.1:2001-04. The pass criteria include: No unsafe operation is allowed under any condition; all power supply output voltage levels to stay within proper spec levels; No change in operating state or loss of data during and after the test profile; No component damage under any condition.

The power supply shall comply with the limits defined in EN55024: 1998/A1: 2001/A2: 2003 using the IEC 61000-4-5: Edition 1.1:2001-04 test standard and performance criteria B defined in Annex B of CISPR 24.

3.6.13 Power Recovery

The power supply shall recover automatically after an AC power failure. AC power failure is defined to be any loss of AC power that exceeds the dropout criteria.

3.6.14 Voltage Interruptions

The power supply shall comply with the limits defined in EN55024: 1998/A1: 2001/A2: 2003 using the IEC 61000-4-11: Second Edition: 2004-03 test standard and performance criteria C defined in Annex B of CISPR 24.

3.6.15 Protection Circuits

Protection circuits inside the power supply cause only the power supply's main outputs to shut down. If the power supply latches off due to a protection circuit tripping, an AC cycle OFF for 15 seconds and a PSON[#] cycle HIGH for one second reset the power supply.

3.6.16 Over-current Protection (OCP)

The power supply shall have current limit to prevent the outputs from exceeding the values shown in table below. If the current limits are exceeded the power supply shall shutdown and latch off. The latch will be cleared by toggling the PSON[#] signal or by an AC power interruption. The power supply shall not be damaged from repeated power cycling in this condition. 12VSB will be auto-recovered after removing OCP limit.

Table 12. 460 Watt Power Supply Over Current Protection

Output Voltage	Input voltage range	Over Current Limits
+12V	90 – 264VAC	47A min; 55A max
12VSB	90 – 264VAC	2A min; 2.5A max

Table 13. 750 Watt Power Supply Over Current Protection

Output Voltage	Input voltage range	Over Current Limits
+12V	90 – 264VAC	72A min; 78A max
12VSB	90 – 264VAC	2.5A min; 3.5A max

3.6.17 Over-voltage Protection (OVP)

The power supply over voltage protection shall be locally sensed. The power supply shall shutdown and latch off after an over voltage condition occurs. This latch shall be cleared by toggling the PSON[#] signal or by an AC power interruption. The values are measured at the output of the power supply's connectors. The voltage shall never exceed the maximum levels when measured at the power connectors of the power supply connector during any single point of fail. The voltage shall never trip any lower than the minimum levels when measured at the power than the minimum levels when measured at the power trip any lower than the minimum levels when measured at the power trip of the power than the minimum levels when measured at the power trip any lower than the minimum levels when measured at the power trip of the power than the minimum levels when measured at the power trip of the power than the minimum levels when measured at the power trip of the power than the minimum levels when measured at the power trip of the power than the minimum levels when measured at the power trip of the power than the minimum levels when measured at the power trip of the power than the minimum levels when measured at the power trip of the power than the minimum levels when measured at the power connector. 12VSB will be auto-recovered after removing OVP limit.

Table 14. (Over Voltage	Protection	(OVP) Limits
-------------	--------------	------------	--------------

Output Voltage	MIN (V)	MAX (V)
+12V	13.3	14.5
+12VSB	13.3	14.5

3.6.18 Over-temperature Protection (OTP)

The power supply will be protected against over temperature conditions caused by loss of fan cooling or excessive ambient temperature. In an OTP condition the PSU will shutdown. When the power supply temperature drops to within specified limits, the power supply shall restore power automatically, while the 12VSB remains always on. The OTP circuit must have built in margin such that the power supply will not oscillate on and off due to temperature recovering condition. The OTP trip level shall have a minimum of 4°C of ambient temperature margin.

3.7 DC Power Supply Input Specifications

The following sections provide the DC Input Specifications for systems configured with DC power supply modules.

NOTE: Product Safety Regulations pertaining to the use of DC power supplies require that chassis grounding studs be used for all DC power supply configurations. In the event that chassis grounding studs are not available on a given server chassis, systems must be configured with two DC power supplies, with each connected to separate ground wires while the system is operational.

3.7.1 DC Input Voltage

The power supply must operate within all specified limits over the following input voltage range.

PARAMETER	MIN	RATED	MAX
DC Voltage	-40.5 VDC	-48VDC/-60VDC	-75VDC
Input Current	24A		12.5A

Table 15. DC Input Rating

3.7.2 DC Input Fuse

The power supply shall have the -48VDC input fused. The fusing shall be acceptable for all safety agency requirements. DC inrush current shall not cause the fuse to blow under any conditions. No protection circuits in the power supply shall cause the DC fuse to blow unless a component in the power supply has failed. This includes DC output load short conditions.

3.7.3 DC Inrush Current

Maximum inrush current from power-on shall be limited to a level below the surge rating of the input line cable; input diodes, fuse, and EMI filter components. To allow multiple power cycling events and DC line transient conditions max I²t value shall not exceed 20% of the fuse max rating. Repetitive ON/OFF cycling of the DC input line voltage should not damage the power supply or cause the input fuse to blow.

3.7.4 DC Input Under Voltage

The power supply shall contain protection circuitry (under-voltage lock-out) such that the application of an input voltage below the specified minimum specified, shall not cause damage (overstress) to the power supply unit (due to over-heating or otherwise).

3.7.5 DC Holdup Time and Dropout

Loading	Holdup time
750W (100%)	0.2msec

During a DC dropout of **0.2ms** or less the power supply must meet dynamic voltage regulation requirements for every rated load condition. A DC line dropout of 0.2ms or less shall not cause tripping of control signals or protection circuits. Repeated every **10 seconds** starting at the min input voltage DC line dropout shall not damage the power supply under any specified load conditions. The PWOK signal shall not go to a low state under these conditions. DC dropout transients in excess of 0.2 **milliseconds** may cause shutdown of the PS

or out of regulation conditions, but shall not damage the power supply. The power supply should recover and meet all turn on requirements for DC dropouts that last longer than **0.2ms**. The power supply must meet the DC dropout requirement over rated DC voltages and output loading conditions.

3.7.6 DC Line Surge Voltages (Line Transients)

The Power Supply should demonstrate tolerance for transients in the input DC power line caused by switching or lightning. The power supply shall be primarily tested and must be compliant with the requirements of EN61000-4-5: "Electrical Fast transients / Burst Requirements and Surge Immunity Requirements" for surge withstand capability. The test voltage surge levels are to be: **500Vpk for each Line to Primary Earth Ground test (none required between the L1 and L2).** The exact description can be found in Intel Environmental Standards Handbook 2001.

Duration	Slope/Rate	Output	Performance criteria
200µs max	$\begin{array}{c} \text{-48V} \rightarrow \text{-30V} \\ \text{w/} + 2\text{V/}\mu\text{s} \end{array}$	Rated DC Voltages	No loss of function or performance
200µs max	$\begin{array}{c} \textbf{-30V} \rightarrow \textbf{-48V} \\ \textbf{w/} \ \textbf{-2V/\mus} \end{array}$	Rated DC Voltages	No loss of function or performance

Table 16. Line Voltage Transient Limits

3.7.7 Susceptibility Requirements

The power supply shall meet the following electrical immunity requirements when connected to a cage with an external EMI filter which meets the criteria defined in the SSI document EPS Power Supply Specification. For further information on Intel standards please request a copy of the Intel Environmental Standards Handbook.

Level	Description
A	The apparatus shall continue to operate as intended. No degradation of performance.
В	The apparatus shall continue to operate as intended. No degradation of performance beyond spec limits.
С	Temporary loss of function is allowed provided the function is self- recoverable or can be restored by the operation of the controls.

3.7.7.1 Electrostatic Discharge Susceptibility

The power supply shall comply with the limits defined in EN 55024: 1998 using the IEC 61000-4-2:1995 test standard and performance criteria B defined in Annex B of CISPR 24. Limits shall comply with those specified in the Intel Environmental Standards Handbook.

3.7.7.2 Fast Transient/Burst

The power supply shall comply with the limits defined in EN55024: 1998 using the IEC 61000-4-4:1995 test standard and performance criteria B defined in Annex B of CISPR 24. . Limits shall comply with those specified in the Intel Environmental Standards Handbook.

3.7.7.3 Radiated Immunity

The power supply shall comply with the limits defined in EN55024: 1998 using the IEC 61000-4-3:1995 test standard and performance criteria A defined in Annex B of CISPR 24. . Limits shall comply with those specified in the Intel Environmental Standards Handbook. Additionally, must also comply with field strength requirements specified in GR 1089 (10V/meter).

3.7.7.4 Surge Immunity

The power supply shall be tested with the system for immunity, per EN 55024:1998, EN 61000-4-5:1995 and ANSI C62.45: 1992.

The pass criteria include: No unsafe operation is allowed under any condition; All power supply output voltage levels to stay within proper spec levels; No change in operating state or loss of data during and after the test profile; No component damage under any condition.

The power supply shall comply with the limits defined in EN55024: 1998 using the IEC 61000-4-5:1995 test standard and performance criteria B defined in Annex B of CISPR 24. Limits shall comply with those specified in the Intel Environmental Standards Handbook.

3.7.8 Protection Circuits

Protection circuits inside the power supply shall cause only the power supply's main outputs to shutdown. If the power supply latches off due to a protection circuit tripping, an DC cycle OFF for 15sec and a PSON# cycle HIGH for 1sec shall be able to reset the power supply.

3.7.8.1 Current Limit (OCP)

The power supply shall have current limit to prevent the outputs from exceeding the values shown in table below. If the current limits are exceeded the power supply shall shutdown and latch off. The latch will be cleared by toggling the PSON# signal or by an DC power interruption. The power supply shall not be damaged from repeated power cycling in this condition. 12VSB will be auto-recovered after removing OCP limit.

Table 17. Over Current Protection

Output VOLTAGE	Input voltage range	OVER CURRENT LIMITS
+12V		72A min; 78A max
12VSB		2.5A min; 3.5A max

3.7.8.2 Over Voltage Protection (OVP)

The power supply over voltage protection shall be locally sensed. The power supply shall shutdown and latch off after an over voltage condition occurs. This latch shall be cleared by toggling the PSON# signal or by an DC power interruption. The values are measured at the output of the power supply's connectors. The voltage shall never exceed the maximum levels when measured at the power connectors of the power supply connector during any single point of fail. The voltage shall never trip any lower than the minimum levels when measured at the power than the minimum levels when measured at the power trip any lower than the minimum levels when measured at the power trip any lower than the minimum levels when measured at the power trip any lower than the minimum levels when measured at the power trip any lower than the minimum levels when measured at the power connector. 12VSBwill be auto-recovered after removing OVP limit.

Table 18. Over Voltagge Protection Limits

Output Voltage	MIN (V)	MAX (V)
+12V	13.3	14.5
+12VSB	13.3	14.5

3.7.8.3 Over Temperature Protection (OTP)

The power supply will be protected against over temperature conditions caused by loss of fan cooling or excessive ambient temperature. In an OTP condition the PSU will shutdown. When the power supply temperature drops to within specified limits, the power supply shall restore power automatically, while the 12VSB remains always on. The OTP circuit must have built in margin such that the power supply will not oscillate on and off due to temperature recovering condition. The OTP trip level shall have a minimum of 4 of ambient temperature margin

 $\Box C$

3.8 Cold Redundancy Support

Power supplies that support cold redundancy can be enabled to go into a low-power state (that is, cold redundant state) in order to provide increased power usage efficiency when system loads are such that both power supplies are not needed. When the power subsystem is in Cold Redundant mode, only the needed power supply to support the best power delivery efficiency is ON. Any additional power supplies; including the redundant power supply, is in Cold Standby state

Each power supply has an additional signal that is dedicated to supporting Cold Redundancy; CR_BUS. This signal is a common bus between all power supplies in the system. CR_BUS is asserted when there is a fault in any power supply OR the power supplies output voltage falls below the Vfault threshold. Asserting the CR_BUS signal causes all power supplies in Cold Standby state to power ON.

Enabling power supplies to maintain best efficiency is achieved by looking at the Load Share bus voltage and comparing it to a programmed voltage level via a PMBus command.

Whenever there is no active power supply on the Cold Redundancy bus driving a HIGH level on the bus all power supplies are ON no matter their defined Cold Redundant roll (active or Cold Standby). This guarantees that incorrect programming of the Cold Redundancy states of the power supply will never cause the power subsystem to shutdown or become over loaded. The default state of the power subsystem is all power supplies ON. There needs to be at least one power supply in Cold Redundant Active state or Standard Redundant state to allow the Cold Standby state power supplies to go into Cold Standby state.

3.8.1 Powering on Cold Standby supplies to maintain best efficiency

Power supplies in Cold Standby state shall monitor the shared voltage level of the load share signal to sense when it needs to power on. Depending upon which position (1, 2, or 3) the system defines that power supply to be in the cold standby configuration; will slightly change the load share threshold that the power supply shall power on at.

	Enable Threshold for V _{CR_ON_EN}	Disable Threshold for V _{CR_ON_DIS}	CR_BUS De-asserted / Asserted States
Standard Redundancy	NA; Ignore dc/dc_ active# sig ON	nal; power supply is always	OK = High Fault = Low
Cold Redundant Active	NA; Ignore dc/dc_ active# signal; power supply is always ON		OK = High Fault = Low
Cold Standby 1 (02h)	3.2V (40% of max)	3.2V x 0.5 x 0.9 = 1.44V	OK = Open Fault = Low
Cold Standby 2 (03h)	5.0V (62% of max)	5.0V x 0.67 x 0.9 = 3.01V	OK = Open Fault = Low
Cold Standby 3 (04h)	6.7V (84% of max)	6.7V x 0.75 x 0.9 = 4.52V	OK = Open Fault = Low

Table 19.	. Example Load Share Threshold for Activating Supplie	s
-----------	---	---

Notes:

Maximum load share voltage = 8.0V at 100% of rated output power

These are example load share bus thresholds; for a given power supply, these shall be customized to maintain the best efficiency curve for that specific model.

3.8.2 Powering on Cold Standby supplies during a fault or over current condition

When an active power supply asserts its CR_BUS signal (pulling it low), all parallel power supplies in cold standby mode shall power on within 100µsec

3.8.3 BMC Requirements

The BMC uses the Cold_Redundancy_Config command to define/configure the power supply's roll in cold redundancy and to turn on/off cold redundancy.

The BMC shall schedule a rolling change for which PSU is the Active, Cold Stby1, Cold Stby 2, and Cold Stby 3 power supply. This allows for equal loading across power supply over their life.

Events that trigger a re-configuration of the power supplies using the Cold_Redundancy_Config command.

- AC power ON
- PSON power ON
- Power Supply Failure
- Power supply inserted into system

3.8.4 Power Supply Turn On Function

Powering on and off of the cold standby power supplies is only controlled by each PSU sensing the Vshare bus. Once a power supply turns on after crossing the enable threshold; it lowers its threshold to the disable threshold. The system defines the 'position' of each power supply in the Cold Redundant operation. It will do this each time the system is powered on, a power supply fails, or a power supply is added to the system.

The system is relied upon to tell each power supply where it resides in the Cold Redundancy scheme.

3.9 Closed Loop System Throttling (CLST)

The server system has support for Closed Loop System Throttling (CLST). CLST prevents the system from crashing if a power supply module is overloaded. Should system power reach a pre-programmed power limit, CLST will throttle system memory and/or processors to reduce power. System performance will be impacted should this occur. For more in depth information about CLST implementation, please refer to the *SmaRT* & *CLST Architecture on "Romley" Systems and Power Supplies Specification* (IBL Reference # 461024).

3.10 Smart Ride Through (SmaRT)

The server system has support for Smart Ride Through Throttling (SmaRT). This feature increases the reliability for a system operating in a heavy power load condition, to remain operational during an AC line dropout event. See section 3.5.4 AC Line Dropout / Holdup for power supply hold up time requirements for AC Line dropout events.

When AC voltage is too low, a fast AC loss detection circuit inside each installed power supply asserts an SMBALERT# signal to initiate a throttle condition in the system. System throttling reduces the bandwidth to both system memory and CPUs, which in turn reduces the power load during the AC line drop out event.

3.11 Power Supply Status LED

There is a single bi-color LED to indicate power supply status. The LED operation is defined in the following table.

Table 20. LED Indicators

Power Supply Condition	LED State

Intel[®] Server System R1000GZ/GL Product Family TPS

Output ON and OK	GREEN
No AC power to all power supplies	OFF
AC present / Only 12VSB on (PS off) or PS in Cold redundant state	1Hz Blink GREEN
AC cord unplugged or AC power lost; with a second power supply in parallel still with AC input power.	AMBER
Power supply warning events where the power supply continues to operate; high temp, high power, high current, slow fan.	1Hz Blink Amber
Power supply critical event causing a shutdown; failure, OCP, OVP, Fan Fail	AMBER
Power supply FW updating	2Hz Blink GREEN

4. Thermal Management

The fully integrated system is designed to operate at external ambient temperatures of between 10°C- 35°C with limited excursion based operation up to 45°C, as specified in *Table 2. System Environmental Limits Summary*. Working with integrated platform management, several features within the system are designed to move air in a front to back direction, through the system and over critical components in order to prevent them from overheating and allow the system to operate with best performance.

The Intel[®] Server System R1000GZ/GL product family supports short-term, excursion-based, operation up to 45°C (ASHRAE A4) with limited performance impact. The configuration requirements and limitations are described in the configuration matrix found in Appendix D of this document or in the *Intel[®] S2600GZGL Product Family Power Budget and Thermal Configuration Tool,* available as a download online at <u>http://www.intel.com/support</u>.

The installation and functionality of several system components are used to maintain system thermals. They include six managed dual rotor 40mm x 56mm system fans, one integrated 40mm fan for each installed power supply module, an air duct, populated hard drive carriers, and installed CPU heats sinks. Hard drive carriers can be populated with a hard drive or supplied drive blank. In addition, it may be necessary to have specific DIMM slots populated with DIMMs or supplied DIMM blanks.

4.1 Thermal Operation and Configuration Requirements

To keep the system operating within supported maximum thermal limits, the system must meet the following operating and configuration guidelines:

- The system operating ambient is designed for sustained operation up to 35°C (ASHRAE Class A2) with short term excursion based operation up to 45°C (ASHRAE Class A4).
 - The system can operate up to 40°C (ASHRAE Class A3) for up to 900 hours per year
 - The system can operate up to 45°C (ASHRAE Class A4) for up to 90 hours per year
 - When operating within the extended operating temperature range, then system performance may be impacted.
 - There is no long term system reliability impact when operating at the extended temperature range within the approved limits.
- Specific configuration requirements and limitations are documented in the configuration matrix found in the Intel[®] Server Board S2600GZGL product family Power Budget and Thermal Configuration Guidelines Tool, available as a download online at Intel.com.
- The CPU-1 processor + CPU heat sink must be installed first. The CPU-2 heat sink must be installed at all times, with or without a processor installed.
- Memory Slot population requirements NOTE: Specified memory slots can be populated with a DIMM or supplied DIMM Blank. Memory population rules apply when installing DIMMs.
 DIMM Population Pulse on CPU-1 Install DIMMs in order: Chappels A. B. C. and D1. Statements of the statement of t
 - DIMM Population Rules on CPU-1 Install DIMMs in order; Channels A, B, C, and D¹. Start with1st DIMM (Blue Slot) on each channel, then slot 2, then slot 3¹. Only remove factory installed DIMM blanks when populating the slot with an actual memory module.
 - DIMM Population Rules on CPU-2 Install DIMMs in order; Channels E, F, G, and H¹. Start with1st DIMM (Blue Slot) on each channel, then slot 2, then slot 3¹. Only remove factory installed DIMM blanks when populating the slot with an actual memory module.
 - The following system configuration requires that specific memory slots be populated at all times using either a DIMM or supplied DIMM Blank
 - System Configuration 8x 2.5" hard drive bay configuration + 24 DIMM server board
 Memory slot 3 for all memory channels
- All hard drive bays must be populated. Hard drive carriers can be populated with a hard drive or supplied drive blank.
- The air duct must be installed at all times

¹ 24-DIMM Intel® Server Board S2600GZ only

- In single power supply configurations, the 2nd power supply bay must have the supplied filler blank installed at all times.
- The system top-cover must be installed at all times.

4.2 Thermal Management Overview

In order to maintain the necessary airflow within the system, all of the previously listed components and top cover need to be properly installed. For best system performance, the external ambient temperature should remain below 35°C and all system fans should be operational. The system is designed for fan redundancy when the system is configured with two power supplies. Should a single system fan fail (System fan or Power Supply Fan), integrated platform management will: change the state of the System Status LED to flashing Green, report an error to the system event log, and automatically adjust fan speeds as needed to maintain system temperatures below maximum thermal limits.

Note: All system fans are controlled independent of each other. The fan control system may adjust fan speeds for different fans based on increasing/decreasing temperatures in different thermal zones within the chassis.

In the event that system thermals should continue to increase with the system fans operating at their maximum speed, platform management may begin to throttle bandwidth of either the memory subsystem or the processors or both, in order to keep components from overheating and keep the system operational. Throttling of these sub-systems will continue until system thermals are reduced below preprogrammed limits.

Should system temperatures increase to a point beyond the maximum thermal limits, the system will shut down, the System Status LED will change to a solid Amber state, and the event will be logged to the system event log.

<u>Note:</u> Sensor data records (SDRs) for any given system configuration must be loaded by the system integrator for proper thermal management of the system. SDRs are loaded using the FRUSDR utility.

An intelligent Fan Speed Control (FSC) and thermal management technology (mechanism) is used to maintain comprehensive thermal protection, deliver the best system acoustics, and fan power efficiency. Options in <F2> BIOS Setup (**BIOS>Advanced>System Acoustic and Performance Configuration)** allow for parameter adjustments based on the actual system configuration and usage. Refer to the following sections for a description of each setting.

4.2.1 Set Throttling Mode

This option is used to select the desired memory thermal throttling mechanism. Available settings include: **[Auto]**, [DCLTT], [SCLTT] and [SOLTT].

[Auto] – Factory Default Setting - BIOS automatically detects and identifies the appropriate thermal throttling mechanism based on DIMM type, airflow input, and DIMM sensor availability.

[DCLTT] – Dynamic Closed Loop Thermal Throttling: for the SOD DIMM with system airflow input

[SCLTT] – Static Close Loop Thermal Throttling: for the SOD DIMM without system airflow input

[SOLTT] – Static Open Loop Thermal Throttling: for the DIMMs without sensor on dimm (SOD)

4.2.2 Altitude

This option is used to select the proper altitude that the system will be used in. Available settings include: [300m or less], **[301m-900m]**, [901m-1500m], [Above 1500m].

Selecting an altitude range that is lower than the actual altitude the system will be operating at, can cause the fan control system to operate less efficiently, leading to higher system thermals and lower system performance. If the altitude range selected is higher than the actual altitude the system will be operating at, the fan control system may provide better cooling but with higher acoustics and higher fan power consumption. If the altitude is not known, selecting a higher altitude is recommended in order to provide sufficient cooling.

4.2.3 Set Fan Profile

This option is used to set the desired Fan Profile. Available settings include: **[Performance]** and [Acoustic].

The Acoustic mode offers the best acoustic experience and appropriate cooling capability supporting the majority of the add-in cards used. Performance mode is designed to provide sufficient cooling capability covering all kinds of add-in cards on the market.

4.2.4 Fan PWM Offset

This option is reserved for manual adjustment to the minimum fan speed curves. The valid range is from [**0** to 100] which stands for 0% to 100% PWM adding to the minimum fan speed. This feature is valid when Quiet Fan Idle Mode is at Enabled state. The default setting is [0]

4.2.5 Quiet Fan Idle Mode

This feature can be [Enabled] or **[Disabled]**. If enabled, the fans will either shift to a lower speed or stop when the aggregate sensor temperatures are satisfied, indicating the system is at ideal thermal/light loading conditions. When the aggregate sensor temperatures are not satisfied, the fans will shift back to normal control curves. If disabled, the fans will never shift into lower fan speeds or stop, regardless of whether the aggregate sensor temperatures are satisfied or not. The default setting is [Disabled]

Note: The above feature may or may not be in effect and depends on the actual thermal characteristics of the specified system.

4.2.6 Thermal Sensor Input for Fan Speed Control

The BMC uses various IPMI sensors as inputs to fan speed control. Some of the sensors are actual physical sensors and some are "virtual" sensors derived from calculations.

The following IPMI thermal sensors are used as input to fan speed control:

- Front Panel Temperature Sensor¹
- CPU Margin Sensors^{2,4,5}
- DIMM Thermal Margin Sensors^{2,4}
- Exit Air Temperature Sensor^{1, 7, 9}
- PCH Temperature Sensor^{3,5}
- On-board Ethernet Controller Temperature Sensors^{3, 5}
- Add-In Intel SAS/IO Module Temperature Sensors^{3, 5}
- PSU Thermal Sensor^{3, 8}
- CPU VR Temperature Sensors^{3, 6}
- DIMM VR Temperature Sensors^{3, 6}
- BMC Temperature Sensor^{3, 6}
- Global Aggregate Thermal Margin Sensors⁷
- Hot Swap Backplane Temperature Sensors
- I/O module Temperature Sensor (With option installed)
- Intel[®] ROC Module (With option installed)

Notes:

- 1. For fan speed control in Intel chassis
- 2. Temperature margin from throttling threshold
- 3. Absolute temperature
- 4. PECI value or margin value
- 5. On-die sensor
- 6. On-board sensor
- 7. Virtual sensor
- 8. Available only when PSU has PMBus
- 9. Calculated estimate

 High Level FSC Structure
 Policy

 RDNM/UDIMM
 Science

 Policy:
 CLTT/OLTT,

 Account Noise
 Science

 Privat Duart
 Resulting

 Privat Duart
 Resulting

The following diagram illustrates the fan speed control structure.

Figure 18. Fan Control Model

4.3 System Fans

Six managed dual rotor 40mm x 56mm system fans and an embedded fan for each installed power supply, provide the primary airflow for the system. The following table provides the volumetric air flow requirements for different 2U system configurations.

Table 21. 1U System Volumetric	Air Flow Requirements
--------------------------------	-----------------------

System Configuration	Air Flow Range (CFM)
All 1U system	11 – 80 CFM

The system is designed for fan redundancy when configured with two power supply modules. Should a single fan fail (system fan or power supply fan), platform management will adjust air flow of the remaining fans and manage other platform features to maintain system thermals. Fan redundancy is lost if more than one fan is in a failed state.


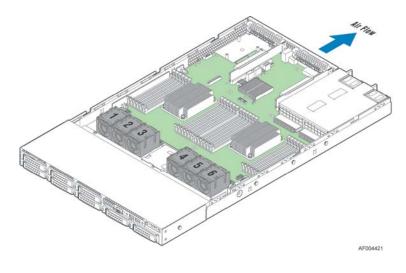


Figure 19. System Fan Identification

Each system fan is mounted inside its own plastic fan housing which include rotational vibration dampening features. The fan assemblies are held in place by fitting them over mounting pins coming up from the chassis base.

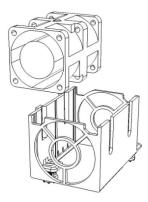

The system fan assembly is designed for ease of use and supports several features.

- System fans are NOT hot-swappable.
- Each fan and fan assembly is designed for tool-less insertion and extraction from the system. For
 instructions on fan replacement, see the Intel[®] Server System R1000GZ/GL Service Guide.
- Fan speed for each fan is controlled by integrated platform management as controlled by the integrated BMC on the server board. As system thermals fluctuate high and low, the integrated BMC firmware will increase and decrease the speeds to specific fans to regulate system thermals.
- Each fan has a tachometer signal that allows the Integrated BMC to monitor its status.
- Each fan has a10-pin wire harness that connects to a matching connector on the server board.

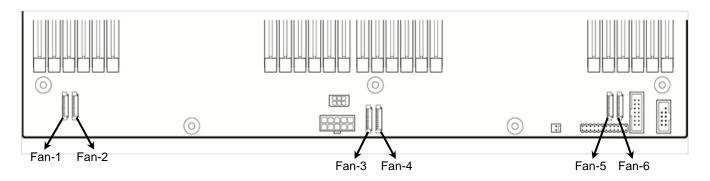


Figure 20. Server Board System Fan Connector Locations

SYS_FAN 1		SYS_FAN 2		SYS_FAN 3	
Signal Description Pin#		Signal Description	Pin#	Signal Description	Pin#
FAN_TACH1_IN	1	FAN_TACH3_IN	1	FAN_TACH5_IN	1
FAN_BMC_PWM0_R_BUF	2	FAN_BMC_PWM1_R_BUF	2	FAN_BMC_PWM2_R_BUF	2
P12V_FAN	3	P12V_FAN	3	P12V_FAN	3
P12V_FAN	4	P12V_FAN	4	P12V_FAN	4
FAN_TACH0_IN	5	FAN_TACH2_IN	5	FAN_TACH4_IN	5
GROUND	6	GROUND	6	GROUND	6
GROUND	7	GROUND	7	GROUND	7
FAN_SYS0_PRSNT_N	8	FAN_SYS1_PRSNT_N	8	FAN_SYS2_PRSNT_N	8
LED_FAN_FAULT0_R	9	LED_FAN_FAULT1_R	9	LED_FAN_FAULT2_R	9
LED_FAN0	10	LED_FAN1	10	LED_FAN2	10
SYS_FAN 4		SYS_FAN 5		SYS_FAN 6	
515_FAN 4		SYS_FAN 5		SYS_FAN 6	
Signal Description	Pin#	SYS_FAN 5 Signal Description	Pin#	SYS_FAN 6 Signal Description	Pin#
	Pin#	_	Pin#		Pin#
Signal Description		Signal Description		Signal Description	
Signal Description	1	Signal Description	1	Signal Description	1
Signal Description FAN_TACH7_IN FAN_BMC_PWM3_R_BUF	1 2	Signal Description FAN_TACH9_IN FAN_BMC_PWM4_R_BUF	1 2	Signal Description FAN_TACH11_IN FAN_BMC_PWM5_R_BUF	1 2
Signal Description FAN_TACH7_IN FAN_BMC_PWM3_R_BUF P12V_FAN	1 2 3	Signal Description FAN_TACH9_IN FAN_BMC_PWM4_R_BUF P12V_FAN	1 2 3	Signal Description FAN_TACH11_IN FAN_BMC_PWM5_R_BUF P12V_FAN	1 2 3
Signal DescriptionFAN_TACH7_INFAN_BMC_PWM3_R_BUFP12V_FANP12V_FAN	1 2 3 4	Signal DescriptionFAN_TACH9_INFAN_BMC_PWM4_R_BUFP12V_FANP12V_FAN	1 2 3 4	Signal Description FAN_TACH11_IN FAN_BMC_PWM5_R_BUF P12V_FAN P12V_FAN	1 2 3 4
Signal DescriptionFAN_TACH7_INFAN_BMC_PWM3_R_BUFP12V_FANP12V_FANFAN_TACH6_IN	1 2 3 4 5	Signal DescriptionFAN_TACH9_INFAN_BMC_PWM4_R_BUFP12V_FANP12V_FANFAN_TACH8_IN	1 2 3 4 5	Signal Description FAN_TACH11_IN FAN_BMC_PWM5_R_BUF P12V_FAN P12V_FAN FAN_TACH10_IN	1 2 3 4 5
Signal DescriptionFAN_TACH7_INFAN_BMC_PWM3_R_BUFP12V_FANP12V_FANFAN_TACH6_INGROUND	1 2 3 4 5 6	Signal DescriptionFAN_TACH9_INFAN_BMC_PWM4_R_BUFP12V_FANP12V_FANFAN_TACH8_INGROUND	1 2 3 4 5 6	Signal Description FAN_TACH11_IN FAN_BMC_PWM5_R_BUF P12V_FAN P12V_FAN FAN_TACH10_IN GROUND	1 2 3 4 5 6
Gignal DescriptionFAN_TACH7_INFAN_BMC_PWM3_R_BUFP12V_FANP12V_FANFAN_TACH6_INGROUNDGROUND	1 2 3 4 5 6 7	Signal DescriptionFAN_TACH9_INFAN_BMC_PWM4_R_BUFP12V_FANP12V_FANFAN_TACH8_INGROUNDGROUND	1 2 3 4 5 6 7	Signal Description FAN_TACH11_IN FAN_BMC_PWM5_R_BUF P12V_FAN P12V_FAN FAN_TACH10_IN GROUND GROUND	1 2 3 4 5 6 7

Table 22. System Fan Connector Pin-out

4.4 Power Supply Fans

Each installed power supply module includes one embedded (non-removable) 40-mm fan. It is responsible for airflow through the power supply module. This fan is managed by the fan control system. Should this fan fail, the power supply will continue to operate until its internal temperature reaches an upper critical limit. The power supply will be protected against over temperature conditions caused by loss of fan cooling or excessive ambient temperature. In an over-temperature protection condition, the power supply module will shutdown.

4.5 FRUSDR Utility

The purpose of the embedded platform management and fan control systems is to monitor and control various system features, and to maintain an efficient operating environment. Platform management is also used to communicate system health to supported platform management software and support mechanisms. The FRUSDR utility is used to program the server board with platform specific environmental limits, configuration data, and the appropriate sensor data records (SDRs), for use by these management features.

The FRUSDR utility must be run as part of the initial platform integration process before it is deployed into a live operating environment. It must be run with the system fully configured and each time the system configuration changes.

The FRUSDR utility for the given server platform can be run as part of the *Intel[®] Server Deployment Toolkit and Management* DVD that ships with each Intel server, or can be downloaded from http://downloadcenter.intel.com.

Note: The embedded platform management system may not operate as expected if the platform is not updated with accurate system configuration data. The FRUSDR utility must be run with the system fully configured and each time the system configuration changes for accurate system monitoring and event reporting.

5. System Storage and Peripheral Options

The Intel[®] Server System R1000GZ/GL product family has support for many storage device options, including:

- Hot Swap 2.5" Hard Disk Drives
- Hot Swap 3.5" Hard Disk Drives
- SATA Optical Drive
- Low Profile (2mm) eUSB Solid State Device (eUSB SSD)
- SATA DOMs

Support for different storage and peripheral device options will vary depending on the system SKU. This section will provide an overview of each available option.


5.1 2.5" Hard Disk Drive Support

The server is available with support for eight 2.5" hard disk drives as illustrated below.

	AE004126

Figure 21. 2.5" Hard Drive Bay Drive Configuration

The drive bay can support either SATA or SAS hard disk drives. Mixing of drive types within the hard drive bay is not supported. Hard disk drive type is dependent on the type of host bus controller used, SATA only or SAS. Each 2.5" hard disk drive is mounted to a drive carrier, allowing for hot swap extraction and insertion. Drive carriers have a latching mechanism that is used to extract and insert drives from the chassis, and lock the tray in place.

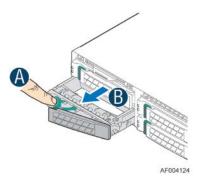

Light pipes integrated into the drive tray assembly direct light emitted from Amber drive status and Green activity LEDs located next to each drive connector on the backplane, to the drive tray faceplate, making them visible from the front of the system.



Intel[®] Server System R1000GZ/GL Product Family TPS

Table 23. Drive Status LED States


Off No access a		Off	No access and no fault
	Amber Solid On Hard Drive Fault has occured		Hard Drive Fault has occured
Blink RAID rebuild in pro		Blink	RAID rebuild in progress (1 Hz), Identify (2 Hz)

Table 24. Drive Activity LED States


	Condition	Drive Type	Behavior
	Power on with no drive activity	SAS	LED stays on
	Fower on with no drive activity	SATA	LED stays off
	Power on with drive activity	SAS	LED blinks off when processing a command
Green		SATA	LED blinks on when processing a command
		SAS	LED stays off
	Power on and drive spun down	SATA	LED stays off
	Power on and drive spinning up	SAS	LED blinks
	Fower on and unve spinning up	SATA	LED stays off

5.1.1 2.5" Drive Hot-Swap Backplane Overview

A backplane is attached to the back of the drive bay assembly.

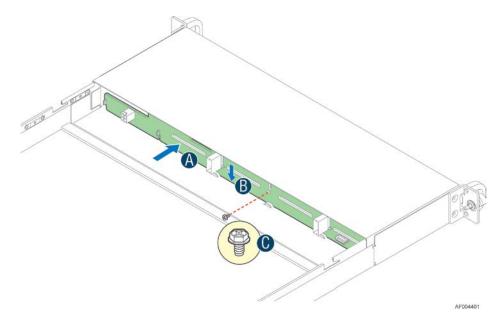


On the front side of each backplane are mounted eight hard disk drive interface connectors (A), each providing both power and I/O signals to attached hard disk drives.

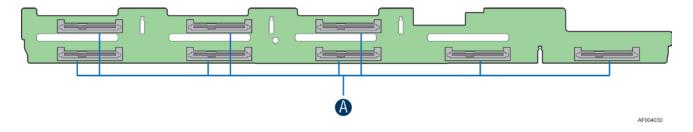

Intel[®] Server System R1000GZ/GL Product Family TPS

On the backside of each backplane are several connectors. The following illustration identifies each.

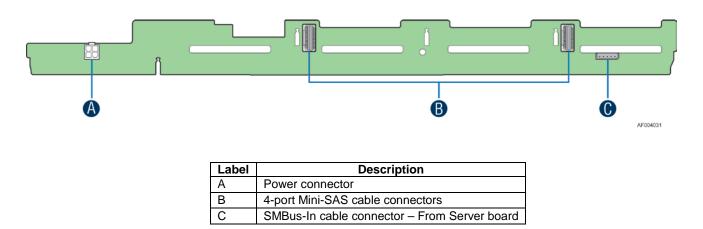

A – Power Harness Connector – The backplane includes a 2x2 connector supplying power to the backplane. Power is routed to the backplane via a power cable harness from the server board.

B – Multi-port Mini-SAS Cable Connectors – The backplane includes two multi-port mini-SAS cable connectors, each providing I/O signals for four SAS/SATA hard drives on the backplane. Cables can be routed from matching connectors on the server board, add-in SAS/SATA RAID cards, or optionally installed SAS expander cards.


C – SMBus Cable Connectors – The backplane includes a 1x5 cable connector used as a management interface to the server board.

5.1.2 Cypress* CY8C22545 Enclosure Management Controller

The backplane supports enclosure management using a Cypress* CY8C22545 Programmable System-on-Chip (PSoC*) device. The CY8C22545 drives the hard drive activity/fault LED, hard drive present signal, and controls hard drive power-up during system power-on.

5.2 3.5" Hard Disk Drive Support


The server is available with support for four 3.5" hard disk drives as illustrated below.



AF004129

Figure 22. 3.5" Hard Drive Bay Configuration

The drive bay can support either SATA or SAS hard disk drives. Mixing of drive types within the hard drive bay is not supported. Hard disk drive type is dependent on the type of host bus controller used, SATA only or SAS. Each 3.5" hard disk drive is mounted to a drive tray, allowing for hot swap extraction and insertion. Drive trays have a latching mechanism that is used to extract and insert drives from the chassis, and lock the tray in place.

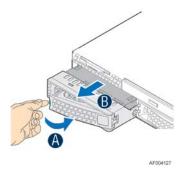

Note: To maintain system thermals, all drive bays must be populated with a drive tray mounted with a hard disk drive, SSD, or supplied drive blank.

The provided 3.5" drive blank can also be used as a 2.5" device bracket, allowing a 2.5" SSD to be installed into a 3.5" device carrier.


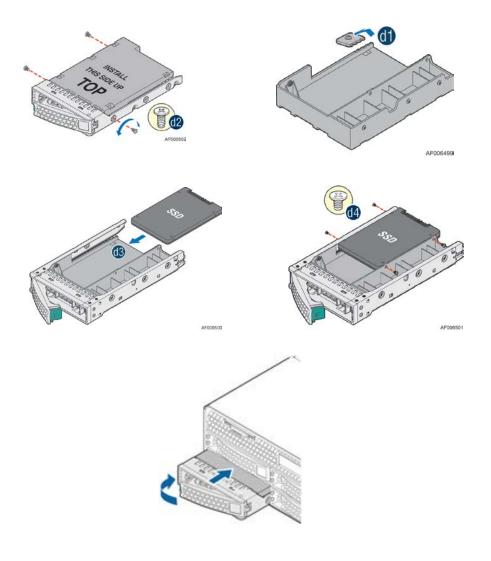


Figure 23. Option to install 2.5" SSD into a 3.5" drive blank

Note: Due to degraded performance and reliability concerns, the use of the 3.5" drive blank as a 2.5" device bracket is intended to support SSD type storage devices only. Installing a 2.5" hard disk drive into the 3.5" drive blank cannot be supported.

Light pipes integrated into the drive tray assembly direct light emitted from Amber drive status and Green activity LEDs located next to each drive connector on the backplane, to the drive tray faceplate, making them visible from the front of the system.




	Off	No access and no fault
Amber	Solid On	Hard Drive Fault has occured
	Blink	RAID rebuild in progress (1 Hz), Identify (2 Hz)

	Condition	Drive Type	Behavior
	Power on with no drive activity	SAS	LED stays on
	Fower on with no drive activity	SATA	LED stays off
	Power on with drive activity Power on and drive spun down Power on and drive spinning up	SAS	LED blinks off when processing a command
Green		SATA	LED blinks on when processing a command
		SAS	LED stays off
		SATA	LED stays off
		SAS	LED blinks
	Power on and drive spinning up	SATA	LED stays off


Intel[®] Server System R1000GZ/GL Product Family TPS

5.2.1 3.5" Drive Hot-Swap Backplane Overview


The backplane mounts to the back of the drive bay assembly.

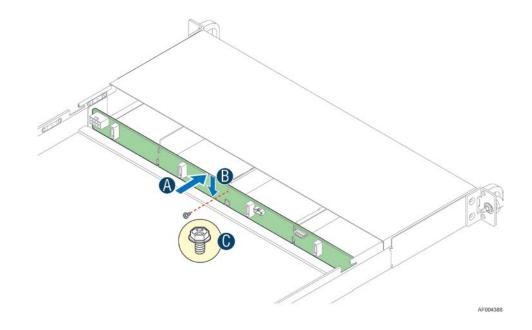

On the front side of each back plane are mounted four hard disk drive interface connectors (A), each providing both power and I/O signals to attached hard disk drives.



On the backside of each backplane are several connectors. The following illustration identifies each.

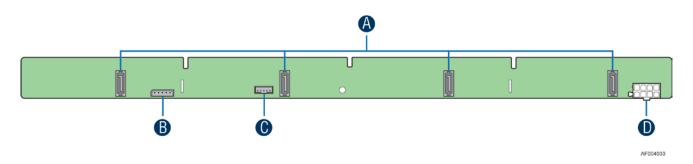

Label	Description
А	7-pin SATA/SAS I/O connectors
В	SMBus-In cable connector – From Server board
С	SGPIO connector
D	Power connector

A – 7-pin SATA I/O Connectors – The backplane has four 7-pin SATA/SAS I/O connectors, one for each hard drive. A single multi-connector cable is routed from the backplane to a four port mini-SAS connector on the server board or other optionally installed SATA/SAS host bus adapter.

B –. SMBus Cable Connectors – The backplane includes a 1x5 cable connector used as a management interface to the server board

C-. SGPIO Cable Connector – The SGPIO connector is a management interface used to control the hard drive fault LEDs on the backplane. The SGPIO signals are routed through a multi-connectors cable that is routed to a four port mini-SAS connector on the server board or other optionally installed SATA/SAS host bus adapter.

D - Power Harness Connector - The backplane includes a 2x2 connector supplying power to the backplane. Power is routed to the backplane via a power cable harness from the server board

5.2.2 Cypress* CY8C22545 Enclosure Management Controller

The backplanes support enclosure management using a Cypress* CY8C22545 Programmable System-on-Chip (PSoC*) device. The CY8C22545 drives the hard drive activity/fault LED, hard drive present signal, and controls hard drive power-up during system power-on.

5.3 Optical Drive Support

Systems configured with four 3.5" hard drive bays also include support for an optical drive bay 'A' as illustrated below.





Figure 24. Optical Drive Support


For systems that support eight 2.5" hard drives, the front I/O Panel, which provides video and USB ports, can be replaced with a SATA optical drive.

A 2x3 pin power connector on the server board labeled "ODD/SSD PWR", is designed to provide power to the optical drive. SATA signals for the optical drive are cabled from either of the white 7-pin single port AHCI SATA connectors on the server board.

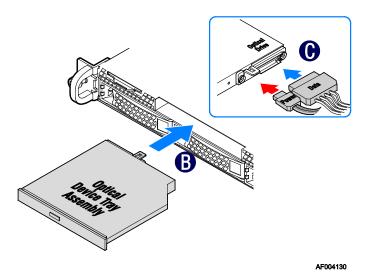

5.4 eUSB SSD Support

The system provides support for a low profile eUSB SSD storage device. A 2mm 2x5-pin connector labeled "eUSB SSD" near the rear I/O section of the server board is used to plug this small flash storage device into.

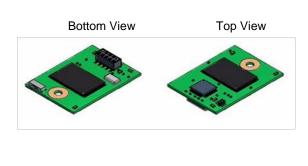

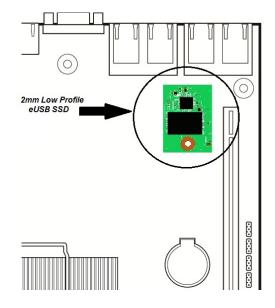


Figure 25. Low Profile eUSB SSD Support

eUSB features include:

- 2 wire small form factor Universal Serial Bus 2.0 (Hi-Speed USB) interface to host
- Read Speed up to 35 MB/s and write Speed up to 24 MB/s
- Capacity range from 256GB to 32GB
- Support USB Mass Storage Class requirements for Boot capability

5.5 SATA DOM Support

The system has support for up to two vertical low profile Innodisk* SATA Disk-on-Module (DOM) devices.

Each installed SATA DOM plugs directly into one of the white 7-pin AHCI SATA ports on the server board, which provide both power and I/O signals.



Figure 26. InnoDisk* Low Profile SATA DOM

SATA DOM features include:

- Ultra Low Profile
- High speed and capacity
- Built-in VCC at pin 7

Note: Visit <u>http://www.intel.com/support</u> for a list of supported InnoDisk SATA DOM parts.

6. Storage Controller Options Overview

The server platform supports many different embedded and add-in SATA/SAS controller and SAS Expander options to provide a large number of possible storage configurations. This section will provide an overview of the different options available.

6.1 Embedded SATA / SAS Controller support


Integrated on the server board is an Intel[®] C602 chipset that provides embedded storage support via two integrated controllers: AHCI and SCU.

The server board (with no additional storage options installed) will support up to six SATA ports:

- Two 6 Gb/sec SATA ports routed from the AHCI controller to two white 7-pin SATA ports labeled "SATA-0" and "SATA-1" on the server board. Embedded RAID levels 0 and 1 supported.
- Four 3 Gb/sec SATA ports routed from the SCU controller to the multi-port mini-SAS connector labeled "SCU_0 (0-3)".

Note: The mini-SAS connector labeled "SCU_1 (4-7)" is NOT functional by default and is only enabled with the addition of an Intel[®] RAID C600 Upgrade Key option supporting 8 SAS/SATA ports.

With the addition of one of several available Intel[®] RAID C600 Upgrade Keys, the system is capable of supporting additional embedded SATA, SAS, and software RAID options. Upgrade keys install onto a 4-pin connector on the server board labeled "STOR_UPG_KEY".

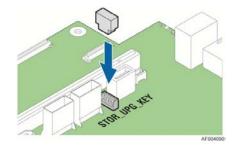

The following table identifies available upgrade key options and their supported features.

Table 25. Intel® RAID C600 Upgrade Key Options

Intel® RAID C600 Upgrade Key Options (Intel Product Codes)	Key Color	Description
Default – No option key installed	N/A	4 Port SATA with Intel® ESRT RAID 0,1,10 and Intel® RSTe RAID 0,1,5,10
RKSATA4R5	RIACK	4 Port SATA with Intel® ESRT2 RAID 0,1, 5, 10 and Intel® RSTe RAID 0,1,5,10
RKSATA8	Blue	8 Port SATA with Intel® ESRT2 RAID 0,1, 10 and Intel® RSTe RAID 0,1,5,10
RKSATA8R5	WYNITA	8 Port SATA with Intel® ESRT2 RAID 0,1, 5, 10 and Intel® RSTe RAID 0,1,5,10
RKSAS4	Green	4 Port SAS with Intel® ESRT2 RAID 0,1, 10 and Intel® RSTe RAID 0,1,10
RKSAS4R5	Yellow	4 Port SAS with Intel® ESRT2 RAID 0,1, 5, 10 and Intel® RSTe RAID 0,1,10
RKSAS8	Orange	8 Port SAS with Intel® ESRT2 RAID 0,1, 10 and Intel® RSTe RAID 0,1,10
RKSAS8R5	Purple	8 Port SAS with Intel® ESRT2 RAID 0,1, 5, 10 and Intel® RSTe RAID 0,1,10

Additional information for the on-board RAID features and functionality can be found in the *Intel[®] RAID Software Users Guide* (Intel Document Number D29305-015).

6.2 Embedded Software RAID Support

The system includes support for two embedded software RAID options:

- Intel[®] Embedded Server RAID Technology 2 (ESRT2) based on LSI* MegaRAID SW RAID technology
- Intel[®] Rapid Storage Technology (RSTe)

Using the <F2> BIOS Setup Utility, accessed during system POST, options are available to enable/disable SW RAID, and select which embedded software RAID option to use.

6.2.1 Intel[®] Embedded Server RAID Technology 2 (ESRT2)¹

Features of the embedded software RAID option Intel[®] Embedded Server RAID Technology 2 (ESRT2) include the following:

- Based on LSI* MegaRAID Software Stack
- Software RAID, with system providing memory and CPU utilization
- Supported RAID Levels 0,1,5,10
 - 4 & 8 Port SATA RAID 5 support provided with appropriate Intel® RAID C600 Upgrade Key
 - 4 & 8 Port SAS RAID 5 support provided with appropriate Intel® RAID C600 Upgrade Key
- Maximum drive support = 8
 - NOTE: ESRT2 has no SAS Expander Support
- Open Source Compliance = Binary Driver (includes Partial Source files)
 - Meta data is also recognized by MDRAID layer in Linux (No direct Intel support, not validated by Intel)
- OS Support = Windows 7*, Windows 2008*, Windows 2003*, RHEL*, SLES*, other Linux variants using partial source builds.
- Utilities = Windows* GUI and CLI, Linux GUI and CLI, DOS CLI, and EFI CLI

6.2.2 Intel[®] Rapid Storage Technology (RSTe)¹

Features of the embedded software RAID option Intel[®] Rapid Storage Technology (RSTe) include the following:

- Software RAID with system providing memory and CPU utilization
- Supported RAID Levels 0,1,5,10
 - 4 Port SATA RAID 5 available standard (no option key required)
 - o 8 Port SATA RAID 5 support provided with appropriate Intel[®] RAID C600 Upgrade Key
 - No SAS RAID 5 support
- Maximum drive support = 32 (in arrays with 8 port SAS), 16 (in arrays with 4 port SAS), 128 (JBOD)
- Open Source Compliance = Yes (uses MDRAID)
- MDRAID supported in Linux. (Does not require a driver)
- OS Support = Windows 7*, Windows 2008*, Windows 2003*, RHEL*¹, SLES*¹, VMWare 5.x.
- Utilities = Windows* GUI and CLI, Linux CLI, DOS CLI, and EFI CLI
- <u>NOTE:</u> Boot drive support to targets attached through SAS expander card requires BIOS update. Must connect expander to SCU_0 and drives to ports 0&1 on RES2SV240 expander or A&B on RES2CV**0 for boot support.

Note 1) See latest product errata list for support status. Product Errata are documented in the Intel[®] Server Board S2600GZGL, Intel[®] Server System R1000GZGL, Intel[®] Server System R2000GZGL Monthly Specification Update which can be downloaded from http://www.intel.com/support.

Visit <u>http://www.intel.com/support</u> for a list of supported operating systems.

6.3 Intel[®] Integrated RAID Module Support (Available Option)

The system has support for many Intel and 3rd party PCIe add-in RAID adapters which can be installed in available PCIe add-in cards slots. For system configurations with limited add-in card slot availability, an optional Intel[®] Integrated RAID mezzanine module can be installed onto a high density 80-pin connector (labeled "SAS Module") on the server board.

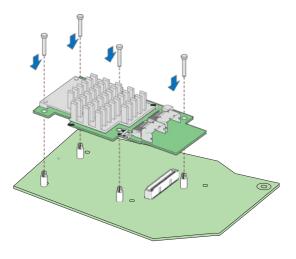


Table 26. Supported Intel[®] Integrated RAID Modules

External Name	Description	Product Code
Intel [®] Integrated RAID Module RMS25CB080	8 Port SAS-2.1, Full HW RAID, 1GB, IOM Slot RAID Levels 0,1,10, 5, 50, 6, 60	RMS25CB080
Intel [®] Integrated RAID Module RMS25CB040	4 Port SAS-2.1, Full HW RAID, 1GB, IOM Slot RAID Levels 0,1,10, 5, 50, 6, 60	RMS25CB040
Intel [®] Integrated RAID Module RMT3CB080	8 Port SATA-3, Full HW RAID, 512MB, IOM Slot RAID Levels 0,1,10, 5, 50, 6, 60	RMT3CB080
Intel [®] Integrated RAID Module RMS25JB080	8 Port SAS-2.1, Entry-level HW RAID, IOM Slot RAID Levels 0,1,1E	RMS25JB080
Intel [®] Integrated RAID Module RMS25JB040	4 Port SAS-2.1, Entry-level HW RAID, IOM Slot RAID Levels 0,1,1E	RMS25JB040

Features of this option include:

- Custom on-board system interface connector. Does not utilize a PCIe slot on the riser cards
- SKU options to support full or entry level hardware RAID
- 4 or 8 port, SAS/SATA, or SATA-only Module options
- ROC SKU options to support 512MB or 1GB embedded memory
- ROC support for the Intel[®] Raid Maintenance Free Backup Unit (**AXXRMFBU2**)
- Support for RAID Battery Backup Unit (AXXRBBU9)

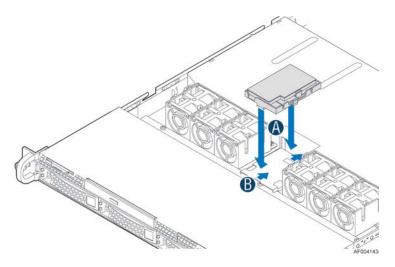


Figure 27. AXXBBU09 and AXXRFMBU2 Installation


For additional product information, please reference the following Intel document:

- Intel Integrated RAID Module RMS25PB040, RMS25PB080, RMS25CB040, and RMS25CB080 Hardware / Installation Users Guide
- Intel Integrated RAID Module RMT3PB080 and RMT3CB080 Hardware / Installation Users Guide
- Intel Integrated RAID Module RMS25KB040, RMS25KB080, RMS25JB040, and RMS25JB080
 Hardware / Installation Users Guide
- Intel[®] Raid Maintenance Free Backup Unit AXXRMFBU2 User's Guide

7. Front Control Panel and I/O Panel Overview

All system configurations will include a Control Panel on the front of the system providing push button system controls and LED indicators for several system features. Systems configured with four 3.5" hard drive bays will also include an I/O Panel providing additional system I/O features. This section describes the features and functions of both front panel options.

7.1 I/O Panel Features



Label	Description
А	Video connector
В	USB ports

Figure 28. Front I/O Panel Features


A – Video connector – The front I/O Panel video connector gives the option of attaching a monitor to the front of the system. When BIOS detects that a monitor is attached to the front video connector, it disables the video signals routed to the on-board video connector on the back of the system. Video resolutions from the front video connector may be lower than that of the rear on-board video connector. A short video cable should be used for best resolution. The front video connector is cabled to a 2x7 header on the server board labeled "FP Video".

B – **USB Ports** – The front I/O panel includes two USB ports. The USB ports are cabled to a 2x5 connector on the server board labeled "FP USB".

Note – On systems that support 8x2.5" hard drives, the I/O Panel can be replaced with a SATA optical drive.

7.2 Control Panel Features

The system includes a control panel that provides push button system controls and LED indicators for several system features. Depending on the hard drive configuration, the front control panel may come in either of two formats; however, both provide the same functionality. This section will provide a description for each front control panel feature.

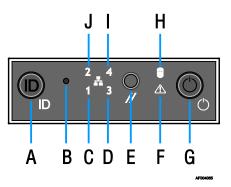

Label	Description	Label	Description
А	System ID Button w/Integrated LED	F	System Status LED
В	NMI Button (recessed, tool required for use)	G	Power / Sleep Button w/Integrated LED
С	NIC-1 Activity LED	Н	Hard Drive Activity LED
D	NIC-3 Activity LED	I	NIC-4 Activity LED
Е	System Cold Reset Button	J	NIC-2 Activity LED

Figure 29. Front Control Panel Features

A – System ID Button w/Integrated LED – Toggles the integrated ID LED and the Blue server board ID LED on and off. The System ID LED is used to identify the system for maintenance when installed in a rack of similar server systems. The System ID LED can also be toggled on and off remotely using the IPMI "Chassis Identify" command which will cause the LED to blink for 15 seconds.

B – **NMI Button** – When the NMI button is pressed, it puts the server in a halt state and issues a nonmaskable interrupt (NMI). This can be useful when performing diagnostics for a given issue where a memory download is necessary to help determine the cause of the problem. To prevent an inadvertent system halt, the actual NMI button is located behind the Front Control Panel faceplate where it is only accessible with the use of a small tipped tool like a pin or paper clip.

C, **D**, **I** and **J** – **Network Activity LEDs** – The Front Control Panel includes an activity LED indicator for each on-board Network Interface Controller (NIC). When a network link is detected, the LED will turn on solid. The LED will blink once network activity occurs at a rate that is consistent with the amount of network activity that is occurring.

E – System Cold Reset Button – When pressed, this button will reboot and re-initialize the system.

Intel® Server System R1000GZ/GL Product Family TPS

F – System Status LED – The System Status LED is a bi-color (Green/Amber) indicator that shows the current health of the server system. The system provides two locations for this feature; one is located on the Front Control Panel, the other is located on the back edge of the server board, viewable from the back of the system. Both LEDs are tied together and will show the same state. The System Status LED states are driven by the on-board platform management sub-system. The following table provides a description of each supported LED state.

Color	State	Criticality	Description
Off	System is	Not ready	1. System is powered off (AC and/or DC).
	not		2. System is in EuP Lot6 Off Mode.
	operating		3. System is in S5 Soft-Off State.
			4. System is in S4 Hibernate Sleep State.
Green	Solid on	Ok	Indicates that the System is running (in S0 State) and its status is 'Healthy'.
			The system is not exhibiting any errors. AC power is present and BMC has
			booted and manageability functionality is up and running.
Green	~1 Hz blink	Degraded - system	System degraded:
		is operating in a	1. Redundancy loss, such as power-supply or fan. Applies only if the
		degraded state	associated platform sub-system has redundancy capabilities.
		although still	2. Fan warning or failure when the number of fully operational fans is
		functional, or	more than minimum number needed to cool the system.
		system is	3. Non-critical threshold crossed – Temperature (including HSBP temp),
		operating in	voltage, input power to power supply, output current for main power rail
		a redundant state	from power supply and Processor Thermal Control (Therm Ctrl)
		but with an	Sensors.
		impending failure	4. Power supply predictive failure occurred while redundant power supply
		warning	configuration was present.5. Unable to use all of the installed memory (one or more DIMMs
			failed/disabled but functional memory remains available)
			6. Correctable Errors over a threshold and migrating to a spare DIMM
			(memory sparing). This indicates that the user no longer has spared
			DIMMs indicating a redundancy lost condition. Corresponding DIMM
			LED lit.
			7. Uncorrectable memory error has occurred in memory Mirroring Mode,
			causing Loss of Redundancy.
			8. Correctable memory error threshold has been reached for a failing
			DDR3 DIMM when the system is operating in fully redundant RAS
			Mirroring Mode.
			9. Battery failure.
			10. BMC executing in uBoot. (Indicated by Chassis ID blinking at Blinking
			at 3Hz). System in degraded state (no manageability). BMC uBoot is
			running but has not transferred control to BMC Linux. Server will be in
			this state 6-8 seconds after BMC reset while it pulls the Linux image
			into flash
			11. BMC booting Linux. (Indicated by Chassis ID solid ON). System in
			degraded state (no manageability). Control has been passed from
			BMC uBoot to BMC Linux itself. It will be in this state for ~10-~20
			seconds.
			 BMC Watchdog has reset the BMC. Power Unit sensor offset for configuration error is asserted.
			14. HDD HSC is off-line or degraded.
Amber	~1 Hz blink	Non-critical -	Non-fatal alarm – system is likely to fail:
AINDEI		System is	1. Critical threshold crossed – Voltage, temperature (including HSBP
		operating in a	temp), input power to power supply, output current for main power rail
		degraded state	from power supply and PROCHOT (Therm Ctrl) sensors.
		with an impending	2. VRD Hot asserted.
		failure warning,	3. Minimum number of fans to cool the system not present or failed
		although still	4. Hard drive fault
		functioning	5. Power Unit Redundancy sensor – Insufficient resources offset
		5	(indicates not enough power supplies present)
			6. In non-sparing and non-mirroring mode if the threshold of correctable
			errors is crossed within the window
			7. Correctable memory error threshold has been reached for a failing
			DDR3 DIMM when the system is operating in a non-redundant mode

Table 27. System Status LED State Definitions

Intel® Server System R1000GZ/GL Product Family TPS

Amber	Solid on	Critical, non-	Fatal alarm – system has failed or shutdown:
		recoverable -	1. CPU CATERR signal asserted
		System is halted	2. MSID mismatch detected (CATERR also asserts for this case).
		-	3. CPU 1 is missing
			4. CPU Thermal Trip
			5. No power good – power fault
			 DIMM failure when there is only 1 DIMM present and hence no good memory present¹.
			7. Runtime memory uncorrectable error in non redundant mode.
			8. DIMM Thermal Trip or equivalent
			9. SSB Thermal Trip or equivalent
			10. CPU ERR2 signal asserted
			11. BMC/Video memory test failed. (Chassis ID shows blue/solid-on for this condition)
			12. Both uBoot BMC FW images are bad. (Chassis ID shows blue/solid-on
			for this condition)
			13. 240VA fault
			14. Fatal Error in processor initialization:
			a. Processor family not identical
			b. Processor model not identical
			c. Processor core/thread counts not identical
			 Processor cache size not identical
			e. Unable to synchronize processor frequency
			 Unable to synchronize QPI link frequency

G – **Power/Sleep Button** – Toggles the system power on and off. This button also functions as a sleep button if enabled by an ACPI compliant operating system. Pressing this button will send a signal to the integrated BMC, which will either power on or power off the system. The integrated LED is a single color (Green) and is capable of supporting different indicator states as defined in the following table.


State	Power Mode	LED	Description
Power-off	Non-ACPI	Off	System power is off, and the BIOS has not initialized the chipset.
Power-on	Non-ACPI	On	System power is on
S5	ACPI	Off	Mechanical is off, and the operating system has not saved any context to the hard disk.
S4	ACPI	Off	Mechanical is off. The operating system has saved context to the hard disk.
S3-S1	ACPI	Slow blink ¹	DC power is still on. The operating system has saved context and gone into a level of low-power state.
S0	ACPI	Steady on	System and the operating system are up and running.

H- Drive Activity LED - The drive activity LED on the front panel indicates drive activity from the on-board hard disk controllers. The server board also provides a header giving access to this LED for add-in controllers.

8. Intel[®] Local Control Panel

The Intel[®] Local Control Panel option (Intel Product Order Code – **A1U2ULCP**) utilizes a combination of control buttons and LCD display to provide system accessibility and monitoring.





Label	Description	Functionality
А	LCD Display	one line 18 character display
В	Left Control Button	moves the cursor backward one step or one character
С	"Enter" Button	selects the menu item highlighted by the cursor
D	Right Control Button	moves the cursor forward one step or one character
Е	USB 2.0 Port	
F	USB 2.0 Port	

Figure 30. Intel[®] Local Control Panel

The LCD (Local Control Display) is a one line character display that resides on the front panel of the chassis. It can display a maximum of 18 characters at a time. This device also contains 3 buttons (Left, Right and Enter). The user can select the content that needs to be displayed on the LCD screen by operating these buttons.

For a complete description of the LCP accessory, please reference the Intel® Local Control Panel for EPSD Platforms Based on Intel® Xeon® Processor E5 4600/2600/2400/1600/1400 Product Families Technical Product Specification. (Intel document order number G83726-001).

9. PCI Riser Card Support

The system includes two riser card slots on the server board. Available riser cards can be used in either slot. This section will provide an overview of each available riser card and describe the server board features and architecture supporting them.

9.1 Riser Slot Overview

The server board includes two riser card slots labeled "RISER 1" and "RISER 2". The following diagram illustrates the general server board architecture supporting these two slots.

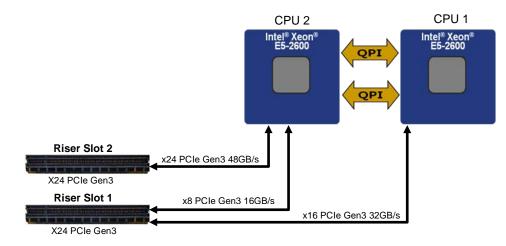


Figure 31. Riser Slot Architecture

Riser slot-1 includes a total of 24 PCIe Gen3 bus lanes; 16 routed from CPU-1 and 8 routed from CPU-2. Riser slot-2 has 24 PCIe Gen3 bus lanes routed from CPU-2. Riser cards for each riser slot are identical. In order to support the maximum number of add-in cards, both CPU-1 and CPU-2 must be populated. <u>With only CPU-1 installed</u>, riser slot-2 has no functionality.

NOTE: The riser card slots on the server board are designed to support riser cards only. Inserting a PCIe addin card directly into the riser card slot on the server board will result in damage to the server board, the add-in card, or both. PCIe add-in cards should only be installed into a supported riser card assembly.

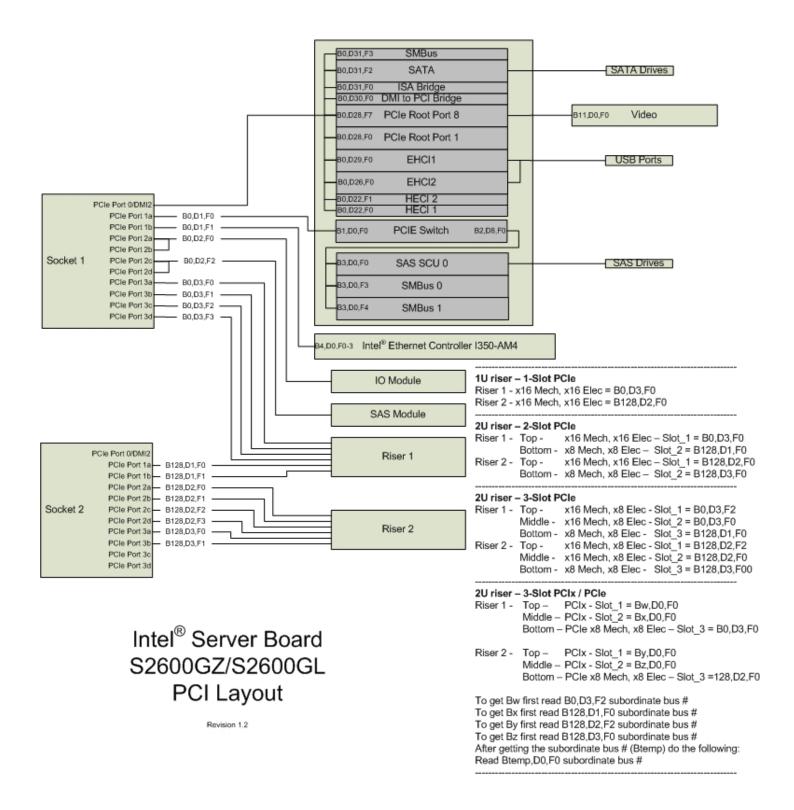


Figure 32. Intel® Server Board S2600GZ/GL PCI Bus Layout Diagram

9.2 Riser Card Support

The system supports two single slot PCIe x16 (x16 lanes, x16 slot) riser cards. Each riser card is mounted to a bracket assembly which is inserted into a riser card slot on the server board.

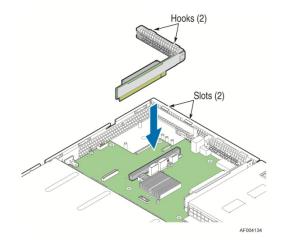


Figure 33. Add-in Card Support

Each riser card assembly has support for a single full height, ½ length PCIe add-in card. However, riser card #2 may be limited to ½ length, ½ height add-in cards if either of the two SCU mini-SAS connectors on the server board are used.

Note: Add-in cards that exceed the PCI specification for ½ length PCI add-in cards (167.65mm or 6.6in) may interfere with other installed devices on the server board.

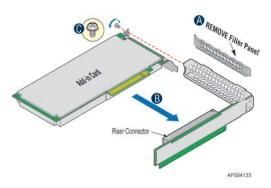


Figure 34. Riser Card Assembly

9.3 PCIe Add-in card support

The PCIe sub-system of the server board has support for PCIe add-in cards that follow the PCIe Gen1, Gen2 and Gen3 specifications. However, the performance of some PCIe Gen3 cards may be forced to operate at Gen2 speeds due to electrical signaling characteristic limitations that exist between the server board and some PCIe Gen 3 add-in cards.

Intel has implemented the following PCIe Gen 3 support model for this generation of its server boards and server systems.

9.3.1 PCIe Gen3 support – Systems configured with an Intel[®] Xeon[®] processor E5-2600 product family

For a server system configured with one or more Intel[®] Xeon[®] processor E5-2600 product family, the system BIOS will use an embedded PCIe Gen 3 compatibility list which identifies all PCIe Gen 3 add-in cards tested by Intel to operate reliably at Gen 3 speeds on the given server system. During POST, the system BIOS will compare installed PCIe Gen 3 add-in cards with those included in the embedded compatibility list. If BIOS matches an installed card to one listed on the compatibility list, the BIOS will configure the device to operate at PCIe Gen 3 speeds. If the BIOS cannot match an installed PCIe add-in card with any device included in the list, the BIOS will force the device to operate at PCIe Gen2 speeds.

Note: The latest available BIOS should be installed on the system to ensure the most up to date embedded PCIe Gen 3 compatibility list is being used.

Visit the following Intel web site for a list of Intel tested PCIe Gen 3 compatible cards included in the BIOS embedded compatibility list – <u>http://intel.com/support/motherboards/server/sb/CS-034157.htm</u>

9.3.2 PCIe Gen3 support – Systems configured with an Intel® Xeon® processor E5-2600 V2 product family

For a server system configured with one or more Intel[®] Xeon[®] processor E5-2600 V2 product family, the system BIOS will configure all installed PCIe Gen 3 compatible add-in cards to operate at PCIe Gen 3 speeds by default. For a list of Intel tested PCIe Gen 3 add-in cards, review the Tested Hardware and OS list (THOL) using Intel's Server Configurator Tool at the following web site:

https://serverconfigurator.intel.com

The following tables identify the PCIe port routing for each add-in card slot on all supported riser cards as installed in either Riser Slot # 1 or Riser Slot #2. Note the specific processor, PCIe port ID, and number of PCIe bus lanes supporting each add-in card slot.


Depending on the riser card installed, specific PCIe ports routed from the processor IIO module provide the PCIe interface to each riser card slot.



The "Processor PCIe Link Speed" menu will display selectable options for each installed processor, identified as "Socket #", where # identifies the CPU number.

Using information provided in *the following tables, s*elect the processor associated with the PCIe port to be configured.

Table 29. Riser	Slot #1 - P	Cle Port Routing
-----------------	-------------	-------------------------

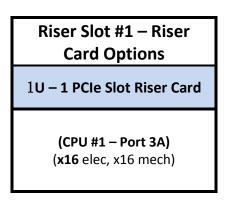

Intel[®] Server System R1000GZ/GL Product Family TPS

Table 30. Riser Slot #2 – PCle Port Routing

Riser Slot #2 – Riser Card Options
1U – 1 PCIe Slot Riser Card
(CPU #2 – Port 2A) (x16 elec, x16 mech)

The "Socket # PCIe Ports Link Speed" window displays selectable options for each configurable PCIe port associated with the current system configuration.

Note: The illustrations below are for reference purposes only. Actual PCIe port data displayed in the "Socket # PCIe Ports Link Speed" window may be different than what is shown here.

Using the arrow keys, move the cursor down to the PCIe port to be changed.

Socket 1. DHI Socket 1. PCIe Port 1a Socket 1. PCIe Port 2a Socket 1. PCIe Port 3a Socket 1. PCIe Port 3c	[Gen 2 (5 6T/s)] [Gen 3 (8 6T/s)] [Gen 3 (8 6T/s)] [Gen 3 (8 6T/s)] [Gen 3 (8 6T/s)]	
		**: Select Screen 14: Select Item Enter: Select */-: Change Opt. F1: General Help F9: Setup Defaults F10: Save ESC: Exit

Once a port is selected, a port configuration window appears and provides options to configure the specified PCIe port to operate at a specified PCIe Gen level.

 Aptio Setup Utility - Copyright (C) 2010 - 2013 American Hegatrends, Inc.

 Socket 1 PCIe Ports Link Speed

 Socket 1. PCIe Port 1a

 Socket 1. PCIe Port 2a

 Socket 1. PCIe Port 3a

 Gen 3 (B GT/s)1

 Socket 1. PCIe Port 3c

 Gen 1 (2.5 GT/s)

 Gen 3 (B GT/s)1

 Socket 1. PCIe Port 3c

 Socket 1. PCIe Port 3c

 Gen 1 (2.5 GT/s)

 Gen 3 (B GT/s)1

 *: Select Screen

 : Select Item

 . Socket 1. PCIe Port 1a

 Gen 3 (B GT/s)

 *: Select Screen

 : Select Item

 . Socket 1. PCIe Port 1a

 Gen 3 (B GT/s)

 *: Select Item

 . Socket 1. PCIe Port 1a

 Benzer 2 (S GT/s)

 Gen 3 (B GT/s)

 PS: Setup Defaults

 Fl0: Save ESC: Exit

 PS: Setup Defaults

 PD: Save ESC: Exit

 Version 2.14.1219. Copyright (C) 2010 - 2013 American Bepatrends. Inc.


Intel[®] Server System R1000GZ/GL Product Family TPS

Select the desired PCIe Gen level. After making all desired changes in BIOS setup, be sure to save the changes and reboot the system.

10. Mezzanine I/O Module Support

10.1 I/O Module Support

In addition to the embedded I/O features of the server board, and those available with the addition of a PCIe add-in card, the server also provides concurrent support of an optionally installed mezzanine I/O module.

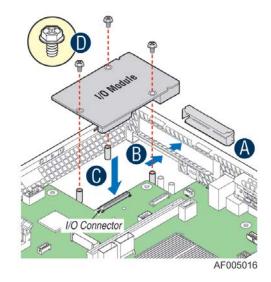

The following table lists the Intel[®] I/O modules available for this server.

Product Code & iPN	Description
AXX10GBNIAIOM	Dual SFP+ port 10GbE IO Module based on Intel® 82599 10GbE Ethernet Controller
AXX10GBTWLIOM	Dual RJ-45 port 10GBase-T I/O Module based on Intel [®] Ethernet Controller x540
AXX1FDRIBIOM	Single Port FDR 56GT/S speed InfiniBand module with QSFP connector
AXX2FDRIBIOM	Dual port FDR 56GT/S speed infiniband module with QSFP connector
AXX4P1GBPWLIOM	Quad Port 1GbE I/O Module based on Intel® Ethernet Controller I350

10.2 Intel[®] Remote Management Module 4 (RMM4) Lite and Management NIC Support

The system has support for the Intel[®] Remote Management Module 4 (RMM4). Additional information for the RMM4 option can be found in the following documents: Intel[®] Remote Management Module 4 Technical Product Specification and the Intel[®] Remote Management Module 4 and Integrated BMC Web Console Users Guide.

Intel Product Code	Description	Kit Contents	Benefits
AXXRMM4LITE	Intel® Remote Management	RMM4 Lite	Enables KVM & media
	Module 4 Lite	Activation Key	redirection via onboard NIC
AXXRMM4R	Intel® Remote Management	RMM4 Lite	Dedicated NIC for management
	Module 4	Activation Key	traffic. Higher bandwidth
		Dedicated NIC Port	connectivity for KVM & media
		Module	Redirection with 1Gbe NIC.

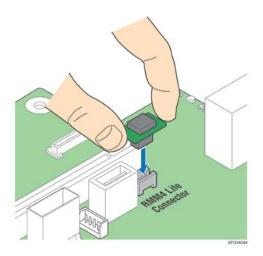


Figure 35. Intel® RMM4 Lite Activation Key Installation

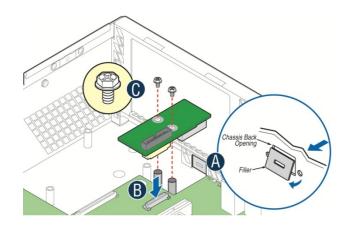


Figure 36. Intel® RMM4 Dedicated Management NIC Installation

Table 31. Enabling Advanced	Management Features
-----------------------------	---------------------

Manageability Hardware	Benefits		
Intel [®] Integrated BMC	Comprehensive IPMI based base manageability features		
Intel [®] Remote Management Module 4 – Lite Package contains one module – 1- Key for advance Manageability features.	No dedicated NIC for management Enables KVM & media redirection from onboard NIC		
Intel [®] Remote Management Module 4 Package includes 2 modules – 1 - key for advance features 2 - Dedicated NIC (1Gbe) for management	Dedicated NIC for management traffic. Higher bandwidth connectivity for KVM & media Redirection with 1Gbe NIC.		

- For further RMM4 information, please refer to the following documents:
 Intel[®] Server Board S2600GZ/GL Technical Product Specification
 Intel[®] Remote Management Module 4 Technical Product Specification
 Intel[®] Remote Management Module 4 and Integrated BMC Web Console Users Guide

Appendix A: Integration and Usage Tips

This section provides a list of useful information that is unique to the Intel[®] Server System R1000GZ/GL Product Family and should be kept in mind while configuring your server system.

- Only the Intel[®] Xeon[®] processor E5-2600 and the Intel[®] Xeon[®] processor E5-2600 V2 product family are supported in this Intel[®] Server system. Previous generation Intel[®] Xeon[®] processors are not supported.
- For best system performance, follow memory population guidelines as specified in the Intel[®] Server Board S2600GZ/GL Technical Product Specification.
- For best system performance, follow all thermal configuration guidelines as specified in this document.
- DIMM slots E1 thru H3 are only supported when CPU-2 is installed.
- The CPU-2 heat sink must be installed at all times, with or without a processor installed.
- PCI Riser Slot-2 is only functional when two processors are installed.
- The Mini-SAS connector labeled "SCU_01(4-7)" on the server board is only functional when an
 appropriate Intel[®] RAID C600 Upgrade Key is installed.
- Many embedded SAS and RAID options are available by installing any of several available Intel[®] RAID C600 Upgrade Keys.
- The embedded platform management system may not operate as expected if the platform is not updated with accurate system configuration data. The FRUSDR utility must be run with the system fully configured and each time the system configuration changes for accurate system monitoring and event reporting.
- Make sure the latest system software is loaded on the server. This includes System BIOS, BMC Firmware, ME Firmware and FRU & SDR data. The latest system software can be downloaded from <u>http://downloadcenter.intel.com</u>.

Appendix B: POST Code Diagnostic LED Decoder

As an aid to assist in trouble shooting a system hang that occurs during a system's Power-On Self Test (POST) process, the server board includes a bank of eight POST Code Diagnostic LEDs on the back edge of the server board.

During the system boot process, Memory Reference Code (MRC) and System BIOS execute a number of memory initialization and platform configuration processes, each of which is assigned a specific hex POST code number. As each routine is started, the given POST code number is displayed to the POST Code Diagnostic LEDs on the back edge of the server board.

During a POST system hang, the displayed post code can be used to identify the last POST routine that was run prior to the error occurring, helping to isolate the possible cause of the hang condition.

Each POST code is represented by eight LEDs; four Green and four Amber. The POST codes are divided into two nibbles, an upper nibble and a lower nibble. The upper nibble bits are represented by Amber Diagnostic LEDs #4, #5, #6, #7. The lower nibble bits are represented by Green Diagnostics LEDs #0, #1, #2 and #3. If the bit is set in the upper and lower nibbles, the corresponding LED is lit. If the bit is clear, the corresponding LED is off.

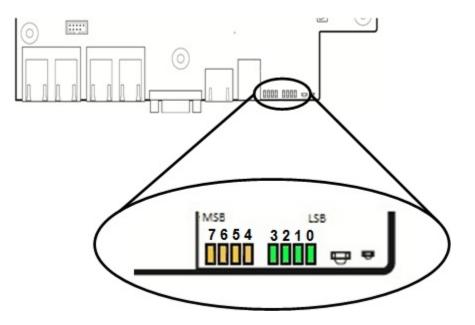


Figure 37. POST Diagnostic LED Location

In the following example, the BIOS sends a value of ACh to the diagnostic LED decoder. The LEDs are decoded as follows:

LEDs	Upper Nibble AMBER LEDs			Lower Nibble GREEN LEDs				
	MSB							LSB
	LED #7	LED #6	LED #5	LED #4	LED #3	LED #2	LED #1	LED #0
	8h	4h	2h	1h	8h	4h	2h	1h
Status	ON	OFF	ON	OFF	ON	ON	OFF	OFF
Results	1	0	1	0	1	1	0	0
	٨b			Ch				

Table 32. POST Progress Code LED Example

• Upper nibble bits = 1010b = Ah; Lower nibble bits = 1100b = Ch; the two are concatenated as ACh.

	Diagnostic LED Decoder 1 = LED On, 0 = LED Off								
				= LED					
Checkpoint	Uppe	r Nibl	ble		Low	er Nit	oble		
-	MSB							LSB	
	8h	4h	2h	1h	8h	4h	2h	1h	
LED #	#7	#6	#5	#4	#3	#2	#1	#0	Description
SEC Phase									
01h	0	0	0	0	0	0	0	1	First POST code after CPU reset
02h	0	0	0	0	0	0	1	0	Microcode load begin
03h	0	0	0	0	0	0	1	1	CRAM initialization begin
04h	0	0	0	0	0	1	0	0	Pei Cache When Disabled
05h	0	0	0	0	0	1	0	1	SEC Core At Power On Begin.
06h	0	0	0	0	0	1	1	0	Early CPU initialization during Sec Phase.
07h	0	0	0	0	0	1	1	1	Early SB initialization during Sec Phase.
08h	0	0	0	0	1	0	0	0	Early NB initialization during Sec Phase.
09h	0	0	0	0	1	0	0	1	End Of Sec Phase.
0Eh	0	0	0	0	1	1	1	0	Microcode Not Found.
0Fh	0	0	0	0	1	1	1	1	Microcode Not Loaded.
PEI Phase	•		•		-		•		
10h	0	0	0	1	0	0	0	0	PEI Core
11h	0	0	0	1	0	0	0	1	CPU PEIM
15h	0	0	0	1	0	1	0	1	NB PEIM
19h	0	0	0	1	1	0	0	1	SB PEIM
	S Code	s – N	IRC F	roare	ess Co				executed - See Table 28
PEI Phase co				0					
31h	0	0	1	1	0	0	0	1	Memory Installed
32h	0	0	1	1	0	0	1	0	CPU PEIM (Cpu Init)
33h	0	0	1	1	0	0	1	1	CPU PEIM (Cache Init)
34h	0	0	1	1	0	1	0	0	CPU PEIM (BSP Select)
35h	0	0	1	1	0	1	0	1	CPU PEIM (AP Init)
36h	0	0	1	1	0	1	1	0	CPU PEIM (CPU SMM Init)
4Fh	0	1	0	0	1	1	1	1	Dxe IPL started
DXE Phase	U								
60h	0	1	1	0	0	0	0	0	DXE Core started
61h	0	1	1	0	0	0	0	1	DXE NVRAM Init
62h	0	1	1	0	0	0	1	0	SB RUN Init
63h	0	1	1	0	0	0	1	1	Dxe CPU Init
68h	0	1	1	0	1	0	0	0	DXE PCI Host Bridge Init
69h	0	1	1	0	1	0	0	1	DXE NB Init
6Ah	0	1	1	0	1	0	1	0	DXE NB SMM Init
70h	0	1	1	1	0	0	0	0	DXE SB Init
70h	0	1	1	1	0	0	0	1	DXE SB SMM Init
7111 72h	0	1	1	1	0	0	1	0	DXE SB SMM mit
720 78h	0	1	1	1	1	0	0	0	DXE ACPI Init
79h	0	1	1	1	1	0	0	1	DXE CSM Init
90h	1	0	0	1	1 0	0	0	0	DXE BDS Started
90n 91h	1	0	0	1	0	0	0	1	DXE BDS statted
911 92h	1	0	0	1	0	0	1	0	DXE BDS connect drivers
920 93h	1	0	0	1	0	0	1	1	DXE PCI Bus HPC Init
	1	-	-	1	-	1	<u> </u>		
94h	1	0	0	1	0	1	0	0	DXE PCI Bus enumeration
95h	1	0	0	1	0	1	0	0	DXE PCI Bus resource requested
96h	1	0	0	1	0	1	1	0	DXE PCI Bus assign resource
97h	1	0	0	1	0	1	1	0	DXE CON_OUT connect
98h	1	0	0	1	1	0	0	0	DXE CON_IN connect
99h	1	0	0	1	1	0	0	1	DXE SIO Init
9Ah	1	0	0	1	1	0	1	0	DXE USB start
9Bh	1	0	0	1	1	0	1	1	DXE USB reset
9Ch	1	0	0	1	1	1	0	0	DXE USB detect
9Dh	1	0	0	1	1	1	0	1	DXE USB enable
A1h	1	0	1	0	0	0	0	1	DXE IDE begin
A2h	1	0	1	0	0	0	1	0	DXE IDE reset

Intel[®] Server System R1000GZ/GL Product Family TPS

	Diagnostic LED Decoder									
	1 = L									
Checkpoint	Uppe	r Nibl	ole		Low	er Nit	ble			
	MSB							LSB		
	8h	4h	2h	1h	8h	4h	2h	1h		
LED #	#7	#6	#5	#4	#3	#2	#1	#0	Description	
A3h	1	0	1	0	0	0	1	1	DXE IDE detect	
A4h	1	0	1	0	0	1	0	0	DXE IDE enable	
A5h	1	0	1	0	0	1	0	1	DXE SCSI begin	
A6h	1	0	1	0	0	1	1	0	DXE SCSI reset	
A7h	1	0	1	0	0	1	1	1	DXE SCSI detect	
A8h	1	0	1	0	1	0	0	0	DXE SCSI enable	
A9h	1	0	1	0	1	0	0	1	DXE verifying SETUP password	
ABh	1	0	1	0	1	0	1	1	DXE SETUP start	
ACh	1	0	1	0	1	1	0	0	DXE SETUP input wait	
ADh	1	0	1	0	1	1	0	1	DXE Ready to Boot	
AEh	1	0	1	0	1	1	1	0	DXE Legacy Boot	
AFh	1	0	1	0	1	1	1	1	DXE Exit Boot Services	
B0h	1	0	1	1	0	0	0	0	RT Set Virtual Address Map Begin	
B1h	1	0	1	1	0	0	0	1	RT Set Virtual Address Map End	
B2h	1	0	1	1	0	0	1	0		
B3h	1	0	1	1	0	0	1	1	DXE Reset system	
B4h	1	0	1	1	0	1	0	0	DXE USB Hot plug	
B5h	1	0	1	1	0	1	0	1	DXE PCI BUS Hot plug	
B6h	1	0	1	1	0	1	1	0	DXE NVRAM cleanup	
B7h	1	0	1	1	0	1	1	1	DXE Configuration Reset	
00h	0	0	0	0	0	0	0	0	INT19	
S3 Resume										
E0h	1	1	1	0	0	0	0	0	S3 Resume PEIM (S3 started)	
E1h	1	1	1	0	0	0	0	1	S3 Resume PEIM (S3 boot script)	
E2h	1	1	1	0	0	0	1	0	S3 Resume PEIM (S3 Video Repost)	
E3h	1	1	1	0	0	0	1	1	S3 Resume PEIM (S3 OS wake)	
BIOS Recove	ery									
F0h	1	1	1	1	0	0	0	0	PEIM which detected forced Recovery condition	
F1h	1	1	1	1	0	0	0	1	PEIM which detected User Recovery condition	
F2h	1	1	1	1	0	0	1	0	Recovery PEIM (Recovery started)	
F3h	1	1	1	1	0	0	1	1	Recovery PEIM (Capsule found)	
F4h	1	1	1	1	0	1	0	0	Recovery PEIM (Capsule loaded)	

POST Memory Initialization MRC Diagnostic Codes

There are two types of POST Diagnostic Codes displayed by the MRC during memory initialization; Progress Codes and Fatal Error Codes.

The MRC Progress Codes are displays to the Diagnostic LEDs that show the execution point in the MRC operational path at each step.

	Diagno 1 = LE											
		Nibb	ble		Low	er Ni	ibble		Description			
	MSB							LSB	Description			
	8h	4h	2h	1h	8h	4h	2h	1h				
LED	#7	#6	#5	#4	#3	#2	#1	#0				
MRC Progress Coo	les											
B0h	1	0	1	1	0	0	0	0	Detect DIMM population			
B1h	1	0	1	1	0	0	0	1	Set DDR3 frequency			
B2h	1	0	1	1	0	0	1	0	Gather remaining SPD data			
B3h	1	0	1	1	0	0	1	1	Program registers on the memory controller level			
B4h	1	0	1	1	0	1	0	0	Evaluate RAS modes and save rank information			
B5h	1	0	1	1	0	1	0	1	Program registers on the channel level			
B6h	1	0	1	1	0	1	1	0	Perform the JEDEC defined initialization sequence			
B7h	1	0	1	1	0	1	1	1	Train DDR3 ranks			
B8h	1	0	1	1	1	0	0	0	Initialize CLTT/OLTT			
B9h	1	0	1	1	1	0	0	1	Hardware memory test and init			
BAh	1	0	1	1	1	0	1	0				
BBh	1	0	1	1	1	0	1	1	Program memory map and interleaving			
BCh	1	0	1	1	1	1	0	0	Program RAS configuration			
BFh	1	0	1	1	1	1	1	1	MRC is done			

Table 34. MRC Progress Codes

Memory Initialization at the beginning of POST includes multiple functions, including: discovery, channel training, validation that the DIMM population is acceptable and functional, initialization of the IMC and other hardware settings, and initialization of applicable RAS configurations.

When a major memory initialization error occurs and prevents the system from booting with data integrity, a beep code is generated, the MRC will display a fatal error code on the diagnostic LEDs, and a system halt command is executed. Fatal MRC error halts do NOT change the state of the System Status LED, and they do NOT get logged as SEL events. The following table lists all MRC fatal errors that are displayed to the Diagnostic LEDs.

Table 35. MRC Fatal Error Codes

Diagnostic LED Decoder					der				
	1 = L	ED O	n, 0 =	LED	Off				
Checkpoint	Uppe	er Nibl	ble		Lowe	er Nibl	ble		
	MSB							LSB	Description
	8h	4h	2h	1h	8h	4h	2h	1h	
LED	#7	#6	#5	#4	#3	#2	#1	#0	
MRC Fatal E	rror C	odes							I
E8h	1	1	1	0	1	0	0	0	No usable memory error 01h = No memory was detected via SPD read, or invalid config that causes no operable memory. 02h = Memory DIMMs on all channels of all sockets are disabled due to hardware memtest error. 3h = No memory installed. All channels are disabled.
E9h	1	1	1	0	1	0	0	1	Memory is locked by Intel Trusted Execuiton Technology and is inaccessible
EAh	1	1	1	0	1	0	1	0	DDR3 channel training error 01h = Error on read DQ/DQS (Data/Data Strobe) init 02h = Error on Receive Enable 3h = Error on Write Leveling 04h = Error on write DQ/DQS (Data/Data Strobe
EBh	1	1	1	0	1	0	1	1	Memory test failure 01h = Software memtest failure. 02h = Hardware memtest failed. 03h = Hardware Memtest failure in Lockstep Channel mode requiring a channel to be disabled. This is a fatal error which requires a reset and calling MRC with a different RAS mode to retry.
EDh	1	1	1	0	1	1	0	1	DIMM configuration population error 01h = Different DIMM types (UDIMM, RDIMM, LRDIMM) are detected installed in the system. 02h = Violation of DIMM population rules. 03h = The 3rd DIMM slot can not be populated when QR DIMMs are installed. 04h = UDIMMs are not supported in the 3rd DIMM slot. 05h = Unsupported DIMM Voltage.
EFh	1	1	1	0	1	1	1	1	Indicates a CLTT table structure error

Appendix C: POST Code Errors

- Most error conditions encountered during POST are reported using POST Error Codes. These codes
 represent specific failures, warnings, or are informational. POST Error Codes may be displayed in the
 Error Manager display screen, and are always logged to the System Event Log (SEL). Logged events
 are available to System Management applications, including Remote and Out of Band (OOB)
 management.
- There are exception cases in early initialization where system resources are not adequately initialized for handling POST Error Code reporting. These cases are primarily Fatal Error conditions resulting from initialization of processors and memory, and they are handed by a Diagnostic LED display with a system halt.
- The following table lists the supported POST Error Codes. Each error code is assigned an error type which determines the action the BIOS will take when the error is encountered. Error types include Minor, Major, and Fatal. The BIOS action for each is defined as follows:
- Minor: The error message is displayed on the screen or on the Error Manager screen, and an error is logged to the SEL. The system continues booting in a degraded state. The user may want to replace the erroneous unit. The POST Error Pause option setting in the BIOS setup does not have any effect on this error.
- Major: The error message is displayed on the Error Manager screen, and an error is logged to the SEL. The POST Error Pause option setting in the BIOS setup determines whether the system pauses to the Error Manager for this type of error so the user can take immediate corrective action or the system continues booting.

Note that for 0048 "Password check failed", the system halts, and then after the next reset/reboot will displays the error code on the Error Manager screen.

Fatal: The system halts during post at a blank screen with the text "Unrecoverable fatal error found.
 System will not boot until the error is resolved" and "Press <F2> to enter setup" The POST Error
 Pause option setting in the BIOS setup does not have any effect with this class of error.

When the operator presses the **F2** key on the keyboard, the error message is displayed on the Error Manager screen, and an error is logged to the SEL with the error code. The system cannot boot unless the error is resolved. The user needs to replace the faulty part and restart the system.

NOTE: The POST error codes in the following table are common to all current generation Intel server platforms. Features present on a given server board/system will determine which of the listed error codes are supported.

Error Code	Error Message	Response
0012	System RTC date/time not set	Major
0048	Password check failed	Major
0140	PCI component encountered a PERR error	Major
0141	PCI resource conflict	Major
0146	PCI out of resources error	Major
0191	Processor core/thread count mismatch detected	Fatal
0192	Processor cache size mismatch detected	Fatal
0194	Processor family mismatch detected	Fatal
0195	Processor Intel(R) QPI link frequencies unable to synchronize	Fatal
0196	Processor model mismatch detected	Fatal
0197	Processor frequencies unable to synchronize	Fatal
5220	BIOS Settings reset to default settings	Major
5221	Passwords cleared by jumper	Major
5224	Password clear jumper is Set	Major
8130	Processor 01 disabled	Major

Table 36. POST Error Messages and Handling

Intel[®] Server System R1000GZ/GL Product Family TPS

Error Code	Error Message	Response
8131	Processor 02 disabled	Major
8132	Processor 03 disabled	Major
8133	Processor 04 disabled	Major
8160	Processor 01 unable to apply microcode update	Major
8161	Processor 02 unable to apply microcode update	Major
8162	Processor 03 unable to apply microcode update	Major
8163	Processor 04 unable to apply microcode update	Major
8170	Processor 01 failed Self Test (BIST)	Major
8171	Processor 02 failed Self Test (BIST)	Major
8172	Processor 03 failed Self Test (BIST)	Major
8173	Processor 04 failed Self Test (BIST)	Major
8180	Processor 01 microcode update not found	Minor
8181	Processor 02 microcode update not found	Minor
8182	Processor 03 microcode update not found	Minor
8183	Processor 04 microcode update not found	Minor
8190	Watchdog timer failed on last boot	Major
8198	OS boot watchdog timer failure	Major
8300	Baseboard management controller failed self-test	Major
8305	Hot Swap Controller failure	Major
83A0	Management Engine (ME) failed Selftest	Major
83A1	Management Engine (ME) Failed to respond.	Major
84F2	Baseboard management controller failed to respond	Major
84F3	Baseboard management controller in update mode	Major
84F4	Sensor data record empty	Major
84FF	System event log full	Minor
8500	Memory component could not be configured in the selected RAS mode	Major
8501	DIMM Population Error	Major
8520	DIMM_A1 failed test/initialization	Major
8521	DIMM_A2 failed test/initialization	Major
8522	DIMM_A3 failed test/initialization	Major
8523	DIMM_B1 failed test/initialization	Major
8524	DIMM_B2 failed test/initialization	Major
8525	DIMM_B3 failed test/initialization	Major
8526	DIMM_C1 failed test/initialization	Major
8527	DIMM_C2 failed test/initialization	Major
8528	DIMM_C3 failed test/initialization	Major
8529	DIMM_D1 failed test/initialization	Major
852A	DIMM_D2 failed test/initialization	Major
852B	DIMM_D3 failed test/initialization	Major
852C	DIMM_E1 failed test/initialization	Major
852D	DIMM_E2 failed test/initialization	Major
852E	DIMM_E3 failed test/initialization	Major
852F	DIMM_F1 failed test/initialization	Major
8530	DIMM_F2 failed test/initialization	Major
8531	DIMM_F3 failed test/initialization	Major Major
8532 8533	DIMM_G1 failed test/initialization DIMM_G2 failed test/initialization	Major Major
8533	—	Major Major
8534 8535	DIMM_G3 failed test/initialization DIMM_H1 failed test/initialization	Major Major
8535	DIMM_H1 failed test/initialization	Major Major
8537	DIMM_H3 failed test/initialization	Major
8538	DIMM_11 failed test/initialization	Major
8539	DIMM_12 failed test/initialization	Major
853A	DIMM_13 failed test/initialization	Major
853B	DIMM_I3 failed test/initialization	Major
853C	DIMM_J2 failed test/initialization	Major
853D	DIMM_J3 failed test/initialization	Major
853E	DIMM_S0 failed test/initialization	Major
853F	DIMM_K2 failed test/initialization	Major
(Go to		
85C0)		
8540	DIMM_A1 disabled	Major

Error Code	Error Message	Response
8541	DIMM_A2 disabled	Major
8542	DIMM_A3 disabled	Major
8543	DIMM_B1 disabled	Major
8544	DIMM B2 disabled	Major
8545	DIMM_B3 disabled	Major
8546	DIMM_C1 disabled	Major
8547	 DIMM_C2 disabled	Major
8548	DIMM_C3 disabled	Major
8549	DIMM_D1 disabled	Major
854A	DIMM_D2 disabled	Major
854B	DIMM_D3 disabled	Major
854C	DIMM_E1 disabled	Major
854D	DIMM_E2 disabled	Major
854E	DIMM_E3 disabled	Major
854F	DIMM_F1 disabled	Major
8550	DIMM_F2 disabled	Major
8551	DIMM_F3 disabled	Major
8552	DIMM_G1 disabled	Major
8553	DIMM_G2 disabled	Major
8554	DIMM_G3 disabled	Major
8555	DIMM_H1 disabled	Major
8556	DIMM_H2 disabled	Major
8557	DIMM_H3 disabled	Major
8558	DIMM_I1 disabled	Major
8559	DIMM_I2 disabled	Major
855A	DIMM_I3 disabled	Major
855B	DIMM_J1 disabled	Major
855C	DIMM_J2 disabled	Major
855D	DIMM_J3 disabled	Major
855E	DIMM_K1 disabled	Major
855F	DIMM_K2 disabled	Major
(Go to 85D0)		
8560	DIMM_A1 encountered a Serial Presence Detection (SPD) failure	Major
8561	DIMM_A2 encountered a Serial Presence Detection (SPD) failure	Major
8562	DIMM_A3 encountered a Serial Presence Detection (SPD) failure	Major
8563	DIMM_B1 encountered a Serial Presence Detection (SPD) failure	Major
8564	DIMM_B2 encountered a Serial Presence Detection (SPD) failure	Major
8565	DIMM_B3 encountered a Serial Presence Detection (SPD) failure	Major
8566	DIMM_C1 encountered a Serial Presence Detection (SPD) failure	Major
8567	DIMM_C2 encountered a Serial Presence Detection (SPD) failure	Major
8568	DIMM_C3 encountered a Serial Presence Detection (SPD) failure	Major
8569	DIMM_D1 encountered a Serial Presence Detection (SPD) failure	Major
856A	DIMM_D2 encountered a Serial Presence Detection (SPD) failure	Major
856B	DIMM_D3 encountered a Serial Presence Detection (SPD) failure	Major
856C	DIMM_E1 encountered a Serial Presence Detection (SPD) failure	Major
856D	DIMM_E2 encountered a Serial Presence Detection (SPD) failure	Major
856E	DIMM_E3 encountered a Serial Presence Detection (SPD) failure	Major
856F	DIMM_F1 encountered a Serial Presence Detection (SPD) failure	Major
8570	DIMM_F2 encountered a Serial Presence Detection (SPD) failure	Major
8571	DIMM_F3 encountered a Serial Presence Detection (SPD) failure	Major
8572	DIMM_G1 encountered a Serial Presence Detection (SPD) failure	Major
8573	DIMM_G2 encountered a Serial Presence Detection (SPD) failure	Major
8574	DIMM_G3 encountered a Serial Presence Detection (SPD) failure	Major
8575	DIMM_H1 encountered a Serial Presence Detection (SPD) failure	Major
8576	DIMM_H2 encountered a Serial Presence Detection (SPD) failure	Major
8577	DIMM_H3 encountered a Serial Presence Detection (SPD) failure	Major
8578	DIMM_I1 encountered a Serial Presence Detection (SPD) failure	Major
8579	DIMM_I2 encountered a Serial Presence Detection (SPD) failure	Major
857A	DIMM_I3 encountered a Serial Presence Detection (SPD) failure	Major
857B	DIMM_J1 encountered a Serial Presence Detection (SPD) failure	Major
857C	DIMM_J2 encountered a Serial Presence Detection (SPD) failure	Major

Intel [®] Server System R1000GZ/GL Product Family TPS

Error Code	Error Message	Response
857D	DIMM_J3 encountered a Serial Presence Detection (SPD) failure	Major
857E	DIMM_K1 encountered a Serial Presence Detection (SPD) failure	Major
857F	DIMM_K2 encountered a Serial Presence Detection (SPD) failure	Major
(Go to		
85E0)		
85C0	DIMM_K3 failed test/initialization	Major
85C1	DIMM_L1 failed test/initialization	Major
85C2	DIMM L2 failed test/initialization	Major
85C3	DIMM L3 failed test/initialization	Major
85C4	DIMM_M1 failed test/initialization	Major
85C5	DIMM_M2 failed test/initialization	Major
85C6	DIMM M3 failed test/initialization	Major
85C7	DIMM_N1 failed test/initialization	Major
85C8	DIMM_N2 failed test/initialization	Major
85C9	DIMM N3 failed test/initialization	Major
85CA	DIMM_O1 failed test/initialization	Major
85CB	DIMM_02 failed test/initialization	Major
85CC	DIMM_03 failed test/initialization	Major
85CD	DIMM_P1 failed test/initialization	Major
85CE	DIMM_P2 failed test/initialization	Major
85CF	DIMM_12 failed test/initialization	Major
85D0	DIMM_13 disabled	Major
85D0	DIMM_RS disabled DIMM_L1 disabled	Major
85D2	DIMM_L2 disabled	Major
85D3	DIMM_L2 disabled	Major
85D3	DIMM_LS disabled DIMM_M1 disabled	Major
85D5	DIMM_M1 disabled	Major
85D6	DIMM_M2 disabled	Major
85D7	DIMM_N3 disabled	Major
85D8	DIMM_N1 disabled	Major
85D9	DIMM_N2 disabled	Major
85D9	DIMM_NS disabled DIMM_O1 disabled	
85DB	DIMM_OT disabled DIMM_O2 disabled	Major
	DIMM_02 disabled	Major
85DC		Major
85DD	DIMM_P1 disabled	Major
85DE	DIMM_P2 disabled DIMM_P3 disabled	Major
85DF		Major
85E0	DIMM_K3 encountered a Serial Presence Detection (SPD) failure	Major
85E1	DIMM_L1 encountered a Serial Presence Detection (SPD) failure	Major
85E2	DIMM_L2 encountered a Serial Presence Detection (SPD) failure	Major
85E3	DIMM_L3 encountered a Serial Presence Detection (SPD) failure	Major
85E4	DIMM_M1 encountered a Serial Presence Detection (SPD) failure	Major
85E5	DIMM_M2 encountered a Serial Presence Detection (SPD) failure	Major
85E6	DIMM_M3 encountered a Serial Presence Detection (SPD) failure	Major
85E7	DIMM_N1 encountered a Serial Presence Detection (SPD) failure	Major
85E8	DIMM_N2 encountered a Serial Presence Detection (SPD) failure	Major
85E9	DIMM_N3 encountered a Serial Presence Detection (SPD) failure	Major
85EA	DIMM_O1 encountered a Serial Presence Detection (SPD) failure	Major
85EB	DIMM_O2 encountered a Serial Presence Detection (SPD) failure	Major
85EC	DIMM_O3 encountered a Serial Presence Detection (SPD) failure	Major
85ED	DIMM_P1 encountered a Serial Presence Detection (SPD) failure	Major
85EE	DIMM_P2 encountered a Serial Presence Detection (SPD) failure	Major
85EF	DIMM_P3 encountered a Serial Presence Detection (SPD) failure	Major
8604	POST Reclaim of non-critical NVRAM variables	Minor
8605	BIOS Settings are corrupted	Major
8606	NVRAM variable space was corrupted and has been reinitialized	Major
92A3	Serial port component was not detected	Major
92A9	Serial port component encountered a resource conflict error	Major
A000	TPM device not detected.	Minor
A001	TPM device missing or not responding.	Minor
A002	TPM device failure.	Minor
A003	TPM device failed self test.	Minor

Error Code	Error Message	Response			
A100	BIOS ACM Error Major				
A421	PCI component encountered a SERR error Fatal				
A5A0	PCI Express component encountered a PERR error Minor				
A5A1	PCI Express component encountered an SERR error Fatal				
A6A0	DXE Boot Service driver: Not enough memory available to shadow a Legacy Option ROM	Minor			

POST Error Beep Codes

The following table lists the POST error beep codes. Prior to system video initialization, the BIOS uses these beep codes to inform users on error conditions. The beep code is followed by a user-visible code on the POST Progress LEDs

Beeps	Error Message	POST Progress Code	Description
1	USB device action	NA	Short beep sounded whenever a USB device is discovered in POST, or inserted or removed during runtime
1 long	Intel [®] TXT security violation	0xAE, 0xAF	System halted because Intel [®] Trusted Execution Technology detected a potential violation of system security.
3	Memory error	See Tables 28 and 29	System halted because a fatal error related to the memory was detected.
2	BIOS Recovery started	NA	Recovery boot has been initiated
4	BIOS Recovery failure	NA	BIOS recovery has failed. This typically happens so quickly after recovery us initiated that it sounds like a 2-4 beep code.

Table 37. POST Error Beep Codes

The Integrated BMC may generate beep codes upon detection of failure conditions. Beep codes are sounded each time the problem is discovered, such as on each power-up attempt, but are not sounded continuously. Codes that are common across all Intel server boards and systems that use same generation chipset are listed in the following table. Each digit in the code is represented by a sequence of beeps whose count is equal to the digit.

Table 38. Integrated BMC Beep Codes

Code	Reason for Beep	Associated Sensors
1-5-2-1	No CPUs installed or first CPU socket is empty.	CPU1 socket is empty, or sockets are populated incorrectly CPU1 must be populated before CPU2.
1-5-2-4	MSID Mismatch	MSID mismatch occurs if a processor is installed into a system board that has incompatible power capabilities.
1-5-4-2	Power fault	DC power unexpectedly lost (power good dropout) – Power unit sensors report power unit failure offset
1-5-4-4	Power control fault (power good assertion timeout).	Power good assertion timeout – Power unit sensors report soft power control failure offset
1-5-1-2	VR Watchdog Timer sensor assertion	VR controller DC power on sequence was not completed in time.
1-5-1-4	Power Supply Status	The system does not power on or unexpectedly powers off and a Power Supply Unit (PSU) is present that is an incompatible model with one or more other PSUs in the system.

Appendix D: System Configuration Table for Thermal Compatibility

The following list reflects specified notes identified in the "**Support Notes**" column in the table. Each note reflects support criteria associated with a specific system configuration. Notes not specified in the table may reflect support criteria for a R2000GZ/GL Base System SKU described in the appropriate 2U Technical Product Specification.

Notes:

- 1) The 25°C configuration alone is limited to elevations of 900m or less
- 2) Use of the designated PCI slot is limited to add-in cards that have air flow requirements of 100 LFM or less. See add-in card specs for air flow requirements.
- 3) Base system SKUs R2312GZ/GL#### and R2224GZ/GL####, configured with the following IO modules: AXX10GBTWLIOM, AXX2FDRIBIOM, and AXX1FDRIBIOM, can only be supported when DRx8 DIMMs are used.
- 4) Systems configured with E5-2643(130W-4C), E5-2690(135W-8C), E5-2637 v2(130W-4C) and E5-2643 v2(130W-6C) processors may experience CPU and or memory throttling, impacting system performance.
- 5) Processor throttling may occur with a system fan failure which may impact system performance.
- 6) Specifically for A3/A4 individual Power Supply selection power margin is required to meet thermal specifications:
 - a. For dual power supply configuration, the power budget must fit within single power supply rated load
 - b. For single power supply configuration, the power budget must be sized with 30% margin to single power supply rated load.
- 7) Intel[®] Xeon Phi[™] or non-Intel GPGPU cards may have performance impact during ambient excursions
- 8) When identifying memory in the table, only Rank and Width are required. Capacity is not required.
- 9) LV refers to low voltage DIMMs (1.35V)
- 10) Installation of the AXXRMFBU2 in a 2U system will also require installation of Intel mounting bracket A2UBKTMFBUSSD. The Cache offload Module can only be installed with 95W processor and DRx8 or equivalent memory for HTA A3/A4 with R2312GZ/GL and R2224GZ/GL System.
- 11) Confirm the case temperature specification for the SSD to make appropriate selection
- 12) Fan fail of dual-rotor fans refers to one rotor fail. "Fan Fail Support" indicates if fan fail can be supported with specified configuration in each column.
- 13) System must have contents from the Intel accessory kit AGZCOPRODUCT installed to support Intel® Xeon Phi[™] or non-Intel GPGPU add-in cards with passive cooling solutions. Only systems configured with S2600GZ (24-DIMM) server board will be supported.
- 14) Fan redundancy is not supported in systems configured with 130W-4 Core and 135W-8 Core processors
- 15) Due to thermal specification availability restrictions, Intel has NOT verified the thermal compatibility of non-Intel GPGPU cards that utilize a passive cooling solution in its server systems. System integrators should verify non-Intel add-in card air flow requirements from available vendor specifications before integrating them into the system.

		Base	System	SKUs:	Base	System	SKUs:	
		R1304GZ/GLxxxx		R1208GZ/GLxxxx			Support NOTES	
	Classifications	A2	A3	A4	A2	A3	A4	Note 1
ASHRAE	Max Ambient	35°C	40°C	45°C	35°C	40°C	45°C	Note 1
Cooling	Redundant Fan Configuration	•	•	•	•	•	•	
Cooling	Redundancy Available	•			•			
Power Supply	Power Supplies		See Too			See Too	bl	Note 6
	EP, 60w, 6C (E5-2630L)	•	•		•	•		Note 5
	EP, 70w, 8C (E5-2650L)	•	•	•	•	•	•	Note 5
	EP, 95w, 6C (E5-2620 , E5-2630, E5-2640)	•	•	•	•	•	•	Note 5
	EP, 95w, 8C (E5-2650, E5-2660)	•	•	•	•	•	•	Note 5
Intel [®] Xeon [®]	EP, 115w, 8C (E5-2665, E5-2670)	•	•		•	•		Note 5
processor E5-2600	EP, 130w, 6C (E5-2667)	•	•		•	•		Note 5
product family	EP, 130w, 8C (E5-2680)	•	•		•	•		Note 5
	EP, 135w, 8C (E5-2690)	•			•			Notes 4,5
	EP, 80w, 2C (E5-2637)	•	•	•	•	•	٠	Note 5
	EP, 80w, 4C (E5-2603, E5-2609)	•	•	•	•	•	•	Note 5
	EP, 130w, 4C (E5-2643)	•			•			Notes 4,5
	EP, 60W, 6C, (E5-2630L v2)	•	•		•	•		Note 5
	EP, 70W, 10C, (E5-2650L v2)	•	•	•	•	•	•	Note 5
	EP, 80W, 4C, (E5-2603 v2, E5-2609 v2)	•	•	•	•	•	•	Note 5
	EP, 80W, 6C, (E5-2620 v2, E5-2630 v2)	•	•	•	•	•	•	Note 5
	EP, 95w, 8C, (E5-2640 v2, E5-2650 v2)	•	•	•	•	•	•	Note 5
Intel [®] Xeon [®]	EP, 95W. 10C, (E5-2660 v2)	•	•	•	•	•	•	Note 5
processor E5-2600	EP, 115W, 10C, (E5-2670 v2, E5-2680 v2)	•	•		•	•		Note 5
v2 product family	EP, 115W, 12C, (E5-2695 v2)	•	•		•	•		Note 5
	EP, 130W, 10C, (E5-2690 v2)	•	•		•	•		Note 5
	EP, 130W, 4C, (E5-2637 v2)	•			•			Notes 4,5
	EP, 130W, 6C, (E5-2643 v2)	•			•			Notes 4,5
	EP, 130W, 8C, (E5-2667 v2)	•	•		•	•		Note 5
	EP, 130W, 12C, (E5-2697 v2)	•	•		•	•		Note 5
	Dual Rank x8	•	•	•	•	•	•	
	Dual Rank x4	•	•	•	•	•	•	
Memory Type	Quad Rank x8	•	•	•	•	•	•	
	Quad Rank x4	•	•		•	•		
	Load Reduced DIMM	•	•		•	•		

		Base	System	SKUs:	Base	e System	SKUs:	
		R1304GZ/GLxxxx		R1208GZ/GLxxxx			Support NOTES	
ASHRAE	Classifications	A2	A3	A4	A2	A3	A4	Note 1
	Max Ambient	35°C	40°C	45°C	35°C	40°C	45°C	Note 1
	Riser #1 - Bottom Slot (1U riser and 2U riser)	•	•	•	•	•	•	
	Riser #1 - Middle Slot (2U riser)							NA
Add in Carda	Riser #1 - Top Slot (2U riser)							NA
Add-in Cards	Riser #2 - Bottom Slot (1U riser and 2U riser)	•	•	٠	•	•	•	
	Riser #2 - Middle Slot (2U riser)							NA
	Riser #2 - Top Slot (2U riser)							NA
	Intel® Integrated RAID Modules (Mezzanine cards)	•	•	•	•	•	٠	
	AXX10GBTWLIOM - Dual 10GBASE-T IO Module	•	٠	•	•	•	٠	Note 3
	AXX10GBNIAIOM - Dual SFP+ port 10GbE IO Module	•	•	•	•	•	•	
I/O Modules	AXX1FDRIBIOM - Single Port FDR Infiniband IO Module	•	•	٠	•	•	•	
	AXX2FDRIBIOM - Dual Port FDR Infiniband IO Module	•	•	•	•	•	•	Note 3
	AXX4P1GBPWLIOM - Quad Port 1GbE IO Module	•	•	•	•	•	•	
	Intel® Xeon Phi [™] or GPGPU wActive Cooling up to 300W							Not Supported
	Intel® Xeon Phi™ or GPGPU w/Active Cooling up to 225W							Not Supported
Intel® Xeon Phi™ or	Intel® Xeon Phi™ w/Passive Cooling up to 225W							Not Supported
Non-Intel GPGPU	Intel® Xeon Phi™ w/Passive Cooling up to 245W							Not Supported
	Intel® Xeon Phi™ w/Passive Cooling up to 300W							Not Supported
	Non-Intel GPGPU w/Passive Cooling up to 75W							Not Supported
	Non-Intel GPGPU w/Passive Cooling > 75W							Not Supported
RAID Battery Backup	BBU (rated to 45C)	•			•			
	Supercap (rated to 55C)	•	•	٠	•	•	•	
	Cache Offload Module (rated to 55C)	•	•	•	•	•	•	Note 10
Internal SSD	Rated to 60C							NA
Internal SSD	Rated to 70C							NA

Intel[®] Server System R1000GZ/GL Product Family TPS

Glossary

Word/Acronym	Definition
ACA	Australian Communication Authority
ANSI	American National Standards Institute
BMC	Baseboard Management Controller
BIOS	Basic Input/Output System
CLST	Closed Loop System Throttling
CMOS	Complementary Metal-oxide-semiconductor
D2D	DC-to-DC
EMP	Emergency Management Port
ESRT2	Intel® Embedded Server RAID Technology 2
FP	Front Panel
FRB	Fault Resilient Boot
FRU	Field Replaceable Unit
l ² C	Inter-integrated Circuit bus
LCD	Liquid Crystal Display
LPC	Low-pin Count
LSB	Least Significant Bit
MSB	Most Significant Bit
MTBF	Mean Time Between Failure
MTTR	Mean Time to Repair
NIC	Network Interface Card
NMI	Non-maskable Interrupt
OTP	Over-temperature Protection
OVP	Over-voltage Protection
PCI	Peripheral Component Interconnect
PCB	Printed Circuit Board
PCIe*	Peripheral Component Interconnect Express*
PCI-X	Peripheral Component Interconnect Extended
PFC	Power Factor Correction
POST	Power-on Self Test
PSU	Power Supply Unit
RAM	Random Access Memory
RI	Ring Indicate
RSTe	Intel® Rapid Storage Technology
SCA	Single Connector Attachment
SDR	Sensor Data Record
SE	Single-Ended
SmaRT	Smart Ride Through Throttling
THD	Total Harmonic Distortion
UART	Universal Asynchronous Receiver Transmitter
USB	Universal Serial Bus
VCCI	Voluntary Control Council for Interference
VSB	Voltage Standby

Reference Documents

See the following documents for additional information:

- Intel[®] Server Board S2600GZ/GL Technical Product Specification
- Intel[®] Server Board S2600GZ/GL Product Family Spares/Parts List and Configuration Guide
- Intel[®] Server System R1000GZ/GL Service Guide
- Intel[®] Server System R1000GZ/GL Quick Installation Guide
- Intel[®] S2600GZGL Product Family Power Budget and Thermal Configuration Tool
- BIOS for Platforms Based on Intel[®] Xeon Processor E5-4600/2600/2400/1600 Product Families External Product Specification
- Platforms Based On Intel Xeon® Processor E5 4600/2600/2400/1600 Product Families BMC Core Firmware External Product Specification
- SmaRT & CLST Architecture on "Romley" Systems and Power Supplies Specification (Doc Reference # 461024)
- Intel® Remote Management Module 4 Technical Product Specification
- Intel® Remote Management Module 4 and Integrated BMC Web Console Users Guide
- Intel[®] Server Board S2600GZGL, Intel[®] Server System R1000GZGL, Intel[®] Server System R2000GZGL Monthly Specification Update
- Intel Integrated RAID Module RMS25PB040, RMS25PB080, RMS25CB040, and RMS25CB080 Hardware / Installation Users Guide
- Intel Integrated RAID Module RMT3PB080 and RMT3CB080 Hardware / Installation Users Guide
- Intel Integrated RAID Module RMS25KB040, RMS25KB080, RMS25JB040, and RMS25JB080 Hardware / Installation Users Guide
- Intel® Raid Maintenance Free Backup Unit AXXRMFBU2 User's Guide